


LIVING SOLUTIONS

Model:wf822

Item:w17J1622

Neon Telephone with 13-Number Memory

Operating Instructions

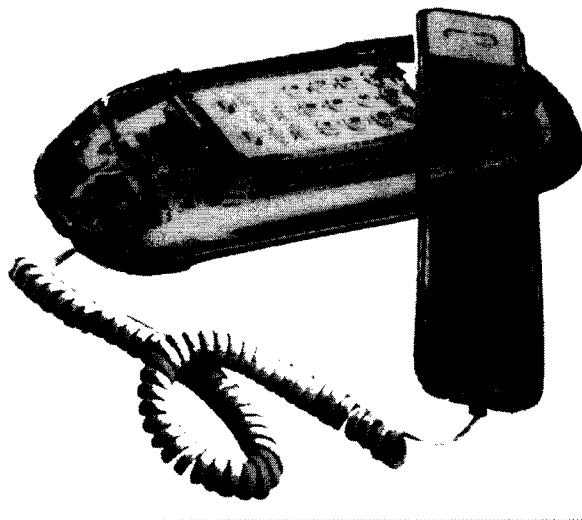

BEFORE USING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
Save this booklet for future reference.

-FOR HOUSEHOLD USE ONLY -

IMPORTANT SAFEGUARDS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

- 1 Read and follows all instructions and warnings before using this product.
- 2 Unplug this product from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a slightly dampened cloth only.
- 3 Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- 4 Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the phone.
- 5 Slots and openings in the cabinet and the back or bottom of the. Phone are for ventilation and should not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register.
6. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind on the product.
- 7 To reduce the risk of electric shock, do not take this telephone apart. When some service or repair work is required, take it to a qualified representative. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect re-assembly can cause electric shock when the appliance is used.
8. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A When the cord or plug is damaged or frayed. .
 - B If liquid has been spilled into the product. .
 - C If the product has been exposed to rain or water. .
 - D If the product does not operate normally by following the operating . instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance. .
9. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
10. Do not use the telephone to report a gas leak in the vicinity of the leak
11. Do not allow anything to rest on the telephone cord. Do not locate this product where the cord will be damaged by persons walking on it.
12. Never install telephone wiring during a lightning storm..
13. Never install telephone jacks in wet locations unless the jack is specially. Designed for wet locations.
14. Never touch uninsulated telephone wires or terminals, unless the telephone Line has been disconnected at the network interface.
15. Be careful when installing or modifying telephone lines.
16. Plug the adaptor to the socket-outlet that near the equipment and shell is easily accessible.

WARNING

- To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this appliance is used by, or near children, invalids, or disable persons.
3. Use this appliance only for its intended use as described in this manual. Do not use attachment not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug. If it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never operate the furnishing with the air openings block.
7. Never drop or insert any object into any opening.
8. Do not use outdoors.
9. To disconnect, turn all controls to the off position, then remove plug from outlet.
10. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Model No: WF-822//Item: W17J1622

Date code: yy-mm

Adaptor: AC120V60Hz/DC6V350mA 

Complies With 47 CFR Part 68 Requirement


FCC ID: R9YWEIFAI-822

Reg.NO.:US:WE1TE10BWF-822

CONFORMS TO UL STD.962



Parts Identification

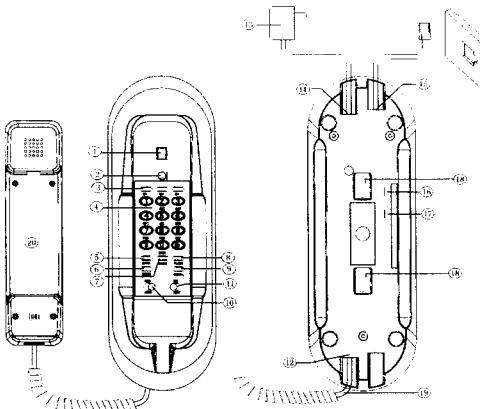

1. HOOK SWITCH
2. CONFIGURABLE MOUNTING TAB
3. ONE-TOUCH SPEED DIAL BUTTONS (M1, M2, M3)
4. NUMERIC KEYPAD
5. AUTO BUTTON
6. STORE BUTTON
7. PAUSE BUTTON
8. FLASH BUTTON
9. REDIAL BUTTON
10. RINGER ON/OFF SWITCH
11. NEON LIGHT ON/OFF SWITCH
12. HANDSET CORD JACK
13. AC/DC ADAPTER
14. DC JACK
15. LINE CORD JACK
16. VOLUME CONTROL
17. TONE/PULSE SELECTOR SWITCH
18. WALL MOUNTING BRACKET
19. COILED HANDSET CORD
20. HANDSET

To Set Up

1. Connect the coiled cord to the modular plug on the bottom of the telephone handset.
2. Connect the other end of the coiled cord to the modular plug of the telephone base.
3. Insert the plug on the opposite end of line cord into the modular telephone outlet jack. If your home is not equipped with a modular jack, contact your local telephone company.
4. Insert the AC Adapter plug into the DC Jack on the Base.
5. Plug the AC Adapter into a standard 120-volt AC electrical outlet.

Wall Mounting

To wall mount the Telephone:

1. Choose a mounting location for the telephone that is near an existing modular type telephone wall jack. Mount on wall using only a properly-installed modular telephone wall plate.
2. Pull hanger tab upward from handset cradle slot.
3. Rotate it 180° and insert it back into its slot so that the hook faces toward the slot in the handset.
4. Insert one end of modular line cord into wall jack.
5. Insert other end of modular line cord into phone device jack.
6. Mount telephone to wall by aligning holes on the back of telephone to the two posts on the modular wall plate.

To Use

Neon Light Operation

When the Neon Switch is in the "ON" position, the light will remain on while the handset is on the base, but will shut off when the handset is lifted. The keypad will also illuminate for easier dialing in dark locations. If the Neon Switch is in the "OFF" position, the neon light will remain off except for when receiving a call.

Receiving a Call

Incoming calls always flash the neon light. To turn ringer On or Off, slide the Ringer Switch to the "ON" or "OFF" position, as appropriate.

Placing a Call

1. Select the desired dialing mode with the Tone/Pulse switch.
2. Lift the handset from the handset cradle.
3. Press the Dialing Buttons and dial the number you want to call.
4. Hang up the handset after completion of the conversation.

Last Number Redial (For Both Tone and Pulse)

1. If the dialed telephone number is busy or you want to call the last number you dialed again, press the hook switch first to get a new dial tone.
2. Press the "REDIAL" button to dial the last number you called again.

Flash

Use the "FLASH" Button when using custom calling services, such as call waiting or call transfer, available through your local phone company.

Programming Numbers into Memory

1. Lift the handset and press the STORE Button.
2. Enter the phone number you wish to store (including area code, if applicable).
3. Press the STORE Button again and then a keypad number 0-9 (or M1 - M3 for one-touch speed dialing) to designate a memory location.

To use memory dialing:

ONE TOUCH	TWO TOUCH
Lift up the handset and press one of the one-touch speed dial buttons (M1 - M3).	Lift up the handset, press the AUTO Button and press a memory (0 to 9) number.

Pause

Press the PAUSE Button during dialing to insert a 2-4 second delay into the dialing sequence of a stored number.

TROUBLE SHOOTING

PROBLEMS	CHECK
Neon lamp does not lit	1:the neon lamp ON/OFF switch setting 2:Is plug AC/DC adaptor to120v output 3:Is plug AC/DC adaptor to DC jack
No dial tone	Is any plug disconnected from the modular phone plug? Is any jack improperly wired? Use another phone to test jack

In the case of trouble, do not attempt to repair the telephone yourself. It is the responsibility of users requiring service to report the need for service to Our Service Department. They will make the necessary for repair or replacement. If you should have any questions about the operation of your telephone, please call our Service Department at (800) 645-3867

Or e-mail: info@product-info.us

HELP LINE (free)
1-800-645-3867

MAINTENANCE

The telephone may be cleaned when necessary with a mild detergent. Use a damp(not wet) cloth. Never use abrasives or solvent. Before cleaning you must be to unplug this product from the outlet jack and the AC adapter.

Plug the adapter to the socket-outlet that near the phone and the shell sure be easily accessible to disperse the heat.

Do not use anything to cover this shell of adapter.

Do not damage the cord of adapter.

If you do not use the telephone for along time, Please unplug the adapter form the socket-outlet as possible.

FCC REQUIREMENTS

- This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:WF1TE10BWF-822. If requested, this number must be provided to the telephone company.
- An applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment.
- A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
- The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. [For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:WF1TE10BWF-822. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.]
- If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
- The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
- Should you experience trouble with this equipment, please contact (East West Distributing, 1-800-645-3867 for repair or warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
- Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified.
- Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.
- NOTICE: If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this [equipment ID] does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
- This equipment is hearing aid compatible.

NOTICE: According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrester is recommended.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a consumer ISM equipment, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.

LIMITED WARRANTY

This item is warranted to be free from defects in materials or workmanship for a period of one year from the original date of purchase under normal conditions of household use. Within the warranty period, we will repair/replace the product or refund your money, at our option, at the place of purchase upon presentation of sales receipt or other proof of purchase. This warranty extends only to the original retail purchaser, and excludes any damage to the product resulting from accident or misuse. The product is not warranted when used in a commercial or business environment.

The above warranty is complete and exclusive. The warrantor expressly disclaims liability for any special, incidental, indirect, or consequential damages in connection with the purchase or use of this product or costs over the original purchase price.

Any implied warranties arising by operation of law shall be limited in duration to the term of this warranty.

This warranty gives you specific legal rights and you may have other rights, which vary by jurisdiction. This warranty is valid only within the United States of America (USA).

©2004 All Rights Reserved

Distributed By:

East West Distributing Company

Deerfield, IL 60015-4616

Made in China

For questions, product information, or customer service,
call toll-free: (800) 645-3867, or
e-mail: info@product-info.us