



# Operational Description

## 1. Software Installation

You can select one among following two ways to install the driver.

### **1. Installation by Setup.exe**

- 1) Plug the SPK-2032 SmartKey into an available USB port located at the back of your computer.
- 2) New Hardware Wizard will notify the installation of new H/W.
- 3) Ignore New Hardware Wizard or Select "Cancel".
- 4) Open the Driver folder in SPK-2032 SmartKey Disk, excute Setup.exe.  
**(Regardless of the OS on your PC)**
- 5) Click "Install". Then Driver installation will be continued.
- 6) Click "Next". Then Driver installation will be completed.

## 2. Installation by New Hardware Wizard.

### **Windows 98se & Windows Me**

- 1) Plug the SPK-2032 SmartKey into an available USB port located at the back of your computer.
- 2) New Hardware Wizard will notify the installation of new H/W.
- 3) Continue to click 'Next' button until it prompts you for the location of setup inf file.
- 4) Specify the location of inf file search path to be **A:\Driver\Win9x** ( if SPK-2032 SmartKey Driver Disk is in drive A )
- 5) Click 'Next' to install the inf and sys driver files.
- 6) Click 'Finish' to finish the installation.