

Bluetooth Remote PTT

User's Guide

Important Safety Information

Please observe the following to ensure reliable operation of the Bluetooth Remote PTT

1. Read this manual thoroughly and observe the operating instructions and information provided.
2. Do not expose the equipment to extreme temperatures or high relative humidity and protect it from direct sunlight and dusty conditions.
3. Clean the equipment with a soft, damp cloth. Do not use any solvents or aggressive cleaning agents.
4. Only connect approved accessories.
5. Only use the power plug supplied.
6. Never open the unit. Opening the unit annuls claims under the terms of guarantee and exposes the person to the risk of an electric shock.
7. Repairs to defective units should only be carried out by service centers of Giant International Ltd..
8. Batteries built into device are NOT user replaceable. Discard used batteries according to the local regulations.


WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

Remote PTT Overview

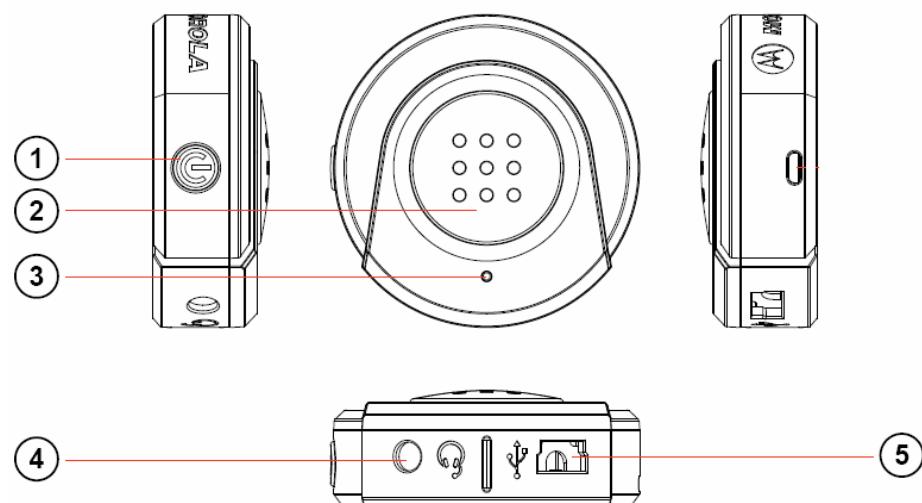

1. Power on/ Off Multi Function Button (MFB)
2. Push-to-Talk (PTT) Button
3. Bluetooth LED Indicator
4. Headset Jack
5. Charging Port

Turn it on/off

To turn on/off your remote PTT, press and hold the [MFB] button for about 2s.

Charge Remote PTT

The Remote PTT comes with rechargeable battery that must be fully charged before you use it for the first time.

1. Connect the power adapter to the unit. Plug the AC adapter into the electrical outlet.
2. The LED will be red when charging. If the LED is not red, check the connection.
3. During charging, the red LED will be lit. When the remote PTT is fully charged, the red LED will be blue.
4. Remove the AC adapter from the remote PTT.

Note: Charging while the remote PTT is on, the remote PTT will turn off automatically.

Pairing with a Bluetooth FRS

1. Turn off the remote PTT.
2. Press and hold the [MFB] button until the remote PTT indicator light flashes blue and red.
3. The remote PTT now is in pairing mode. Release the button. The indicator light will continue flashing red and blue.
4. If pairing was successful, the remote LED will flash blue at a 5s interval.
5. If pairing fails, turn the remote PTT and FRS off and repeat the process.

Reconnect

After initially pairing and connecting your FRS and Remote PTT, when you turn on the Remote PTT, it will reconnect the paired FRS; however, you can press [MFB] once to connect rapidly.

Using your Remote PTT

The remote PTT is worked with headset (With Microphone / Without Microphone).

Using the headset with Microphone:

1. **Press [PTT]** on this Remote PTT Button to transmit and speak towards the headset's microphone. Receiver sound will come out from the headset when **[PTT]** release.

Using the headset without Microphone:

1. **Press [PTT]** on this Remote PTT Button to transmit and speak towards the FRS/GMRS radio's microphone when using a VOX Headset without a Microphone. Receiver sound will come out from the headset when **[PTT]** release.

Status of LED under different operation mode

Action	Button Action / States	LED
Power on	Press and hold MFB button 2 seconds	Blue flashes 3 times
Power off	Press and hold MFB button 4 seconds	Red Long 1 second and turn off
Pairing mode	(1st time) Press and hold MFB for 2 seconds when powering on. (After 1st pairing) Press and hold MFB for 6 seconds when powering on.	Red and Blue Blink alternately
Stand by (connectable)	No pairing	Blue LED flashes at a 2 seconds interval
Stand by (connected)	paired	Blue LED flashes at a 5 seconds interval
PTT (Push-To-Talk)	Press and hold PTT Button	Steady Red (Without Headset) Steady Red and Blue (With Headset)

Release PTT	Release PTT button	Blue LED flashes at a 5 seconds interval
Charging Charged Low Battery		Steady Red
		Steady Blue
		Flash Red
Auto Power OFF	5 minutes after Connectable mode (No pairing)	LEDs OFF