

INSTRUCTION MANUAL

7" TFT LCD COLOR TV/MONITOR

FCC COMPLIANCE STATEMENT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITION;
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SPECIFICATION

FEATURES

■ Built-in TV Tuner

* VHF(L) 2ch~6ch

* VHF(H) 7ch~13ch

* UHF 14ch~69ch

* CATV 113ch

■ Full On Screen Display(OSD)

■ External A/V input

■ External A/V And Diversity Output

■ High Resolution And Low Reflective TFT LCD

■ External Headphone Output

■ Full Remote Control- Extremely Slim Size

 
■ Low Power Consumption

■ PLL Synthesizer Digital Tuner

■ Reverse Function


■ FM/TX For The Use Of Car Radios Audio

▶ FRONT

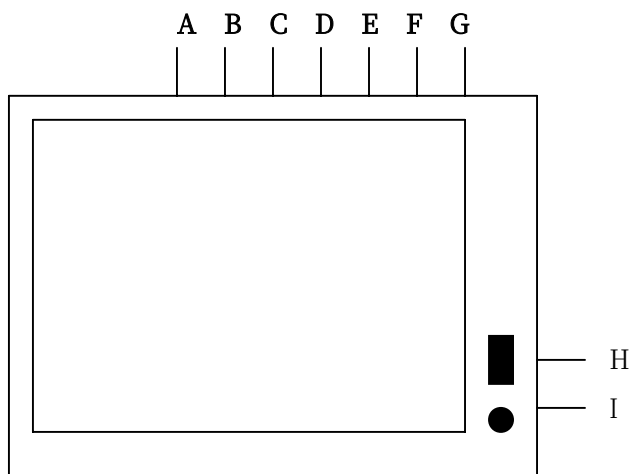


- A: TV/AV
- B: VOLUME (DOWN)
- C: VOLUME (UP)
- D: CHANNEL (DOWN)
- E: CHANNEL (UP)
- F: MENU
- G: POWER ON/OFF
- H: REMOCON SENSOR
- I: STAND BY LED

 ▶ SIDE

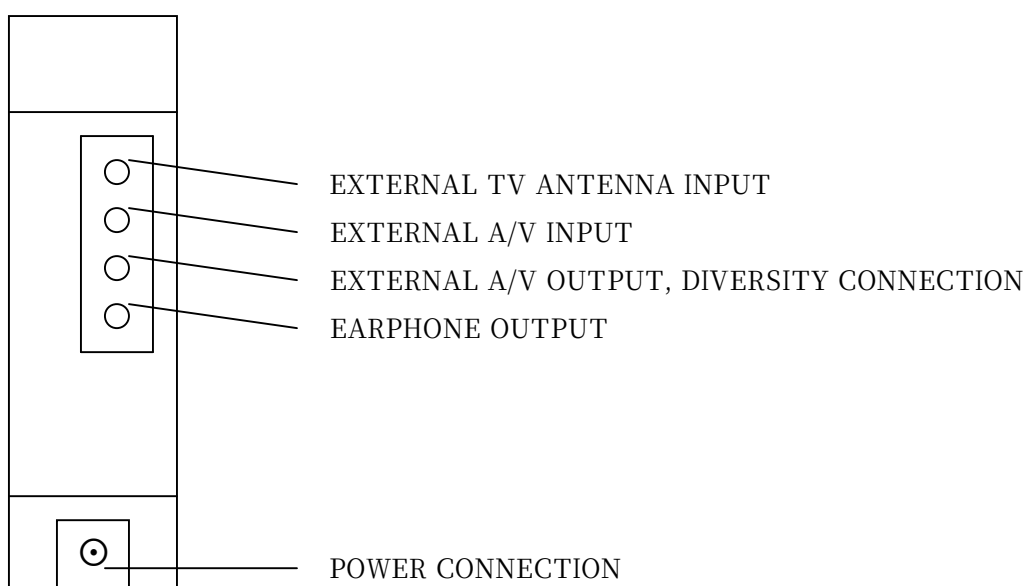

► REMOTE CONTROL

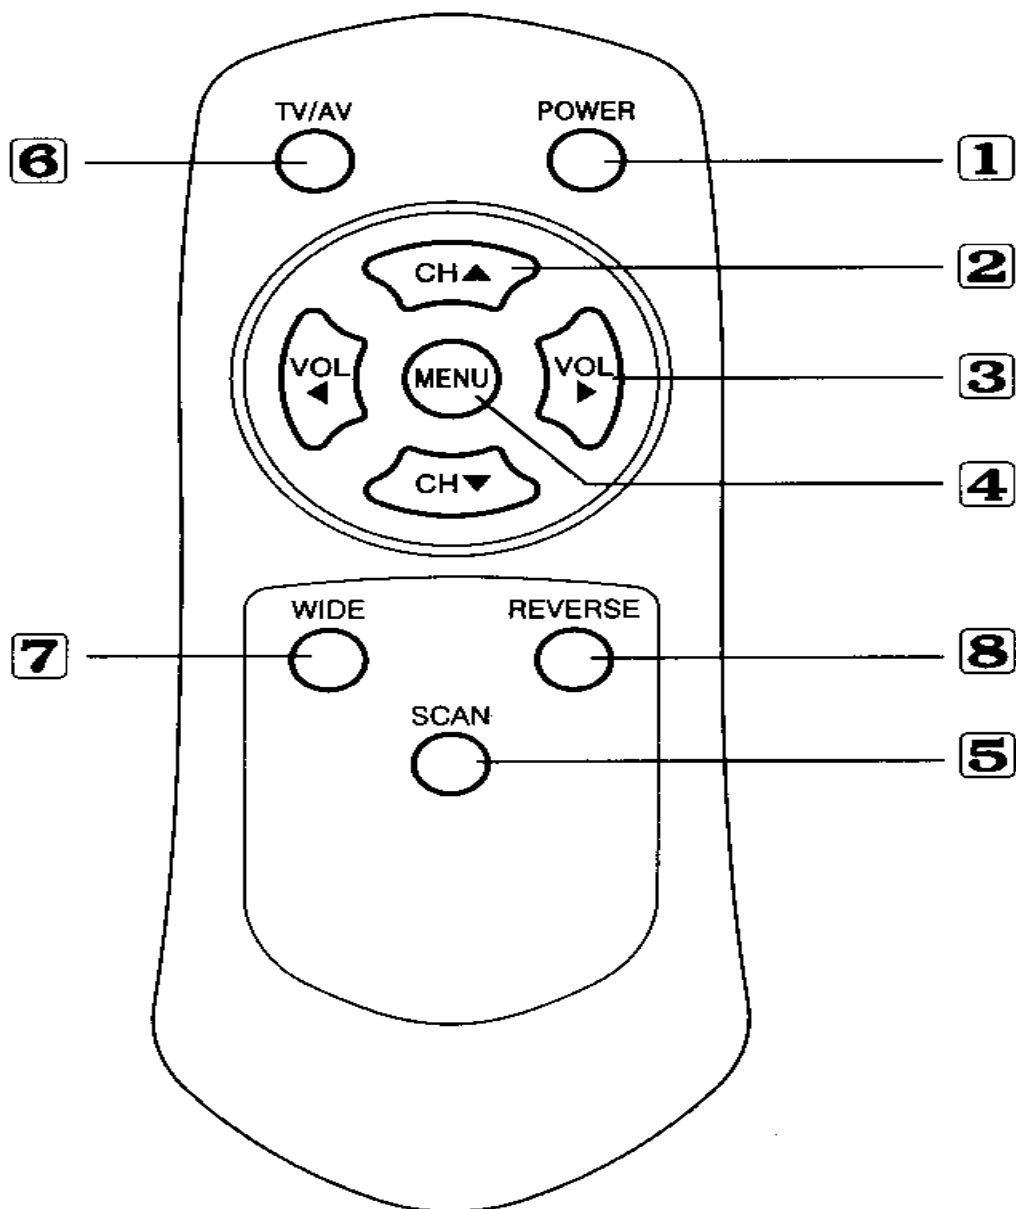 

1 - POWER ON/OFF
2 - CHANNEL UP/DOWN

3 - VOLUME UP/DOWN

4 - MENU : DISPLAY and AUTO MEMORY

5 - SCAN

6 - TV/AV

7 - WIDE

8 - REVERSE

▶ CHANNEL SELECTION
& AUTO MEMORY

* The MENU PICTURE disappears if no other button is inputted for 7 seconds, or if press MENU button 4 times.

CONTROL	
CHANNEL	12
TV/CATV	TV
ADD/ERASE	ADD
FINE	±00
AUTO MEMORY	▶
SELECT: ▲▼ ADJUST: ◀▶	

← The MENU PICTURE appears like left side one if press the MENU button one time.

- 1) CHANNEL : Select CHANNEL item by CH ▲, ▼ button and fix the CHANNEL by VOL ◀, ▶
- 2) TV/CATV : Select TV/CATV by CH ▲, ▼ button and fix the desired mode by VOL ◀, ▶.
- 3) ADD/ERASE : Select ADD/ERASE item by CH ▲, ▼ button and fix the channel for ADD or ERASE by VOL ◀, ▶.
(If cancel the MENU picture, automatic memory for added channel, but not for erased channels.)
- 4) FINE : Select FINE item by CH ▲, ▼ button, adjust for NO-NOISE condition by VOL ◀, ▶ button (This function is used only when the channel is not received properly, so it does not use for normal condition.)
- 5) AUTO MEMORY : Select AUTO MEMORY item by CH ▲, ▼ button and press VOL ▶ button for automatic channel scanning & memory.
Display the current mode if press SCAN button on remote control unit one time and press again for automatic memory of channels.

► CONTRAST, BRIGHT, COLOR,
TINT ADJUSTMENT

PICTURE	
CONTRAST	50
BRIGHT	50
COLOR	32
TINT	32
RESET	OFF
	
SELECT: ▲▼ ADJUST: ◀▶	

 
← Press MENU button twice,
the MENU picture like
left side appears.

- 1) CONTRAST : Select CONTRAST item by CH ▲, ▼ button and adjust at the desired level by VOL ◀, ▶ button.
- 2) BRIGHT : Select BRIGHT item by CH ▲, ▼ button and adjust at the desired level by VOL ◀, ▶ button.
- 3) COLOR : Select COLOR item by CH ▲, ▼ button and adjust at the desired level by VOL ◀, ▶ button.
- 4) TINT : Select TINT item by CH ▲, ▼ button and adjust at the desired level by VOL ◀, ▶ button.

* The RESET is off during above operation.

► FUNCTION

* Press MENU button three times, the MENU picture like below appears.

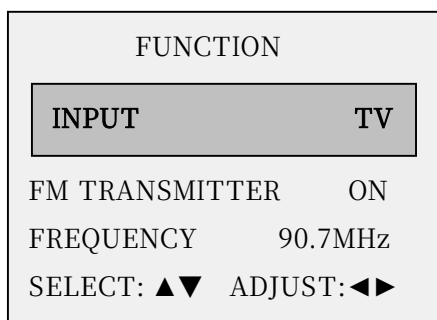

- 1) INPUT : Select INPUT item by CH ▲, ▼ button and choose TV or AV mode by VOL ◀, ▶.
- 2) FM TRANSMITTER : Select FM TRANSMITTER item by CH ▲, ▼ button and choose ON or OFF by VOL ◀, ▶ button.

- 3) FREQUENCY : Select FREQUENCY item, and adjust at the desired frequency between 90.7MHz and 92.2 MHz.

► FM/TX FUNCTION

- 1) Fix the frequency of CAR RADIO at the frequency where has no signal between 90.7MHz and 92.2 MHz.
- 2) Have FM TRANSMITTER item on TV picture to be "ON".
- 3) Make the frequency of FREQUENCY item the same as the frequency of CAR RADIO.
- 4) Listen the sound of TV through CAR RADIO.

► WIDE / REVERSE

- 1) WIDE : Press WIDE button on the remote control and choose WIDE, FULL, NORMAL, CINEMA mode.
- 2) REVERSE : The picture screen is upside down if press REVERSE button on the remote control unit.