

*packard bell*



# S5003L

## USER MANUAL

## table of Contents

|                                          |    |
|------------------------------------------|----|
| 1. PRECAUTIONS .....                     | 3  |
| 2. PARTS AND BUTTONS OF THE DEVICE ..... | 5  |
| 3. TOUCH BUTTONS .....                   | 6  |
| 4. GETTING STARTED.....                  | 6  |
| 5. HOME SCREEN .....                     | 8  |
| 6.QUICK NOTIFICATION PANEL .....         | 9  |
| 7. SETTINGS MENU .....                   | 10 |
| 8. INSERTING/REMOVING SIM CARDS.....     | 13 |
| 9. MAKING AND RECEIVING CALLS .....      | 14 |
| 10. ANSWERING AND REJECTING CALLS.....   | 14 |
| 11.Send message .....                    | 15 |
| 12. SOFTWARE KEYBOARD .....              | 15 |
| 13. HOW TO CONNECT TO A COMPUTER .....   | 17 |
| 14. CONNECTION TO INTERNET .....         | 17 |
| 15. MOBILE DATA AND INTERNET.....        | 18 |
| 16.BLUETOOTH .....                       | 19 |
| 17. CAMERA.....                          | 19 |
| 18.TROUBLE SHOOTING .....                | 21 |
| 19.Split Screen Multitasking.....        | 22 |

# 1. PRECAUTIONS

## **1)、 On the Road**

Using a device while driving is illegal in many countries. Please refrain from using your mobile while driving.

## **2 ) 、 Near Sensitive Electronics or Medical Equipment**

Don' t use your device near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

## **3 ) 、 While Flying**

Your device can cause interference with aircraft equipment. So it' s essential you follow airline regulations. And if airline personnel ask you to switch off your device, or disable its wireless functions, please do as they say.

## **4 ) 、 At a Petrol Station**

Don' t use your device at petrol stations. In fact, it' s always best to switch off whenever you' re near fuels, chemicals or explosives.

## **5 ) 、 Making Repairs**

Never take your device apart. Please leave that to the professionals. Unauthorised repairs could break the terms of your warranty. Don' t use your device if the antenna is damaged, as it could cause injury.

## **6 ) 、 Around Children**

Keep your mobile out of children' s reach. It should never be used as

a toy as this is hazardous.

### **7 ) 、 Near Explosives**

Turn off your device in or near areas where explosive materials are used. Always obey local laws and turn off your device when requested.

### **8 ) 、 Emergency Calls**

To make an emergency call your device must be turned on and in an area where there' s network coverage. Dial the national emergency number and press "Send" . Explain exactly where you are and don' t hang up until help has arrived.

### **9 ) 、 Working Temperature**

The working temperature for the device is between 0 and 40 degree Celsius. Please don' t use the device outside the range. Using the device under too high or too low temperature might cause problems.

At very high volume, prolonged listening to a mobile device can damage your hearing.

## 2. PARTS AND BUTTONS OF THE DEVICE



1. light distance sensor

3. Front camera

5. Micro USB and charging port

7. Power button

9. Rear camera

11. Speakers

2. Receiver

4. Earphone jack

6. Volume button

8. Microphone

10. Flash

### 3. TOUCH BUTTONS

 
The  button moves back one step to the previous menu/page.

The  button returns immediately to the main screen.

The  button displays a menu of recently opened applications.

( This interface adds a “CLEAR ALL” button);Long press into the Split screen interface

The  button will launch the applications and settings menu.

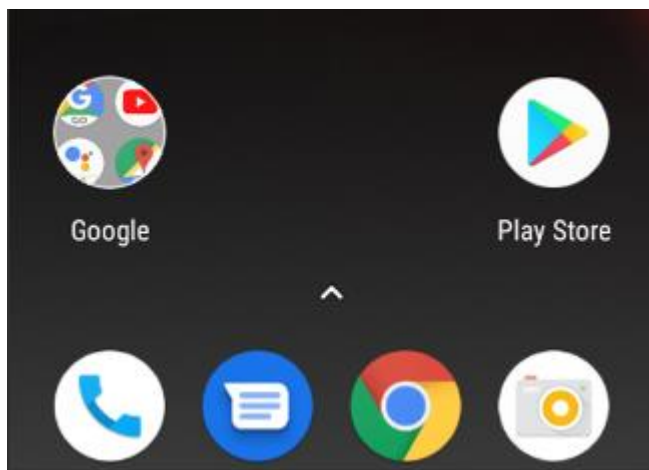




### 4. GETTING STARTED

#### Installing the micro-SIM Card and Battery

Switch off your phone before installing or replacing the battery or the

micro-SIM card.

   Insert your fingernail into the slot at the bottom left of the back cover,  
and slide fingernail across bottom of back cover to lift it off.

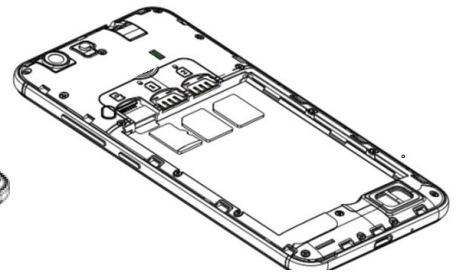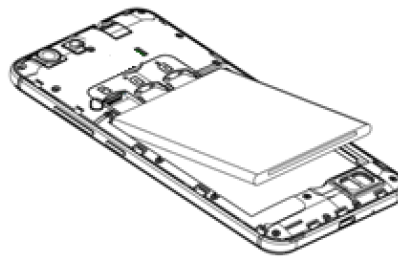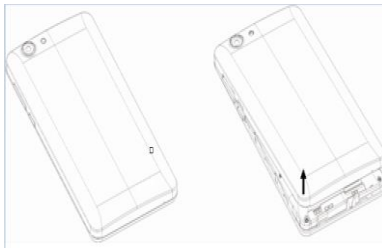

**WARNING!**

To avoid damage to the phone, do not use any other kind of SIM card,

or any

non-standard micro-

SIM card cut from a SIM card. You can get a standard

micro-SIM card from your service provider.

Insert the battery by aligning the metal contacts on the battery with the

metal

contacts in the battery compartment. Gently push down on the battery

until it

clicks into place.

Align the back cover with the back of the phone and press the cover b

ack into

 
place. Ensure that all the tabs are secure and there are no gaps around

the

cover.

## 5. HOME SCREEN

The home screen will look similar to the picture below. To switch between screens, simply slide your finger left or right across the display.

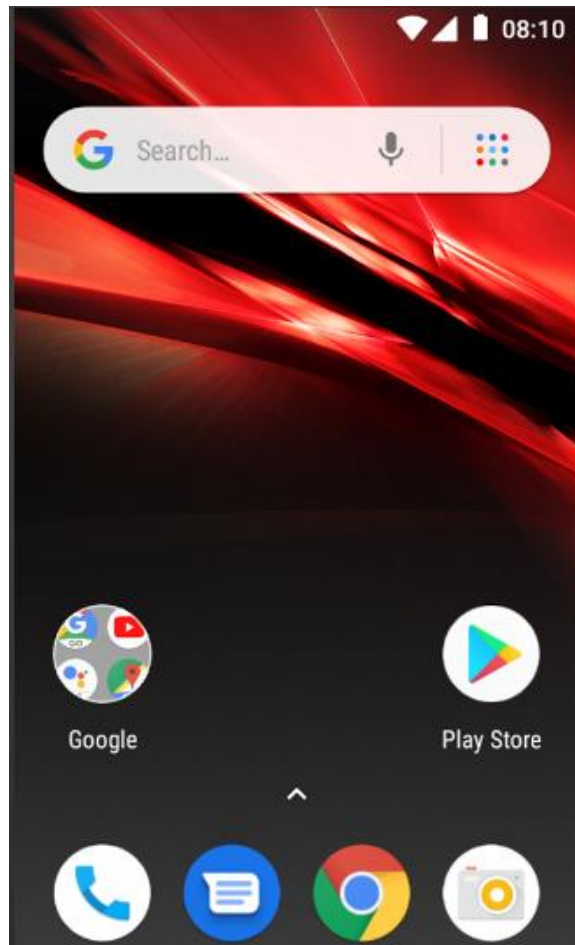


The home screen contains shortcuts to your most-used applications and widgets.


The status bar displays system information, such as current time, wireless connectivity and battery charge status.

## 6. QUICK NOTIFICATION PANEL

 When you receive a notification you can quickly view it by following the below instructions. Slide your finger from the top of the screen down to the center to access Notification Panel to see your notifications.

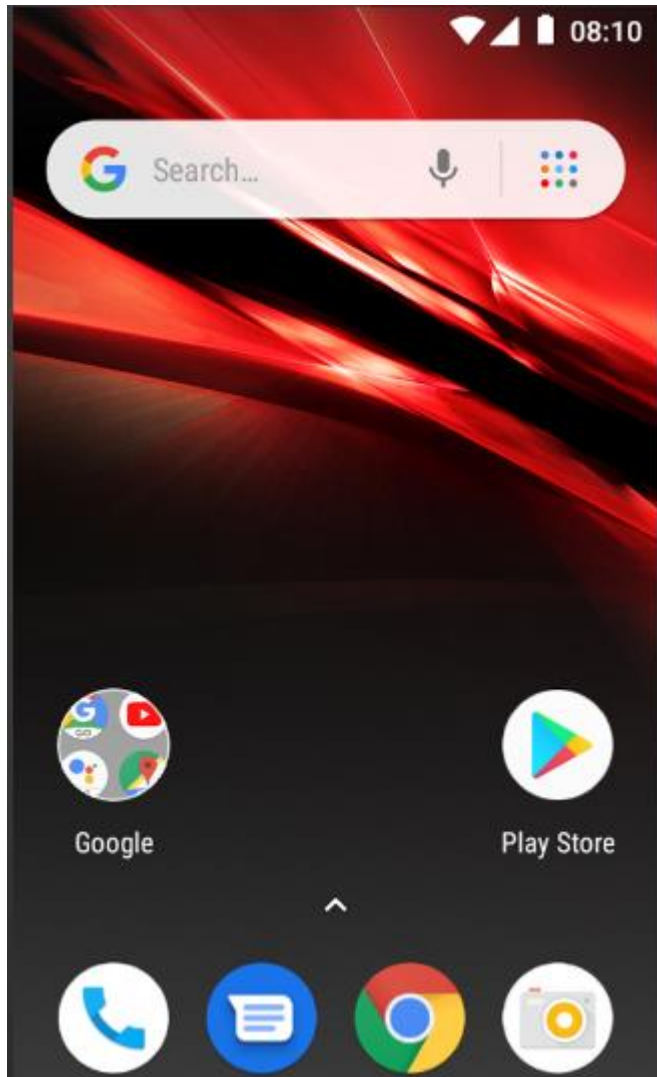

 Drag the notification menu down to display the second fast access menu, the menu will look similar to the below image.

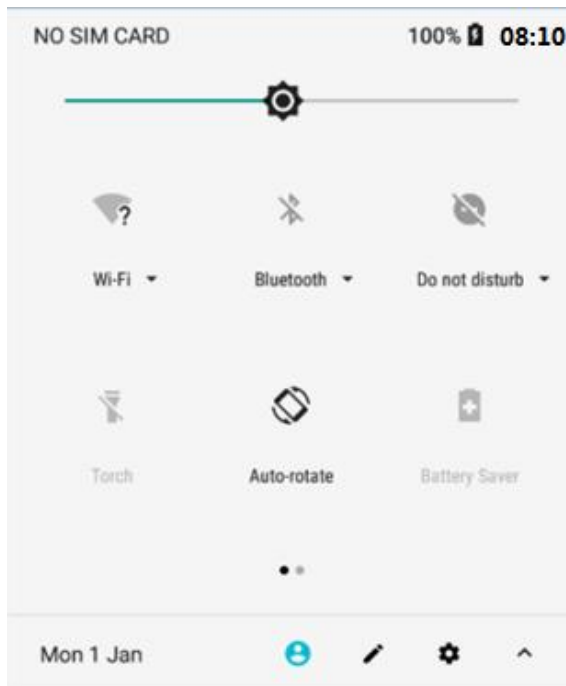

Through this menu, it is possible to modify the functions such as brightness, auto rotation, Wi-Fi, Bluetooth and more.

## 7. SETTINGS MENU

The settings menu allows you to adjust Tablet cellphone System Configuration.

### To Change Settings:

1. Touch the "Settings" menu icon  on the Application menu.

The Settings menu will open.

2. Touch a category title to view further options .

### 2.1. Network&Internet

- Wi-Fi – Connect to/disconnect from wireless networks, view connection status
- Moblie network - Insert SIM card and switch data network(2G/3G/4G)

- Data usage – Enable/disable mobile data, view current usage, set mobile data limit

**(note: this function is available only on devices supplied with 3G card functionality)**

- Hotspot & tethering - Including Usb tethering,Bluetooth tethering and Wi-Fi hotspot.

## **2.2. Connected devices**

- Bluetooth – Connect or disconnect Bluetooth devices .
- USB - Insert the USB line to use this menu.

## **2.3. Apps & notifications**

- Notifications – Adjust different notification settings
- App info – A list of all apps downloaded and running
- App permissions - View app permissions
- Battery – View the status of your battery and make adjustments to power consumption

**2.4.Display** – Adjust display settings

**2.5. Sound**– Adjust the different audio settings such as ringtones

**2.6.Storage** – View your phone’ s internal and external storage settings

**2.7. DuraSpeed** – “ON” / “OFF”

## **2.8. Security& location**

- Security- Adjust phone’ s security settings;
- location- ‘Change approximate location detection, improve search

 
results, GPS satellites .

## 2.9. User & accounts

- User - Switch between Owner and Guest;
- Accounts – Add or remove email and Google™ accounts such as Gmail, Google.

## 3.0. System

- Language and input – add to the dictionary, edit on-screen keyboard settings, vocal search, etc.
- Date and time – Set date, time zone, time, clock format etc.
- Backup– Backup and restore data, perform factory reset, etc.
- Reset
- DRM reset
- Network setting reset- this will reset all network settings.
- Reset app preferences- reset all preferences.
- Schedule power on&off : Set the time to turn on or off your phone.
- About Phone – Displays information about your phone
- Suggestions - Set some functions and slide these functions to the right to remove this item.

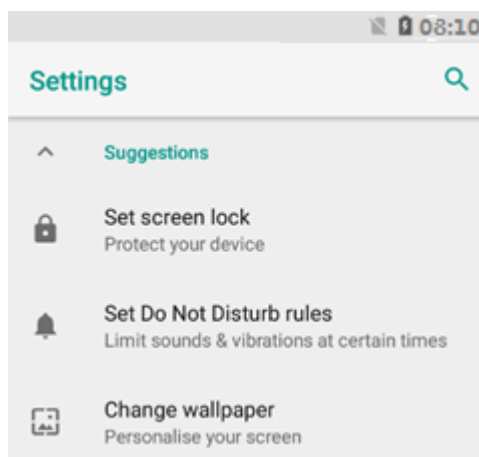

## 8. INSERTING/REMOVING SIM CARDS

1. When phone is powered off insert a SIM card by removing the SIM cover as illustrated above, insert your finger in the indent located near the charging port and unclip the SIM cover, then insert the SIM card. Please take note of the direction of insertion following the diagram on the phone' s SIM port.
2. After inserting a SIM card, turn on the phone and wait a few minutes for your phone to display Network information.

### **Inserting TF Card :**

NB: Please ensure when inserting an SD card your phone is powered "OFF"

1. Insert the TF card into the TF card slot located under the SIM card cover as explained in the Inserting/Removing SIM card section. Gently push TF card into slot until it clicks into place.
2. A prompt will be seen on the screen saying "Preparing SD card" .

### **Removing TF Card:**

1. Close all applications and documents which have been opened from the TF card.
2. Select "Settings" and find "Storage" then click "Unmount SD card" .
3. A prompt will be seen on the screen saying "SD card safe to

 
remove” .

4. Gently press the TF card to remove and pull out the TF card.

## 9. MAKING AND RECEIVING CALLS


Once your SIM cards are installed turn on your phone and wait a few minutes for your phone to find a network.

Then select the Call  icon. Here you can dial a number or select a contact from your stored contacts list to call. You can also view outgoing and incoming calls that have been made, as well as adding or removing contacts.

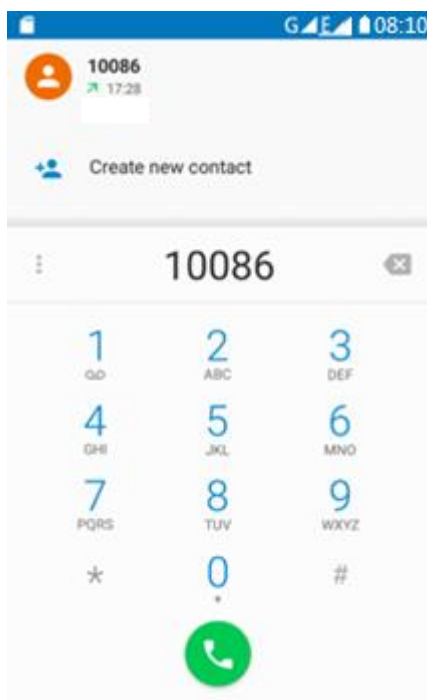

## 10. ANSWERING AND REJECTING CALLS

 To answer a call – Slide your finger to the blue Call Answer key.

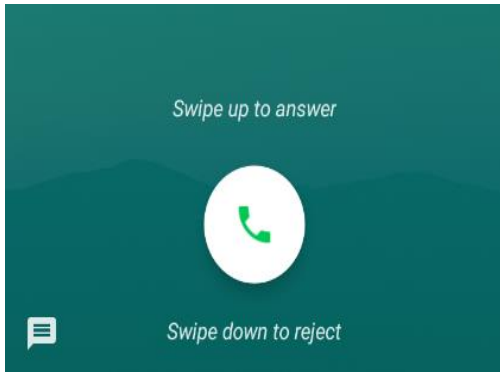


To reject a Call – Slide your finger to the Red Call End key.

## 11.Send message

 Touch the Messaging icon  to other mobile phone users to send SMS or MMS, enter the name or phone number in the "Type name or number" column, or select one from the contacts. Enter the information content and select send.

## 12. SOFTWARE KEYBOARD

The phone has a software keyboard which automatically displays when you tap the place on screen where you want text or numbers to be entered, then simply start typing.

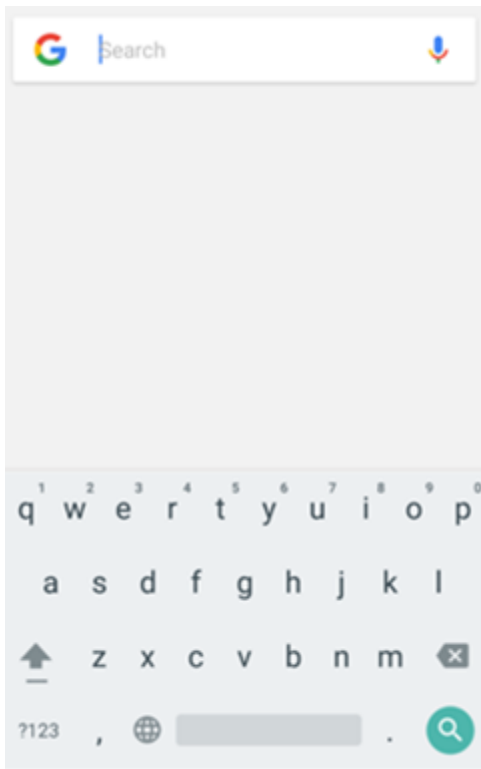

## Touchscreen

The touchscreen responds to finger touch.

### Note:

- Don' t place any object on the touchscreen for it may damage or crush the screen.

**Single Click:** Single click one icon to choose the icon or option you want.

**Long Press:** Press and hold an icon to delete or move an icon or app, and will display APP info 、 Widgets、 shortcut menu ect.

**Drag:** Press the icon and drag it to a different screen.

## 13. HOW TO CONNECT TO A COMPUTER

• Turn on your phone before connecting the phone to a PC by USB cable.

1. Use a USB cable to connect the phone with a computer. The phone will automatically detect a USB connection.
2. The USB connection menu will be displayed in the notification bar, select the desired USB operation.
3. The USB connection has been successful.

## 14. CONNECTION TO INTERNET

Wireless:

1. Select "Settings" .
2. Select Network & Internet.
3. Select "Wi-Fi" and slide OFF to ON status.
3. All detected wireless networks in the area will be listed. Click to select desired wireless connection.
4. Enter network key if necessary.
5. Once connected to a wireless network, settings will be saved.
6. Wireless icon will appear on the taskbar when connected successfully.

**Note:**

- When the phone detects the same wireless network in the future, the device will connect to the network automatically with the same password record.

## 15. MOBILE DATA AND INTERNET

**Please Note:** Cell Data may be turned “**OFF**” as a factory setting, to allow data to flow through your network provider please turn Data usage “**ON**” either from your quick drop down menu or in > Settings > Network & Internet > Data usage, you will not be able to access the Internet when Data usage is “**OFF**” .

**NB:** Mobile Data charges apply when this setting is “**ON**” – Data will be passed through your network provider.

### **Web Browsing**

Connect to the Internet and launch the browser.

Type in the desired browsing URL.



## 16. BLUETOOTH


Select "Settings" , select Bluetooth from "**OFF**" to "**ON**" .

Search for the device you would like to pair with and select "**PAIR**" .

You will see a message "Connected Successfully" .

## 17. CAMERA

Touch the icon  to enter camera mode and the interface is shown as follows:

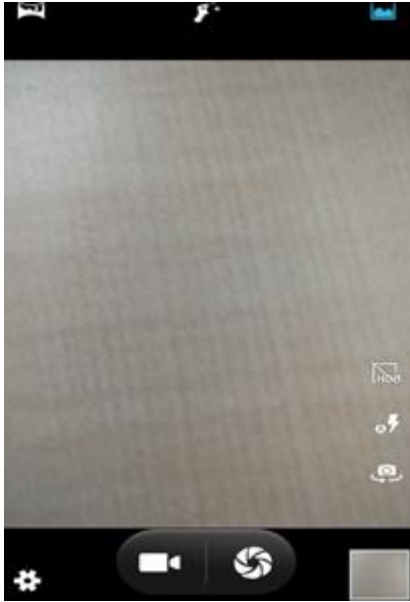 


1. Touch the icon  to take a photo.
2. Touch the icon  to start camera recording.
3. Touch the icon  top right to see the previous picture and to delete, share or set it as a wallpaper. Click the return button to exit camera interface.
4. Touch the icon  to switch from front to back camera.

# 18.TROUBLE SHOOTING
 
## How to Close Applications

When an application is not responding you can manually shut the app down in “**Running Services**” menu. This will ensure the system responds as desired. Please shut down all **idle applications** to release memory and get the system speed back to normal. To close the application, click the icon on the shortcut bar to enter the system configuration interface. Select the **ApplicationRunning** and the interface is

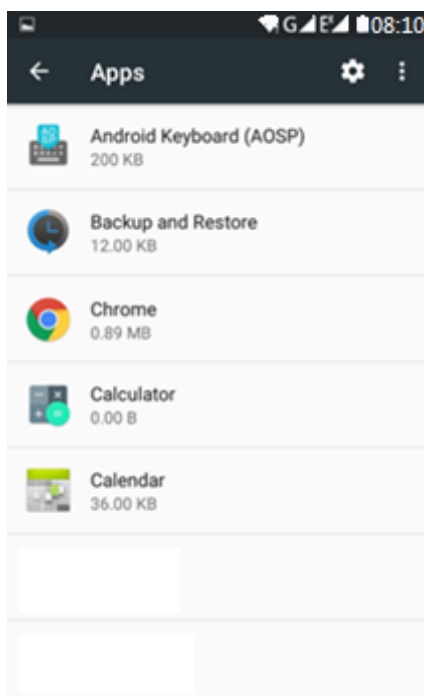

Tap the application you want to close. A pop-up window will be displayed. Tap “Stop” to close that application.

## Power “OFF” / Restart / Reset the Phone

1. Press and hold the power button for 5 seconds and the device will

be powered down.

2. Press the reset button located under the power button with a sharp object and the device will be forced to restart.

### Restore Default Setting

 
If you want to reset the phone to factory settings and erase all materials, please press **Settings Backup and resetFactory data reset**.

#### WARNING:

actory Data Reset setting will delete ALL your data and system configuration as well as any downloaded apps. Please use this function carefully.

## 19.Split Screen Multitasking

Into an application, long press the APP SWITCH button can be divided into two screens, divided into two windows, each window can run a separate program, the two windows do not interfere with each other.(Few applications are not supported)

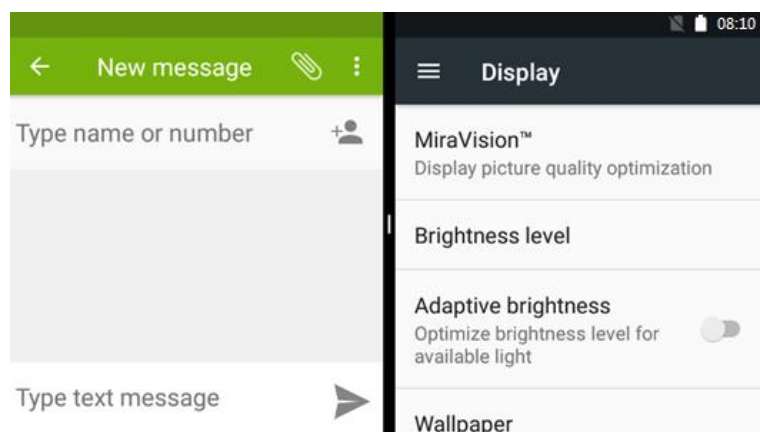

Google, Android, Google Play and other marks are trademarks of Google LLC.

---

FCC Warning:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause interference
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a new device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each device are performed in positions and locations as required by the FCC.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

## **ISED Warning:**

*This device complies with Industry Canada license-exempt RSS standard(s).*

*Operation is subject to the following two conditions:*

*(1) This device may not cause interference, and*

*(2) This device must accept any interference, including interference that may cause undesired operation of the device.*

*Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne*

*doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement*

Radio apparatus containing digital circuitry which can function separately from the operation of a transmitter or an associated transmitter, shall comply with ICES-003. In such cases, the labeling requirements of the applicable RSS apply, rather than the labeling requirements in ICES-003.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Appareil radio contenant des circuits numériques pouvant fonctionner séparément du fonctionnement d'une émetteur ou un émetteur associé doit être conforme à la norme ICES-003. Dans de tels cas, l'étiquetage des exigences du RSS applicable s'appliquent, plutôt que les exigences en matière d'étiquetage de la norme ICES-003.

Cet appareil numérique de classe B est conforme à la norme canadienne ICES-003.

Cet appareil numérique de classe est conforme à la norme NMB-003 du Canada

## **ISED SAR Waring :**

The device has been tested and compliance with SAR limits, users can obtain Canadian information on RF exposure and compliance

*Le présent appareil est conforme*

Après examen de ce matériel aux conformité aux limites DAS et/ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les informations correspondantes

SAR tests are conducted using standard operating positions accepted by the ISED with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a new device is available for sale to the public, it must be tested and certified to the ISED that it does not exceed the exposure limit established by the ISED, tests for each device are performed in positions and locations as required by the ISED.

For body worn operation, this device has been tested and meets the ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

Les tests SAR sont effectués à l'aide de positions de fonctionnement standard acceptées par l'ISED, l'appareil transmettant à son niveau de puissance certifié le plus élevé dans toutes les bandes de fréquences testées, bien que le SAR soit déterminé au niveau de puissance certifié le plus élevé. Bien en dessous de la valeur maximale, en général, plus vous êtes proche d'une antenne de station de base sans fil, plus la puissance délivrée est faible. Avant qu'un nouveau dispositif ne soit disponible à la vente au public, il doit être testé et certifié conforme à la norme ISED qu'il ne dépasse pas la limite d'exposition fixée par ce dernier. Des tests sont effectués pour chaque dispositif dans les positions et emplacements requis par la norme ISED.

Pour un usage sur le corps, cet appareil a été testé et respecte les directives d'exposition RF ISED lorsqu'il est utilisé avec un accessoire conçu pour ce produit ou avec un accessoire ne contenant pas de métal et positionnant le combiné à au moins 10 mm du corps.

Le non-respect des restrictions ci-dessus peut entraîner une violation des consignes d'exposition aux RF.