

EUT External Photos

Photo 1

M/N TSK-8402AMM, General Appearance (Front, Top & Side View)



Photo 2

M/N TSK-8402AMM, General Appearance (Back, Bottom & Side View)



Photo 3
M/N TSK-8402AMM, General Appearance (Open the Front Door)



Photo 4
M/N TSK-8402EMM, General Appearance (Front, Top & Side View)



Photo 5

M/N TSK-8402EMM, General Appearance (Back, Bottom & Side View)



Photo 6

M/N TSK-8402EMM, General Appearance (Open the Front Door)



Photo 7

M/N TSK-8401AMM, General Appearance (Front View)



Photo 8

M/N TSK-8403AMM, General Appearance (Front View)



Photo 10

A silver microwave oven is shown from a front-facing perspective. A white label with the text "TSK-8401E" is placed on top of the microwave. The microwave has a large, rectangular, perforated metal mesh door. To the right of the door is a control panel with a digital display, a numeric keypad (0-9), and several function buttons including "POPCORN", "REHEAT", "AUTO DEFROST", "CLOCK", "REPEAT", "TIME", "POWER", "STOP/RESET", and "START". The microwave is sitting on a brown tiled surface.

Photo 11

M/N TSK-8403EMM & TSK-8403E, General Appearance (Front View)



Photo 12

M/N TSK-8404EMM & TSK-8404E, General Appearance (Front View)

