

- FO 14T Transmitter

1: Turn on the Switch

2: Connect the audio cable to LINE IN

3: Slide the Switch of CH1 to 88~91MHz frequency range.

4: Slide the Switch of CH2 to 91~94MHz frequency range

5: Audio signal emit from Transmitter was received by Radio.

6: Power Supply: DC 3V ( AAA X 2)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.