
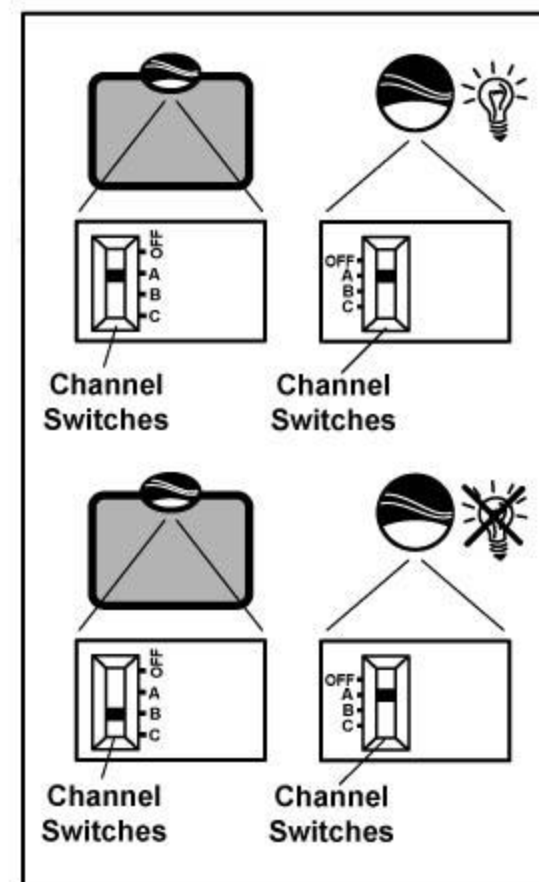


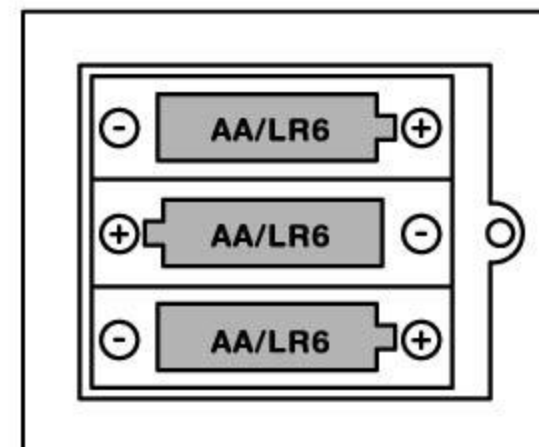

© Disney

To Operate :

- Remove the rug and remote illuminator units from the protective plastic bags and dispose of all bags, ties and packaging.
- To replace and insert batteries, open battery compartment door of the rug light with a Phillips screwdriver. Insert 3 fresh AA ALKALINE batteries as shown on the diagram inside the battery compartment. Close the battery compartment door and tighten the battery door screw.
- Repeat the procedure for inserting the remote light batteries.
- The channel switches are preset at the factory to work for most environments. (See below instructions if changing channel switches for other conditions).
- Lay the rug flat on the floor.
- The light unit on rug should always be placed under or closest to the bed to avoid stepping on or tripping over the light unit.
- Place the Remote Illuminator at a location where you desire low level lighting at night.
- Step and stand on the Step 'n Shine rug to activate the rug light. The active switch areas are distributed throughout the rug area. If the rug fails to light, try stepping on another section of the rug and stand for at least one second.
- Once the rug is lit, you may now walk away. After a period of approximately 5 seconds, you may step back on the rug to turn the Step 'n Shine light off. When turning off, the rug light will slowly dim for about 10 seconds. Otherwise, if you leave the rug for 15 minutes, the rug will automatically start to turn off signified by the dimming light. To re-trigger the light, simply step on the rug again for an additional 15 minutes of light, or tap on the Remote Illuminator lens for an additional 5 minutes of light.
- When the rug light is activated, all Remote Illuminators that are within range and having corresponding channel settings will also turn on after a delay of 0 to 2 seconds. The remote lights remain lit until the rug light is turned off or automatically times out after 15 minutes. The remote light dims out as they turn off. You may also manually turn on and off the remote lights by tapping on the lens of the Remote Illuminator.
- If you want to turn off the rug light or remote light completely, simply slide the switch to the 'OFF' position on both units. This setting will disable activation of the rug and also activation of the Remote Illuminator and will extend the battery life.

**Setting the Channel Switches :**

- The channel switches are located at the bottom of the rug light or remote illuminator.
- If you have multiple rug and remote light pairs in your home and you wish them to operate independently, you can use the channel settings to do so. Set one pair of rug and remote illuminator to channel A and any additional pairs to B or C.
- If you have interference from the other rug lights, perhaps nearby neighbors, you can select another letter by sliding the switch on all your rug lights and remote lights so they all have the same letter – A, B or C.
- You can also select different channel letters within your own home where you have multiple rugs and multiple remote lights, and wish some rugs and remote lights to work completely independent of others in the home. A rug light and remote light set to channel B will not be affected in any way by any rug or remote light set to channel A or channel C.

To Clean :

- Product is surface washable only. DO NOT LAUNDRER. Wipe surface with damp cloth.

Remote Light Placement :

- Do not place on the floor where someone may accidentally step or trip over the unit. Suggested areas are vanity or kitchen counter, table or nightstand, or dresser top.
- The removable hook can be attached to the back of the remote light by simply inserting the tab on the hook into the notched hole on the back of the remote light and snapping into place. You can then hang the remote light from most door knobs, or even on a closet pole. The notched hole also allows you to hang the remote light from a nail or hook on a wall.

About Your Step 'n Shine product :

- The product uses high frequency radio waves to communicate from the rug light to the Remote Illuminator lights. These radio waves can be affected in various ways by building materials, water pipes, appliances and other wireless devices such as wireless telephones. Often moving either or both the rug and the Remote Illuminator even a few inches can greatly improve or degrade the ability for the Step 'n Shine system to work properly. Even when conditions are very good, the remote light may fail to respond for a given activation due to temporary interference from some other source.
- The lighting system provides low level lighting for dark rooms. The light may appear dim or even off in a brightly lit room.
- Indoor use only. Do not use outdoors or when the unit may get damp.
- Modifications not expressly approved by Step 'n Shine, LLC, for compliance could void the user's authority to operate the equipment.
- The product has been shown to operate up to 100 feet under very good conditions. However, you may experience a reduce distance based on many factors such as the construction of the walls and building, number of walls, and proximity to water pipes, wires, cables, or large appliances. Other sources of radio signal and wireless transmitters may interfere with the Step 'n Shine and thus reduce the distance you experience with the Step 'n Shine system.

If the Remote Illuminator lights fail to operate when the rug light is stepped on, check the following :

- ALWAYS use FRESH ALKALINE AA batteries. Batteries get old over time even when not used, so using fresh batteries from your local retailers is important. Replace the batteries when the units start to act intermittently.
- Make sure both units are ON, and the channel switches are set to the correct setting. See chart.
- Make sure all units are operating by (1) stepping on the rug and observing the rug light turn on, and (2) pressing on the lens of the remote light to manually light the Remote Illuminator. If either fails to turn on, double check the switch settings and replace the batteries.
- For best operation, you may have to try the Remote Illuminator in different locations. The radio link between the main rug unit and the Remote Illuminator can be affected by hidden objects such as steel supports, drains, electrical wires and water pipes in walls, or by a nearby appliance such as a TV or refrigerator. Sometimes moving the unit a few inches is adequate to improve the radio signal, but in some cases, may require the remote light to be moved to a different part of the room or a different room altogether.

Save these instructions for future reference as they contain important information**FCC Compliant**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



© 2009 Senario

1725 Kilkenny Court
Woodstock, IL 60098 USA
All Rights Reserved
Made in China
1-815-337-0889

Step 'n Shine®
© Step 'n Shine, LLC
STEP 'N SHINE, LIGHT ZONE and LIGHT UP YOUR WAY!
are proprietary U.S. trademarks of Rise & Shine Ventures, LLC.