

TO USE THE UNIT

1. Plug base unit jack into phone
2. Rotate earpiece for left or right ear
3. Place headset on ear from the top
4. Mold headset/earpiece for snug fit
5. Adjust the microphone boom towards mouth
6. Use "+"/-" buttons to adjust base volume
7. Use phone as normal

FLASH/PICK-UP BUTTON

Located on the headset on top/back side

VOICE-ACTIVATED PHONE USE

Follow your phone's instructions

INDICATOR TONES

- Continuous short beeps: Out of range
- Three short (.5 secs) beeps: Low battery
- Descending beeps: Manual standby mode

INDICATOR LIGHTS

- Flashing Green: Charging in progress
- Steady Green for 10 secs: Reset/Pairing
- Steady Red for 10 secs: Replace batteries (<5% left)

AUTOMATIC, ENCRYPTED PAIRING

Occurs 1 minute after charging begins

MANUAL STANDBY

Press the "+" button on base to its lowest setting. Then press/hold for 2 seconds. Press any flash/volume button to wake.

TROUBLE SHOOTING

- Check that phone is ON
- For optimal results, plug base jack in the phone for 1 minutes before use
- Check that the base jack is firmly attached to phone
- Adjust volume on headset and/or phone for optimal sound
- Reinsert headset and base into case, observe lights to ensure unit is charged
- If interference is detected, try bringing base/headset closer together
- If experiencing feedback then reduce base volume to minimum, adjust phone volume as necessary

FOR MORE INFORMATION: www.reasonproducts.com/unleash

FCC ID: RDA444-UNLEASH



P/N: 6620-32628 , Inlay.
P/N: 7720-50004 , Inlay.

TO USE THE UNIT

1. Plug base unit jack into phone
2. Rotate earpiece for left or right ear
3. Place headset on ear from the top
4. Mold headset/earpiece for snug fit
5. Adjust the microphone boom towards mouth
6. Use "+/-" buttons to adjust base volume
7. Use phone as normal

FLASH/PICK-UP BUTTON

Located on the headset on top/back side

VOICE-ACTIVATED PHONE USE

Follow your phone's instructions

INDICATOR TONES

- Continuous short beeps: Out of range
- Three short (.5 secs) beeps: Low battery
- Descending beeps: Manual standby mode

INDICATOR LIGHTS

- Flashing Green: Charging in progress
- Steady Green for 10 secs: Reset/Pairing
- Steady Red for 10 secs: Replace batteries (<5% left)

AUTOMATIC, ENCRYPTED PAIRING

Occurs 1 minute after charging begins

MANUAL STANDBY

Press the "-" button on base to its lowest setting. Then press/hold for 2 seconds.


Press any flash/volume button to wake.

TROUBLE SHOOTING

- Check that phone is ON
- For optimal results, plug base jack in the phone for 1 minutes before use
- Check that the base jack is firmly attached to phone
- Adjust volume on headset and/or phone for optimal sound
- Reinsert headset and base into case; observe lights to ensure unit is charged.
- If interference is detected, try bringing base/headset closer together
- If experiencing feedback then reduce base volume to minimum, adjust phone volume as necessary

FOR MORE INFORMATION : www.reasonproducts.com/unleash

FCC ID: RDA444-UNLEASH

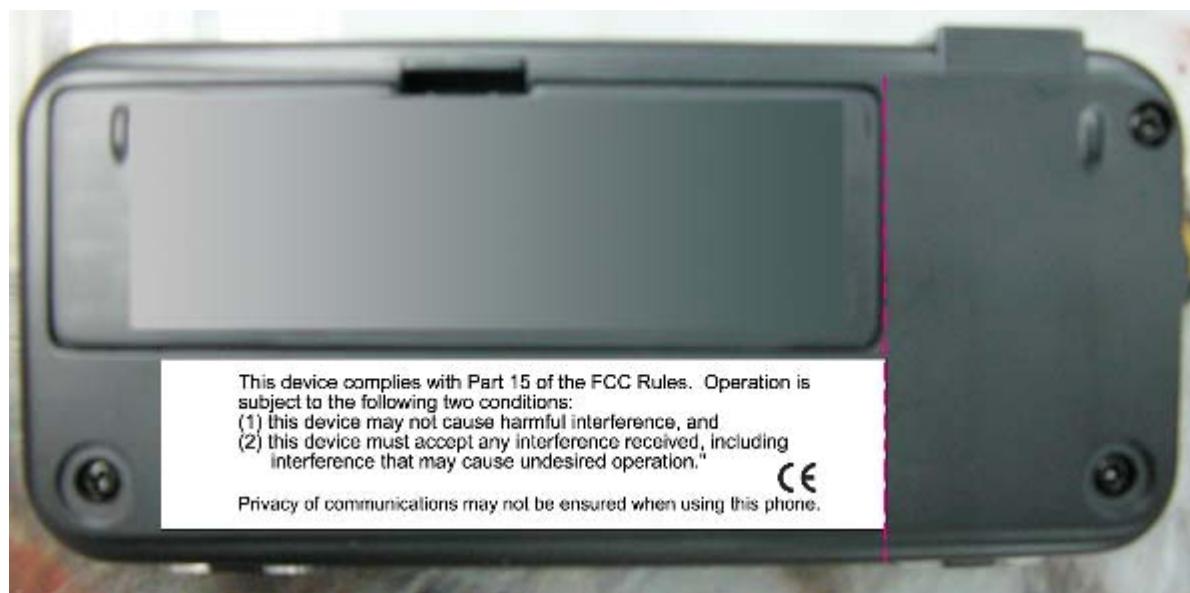

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation."



Privacy of communications may not be ensured when using this phone.