




**INSTANT PARTY SPEAKER
WITH DISCO LIGHT SHOW
P-921**

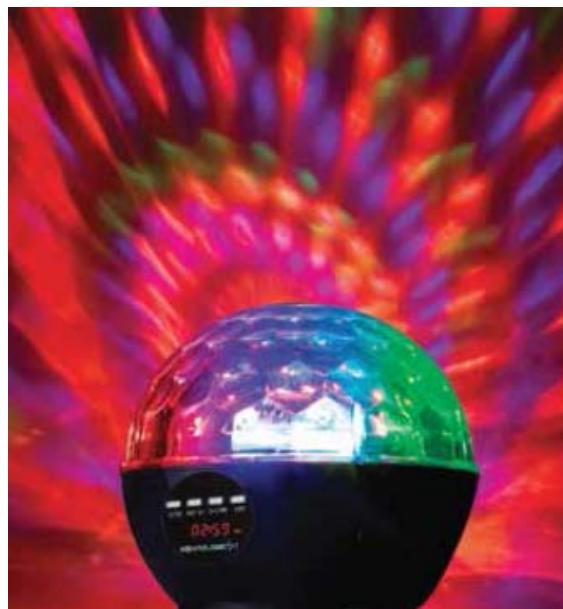

INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
& RETAIN FOR FUTURE USE**

Getting Started

Remove the unit from the box.

Remove any packaging from the product.

Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

Instant Party Speaker with Disco Light Show

USB cable (For Charging Purpose)

3.5mm audio connection cable

Instruction manual


Features

1. Wireless Bluetooth connectivity to iPad, iPod Touch, Android, Windows Phone, Blackberry, smartphones, tablets, computers and more.
2. Crisp, clear sound with bright flashing multi-colored LED light show for an instant disco dance party anywhere you go.
3. Projects multi-colored party lights onto walls and ceilings, built-in multiple lighting modes to choose. Disco lights and sound operate independent of each other.
4. Built-in FM Radio.
5. Rechargeable built-in battery, micro USB recharging cable included.
6. LCD Digital Display

IMPORTANT SAFETY INFORMATION

1. Read all instructions before using this product.
2. Do not leave this product unattended while connected to the power supply.
3. Do not immerse in water or any other liquids.
4. Do not use if unit has been dropped or damaged in any way.
5. Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
6. Place unit on sound, even surface, free of vibrations and away from sources of heat.
7. Do not use with wet hands.
8. Do not put objects into openings.
9. Keep free of dust, lint, hair etc.
10. Do not use this unit for anything other than its intended use.
11. Keep this product out of reach of children.
12. This product is not a toy.
13. Do not play music at excessive levels especially near children, as damage to hearing may occur.

Description of Parts:

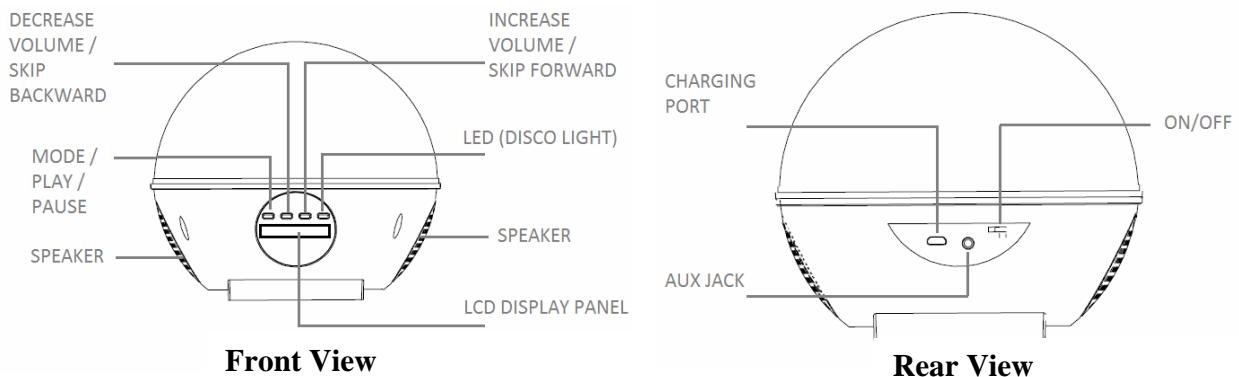

INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the speaker before its first use.

1. Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. The Red LED at the back glows indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take 5 to 6 hours to fully charge the battery.

Note: In order to have better battery life, please do not charge for over 8 hours.

Turn On/Off the Speaker

1. To Turn "ON" slide the "POWER ON/OFF" switch to the ON Position.
2. To Turn "OFF" slide the "POWER ON/OFF" switch to the OFF Position.

Setting the Clock

1. Turn ON the speaker.
2. Press Mode button once to adjust the clock. Press V+ / V- to adjust the clock and press Mode button once to confirm the clock settings. The steps are Hour – Minute – Exit.

LED Disco Light

1. By default, the LED Lights turn On, once you've turned On the speaker. If you wish to Turn off the LED lights, long-press the LED button until you see "LOFF" on the LCD Display Panel.
2. To turn On the LED Lights On, long-press the LED button until you see "ON" on the LCD Display Panel.
3. To change the Disco Light Pattern, turn on the LED Lights. Short press each time the LED button and select the desired pattern.

Turn the speaker to Bluetooth pairing mode -

1. Turn ON the speaker.
2. Long press the Mode button repeatedly until you see “bt” on the LCD Display panel.
3. You would hear the beep tone; the speaker is now in pairing mode.

(Note: Speaker automatically pairs with the previously paired devices)

Pairing your device with Bluetooth Speaker –

Your **Bluetooth Speaker** can wirelessly stream audio from any Bluetooth enabled device within the distance of 27-33 Feet. Simply follow the below steps.

1. Turn ON the speaker.
2. Select Bluetooth mode.
3. You would hear the beep tone; speaker is now in pairing mode.
4. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
5. It will search for various devices.
6. The pairing name of our Bluetooth Speaker is “DPS-8/6093”, pair it with this device.
7. If required, enter the password ‘0000’ to confirm to finalize pairing.
8. Once paired successfully, you would hear a beep tone.
9. If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Select your favorite song at the Bluetooth device and music would now stream through bluetooth speaker.

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Use the Volume Controller located on the control panel to adjust the volume to your desired level; long press V+ to increase the volume or long press V- to decrease the volume
Pause	Playing music	Press ► once to pause the music
Play	Pause	Press ► once resume the music
Skip Forward / Skip Backward	Playing music	Short press ► to skip forward the track. Short press ► to skip backward the track.

Listening to Music using AUX-In Mode

1. Turn on the speaker.

2. Long press Mode button each time until you see “AUX” displayed on the LCD Display Panel.
3. Plug the 3.5 mm Aux in cable (included) to the Aux in jack of the speaker. And, the other end of the cable connects to the audio device (such as computer / tablet /etc.).
4. Select your favorite song at the source device.

(Note: While using AUX-In function, all functions such as Skip Forward/Backward would work from your audio device.)

FM Radio

1. Turn ON the Speaker.
2. Long press Mode button each time till you see “Lod” on the LCD Display Panel.
3. Insert the audio cable provided into the Aux-In slot; this serves as FM Antenna as well.
4. Press “PLAY/PAUSE” once and the device would automatically search and store all the FM Radio stations.
5. Short press “SKIP FORWARD” or “SKIP BACKWARD” to change the FM Radio station.

Tips!!

1. Press the “Mode” button to switch different functions of the speaker. Order of the functions is: FM Radio / AUX-In / Bluetooth / Time Display. *Current display time will be reset to 00:00 AM when you long press the “Mode” button.
2. Turn OFF the device when not in use, in order to conserve power.
3. Do not charge the unit over 8 hours. This might deteriorate battery life.

Do's and Don'ts

Do not play music at excessive levels. Damage to hearing and/or equipment may result.

Do not use outdoors in wet or in damp surroundings.

Specification

Bluetooth version	: 2.1
Speaker Output	: 2 x 3Watts
Unit Size	: 6.5”x 6.5”x6.0”
Unit Weight	: 527g
Play time	: Up to 3 hours
Charge Voltage	: DC5V (USB)
Bluetooth Range	: 27 - 33 Feet
Built-In Rechargeable	
Battery	: 3.7V / 1500mAh

(Note: Battery life & charging time may vary, based on usage & types of devices used.)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

The crossed out wheelie bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.

FCC Instructions

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.