

CONTROL RANGE



When the car is driven beyond radio signal range, there could be a loss of control. The distance range for most radio-controlled car is approximately between 30 Feet when operating outdoor. (The range is also subject to radio interference.) Hold transmitter antenna up high for best reception.

INTERFERENCE

Erratic behavior or loss of control of car is sometimes caused by other cars operated on the same frequency channel in an area surrounded by high-tension wires, telephone poles with high-voltage transformers, boats operating CB radios, or even certain buildings. If you encounter this type of behavior, move to a better location to captain your car.



Built-in Ni-Cd Battery

This product utilizes dual built-in Nickel Metal Hydride(Ni-Cd) rechargeable batteries. Under normal operating conditions, this product could be recharged up to 300 times.

This device complies with part 15 of the FCC. Rules Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

USAGE MANUAL (1:48 SCALE) FULL FUNCTION RADIO CONTROL

ROTOR MOTOR

Not suitable for children under 3
Read through this manual before use
Use under adult's guidance

Item No.-93074

BATTERY INSTALLATION

TRANSMITTER



Use 3xAA(UM-3)
R6 alkaline
(1.5V) batteries



CHARGER



Use 3xAA(UM-3)
R6 alkaline
(1.5V) batteries



Remove the screw.
Lift cover to place
batteries into the
battery compartment


TO CHARGE



HINTS WHEN USING BATTERIES

1. Do not use old and new batteries or batteries of different types at the same time. When changing batteries, always replace with a new set of batteries.
2. Do not use non-rechargeable batteries with rechargeable batteries or rechargeable batteries of different capacities.
3. Observe the polarity marks on the batteries and match them according to the battery compartment markings.
4. Remove all batteries from the Transmitter when not in use for an extended period of time.
5. Misuse of the built-in rechargeable battery may lead heat, break, fire or leak of electrolyte. Please pay enough attention to the following cautions.
6. Please charge the battery only when it's fully stopped. Never charge a car that has been fully charged to avoid danger caused by excessive charging.
7. Stop using whenever it's well to avoid short-circuit.
8. Never throw the battery into water or fire or disassemble or weld it.
9. Do not use, charge or store the toy near a fire source or in hot and humid place.
10. Use only special charger for charging purpose.

FEATURES

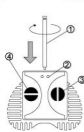

- 1 Aerial
- 2 Indicator
- 3 L/R Turn Key
- 4 F/B Turn Key
- 5 F/R Wheel
- 6 Charging Jack
- 7 Charge

SAFETY CAUTIONS

Never give this toy to children under 3.
Playing caution, keep your fingers, hair, and clothes away from the wheels to avoid accidental damages.
Do not try to catch the car by hand while it is in action.
Keep the transmitter and the car away from any heat sources, such as electric stove, gas stove, or strong sunlight.
Do not play with it in a dangerous place, such as on a road, or on a slope.
Do not wet the car. Do not play with it outdoors in a rainy day.
Do not play with it on the sands.
Do not allow children to disassemble the transmitter on the car by themselves.
If the car is broken during use, it should be checked by adult or repaired, when necessary, by professional technician before it can be reused.



OPERATIONS

1. Fully extend the aerial on the transmitter.
2. Use the control key-press on the transmitter to control the car to run or perform various stunts.

1. FORWARD RUN



2. FORWARD



3. BACKWARD RUN



4. BACKWARD RUN



5. TURN LEFT



6. TURN RIGHT



7. ROLLOVER STUNTS

