


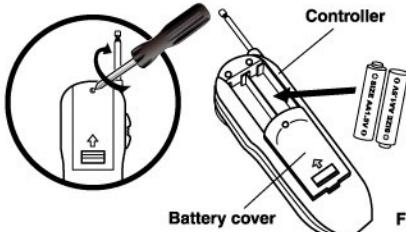

Install 2XAA size alkaline batteries with polarity as shown inside battery compartment.

To remove the battery lid, use screwdriver to turn the screw in anti-clockwise.






The controller is full function. To make the car go, push the forward or reverse button. The car will turn left and right when the left or right button is pushed. The car will only turn left and right when it is moving in forward or reverse direction. The operating light will come on when car is in use. When indicator light becomes faint, it is time to replace batteries. While operating controller, make sure antenna is fully extended.



FCC ID# REKFF49B

1:64 RADIO CONTROL MINI SHOOTING STAR OPERATING INSTRUCTIONS

To charge the car, open cover at the bottom of controller. Align metal nodes on controller with the nodes on the car and place car onto controller. The charging indicator light will come on when car is charging. After a full charge (approx 45 seconds) the light will turn off. Take car off of controller.

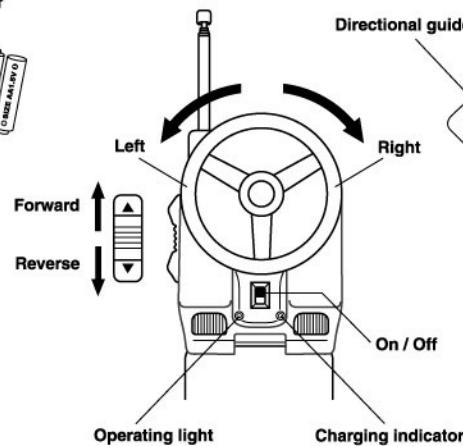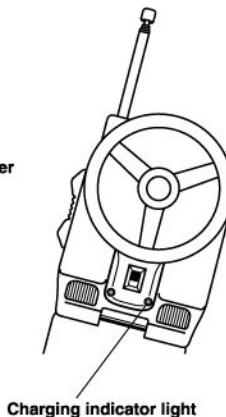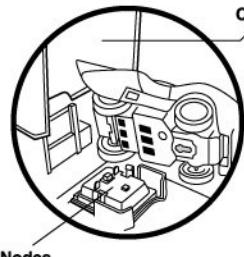

Occasionally the car will sway left or right while moving in forward or reverse direction. To correct this, adjust the direction guide on the bottom of car as shown in the illustration below. This may need to be done a few times while operating car. For best results operate on a smooth dry surface. Radio waves control this toy and can easily be interrupted. Avoid using near phones, electrical lines or CB's. The manufacturer is not responsible for radio or TV interference caused by unauthorized modification of this equipment. Such modifications could void the user's authority to operate the equipment.

WARNING:

Non-rechargeable batteries are not to be recharged.
•Rechargeable batteries are to be removed from the toy before being charged.
•Rechargeable batteries are only to be charged under adult supervision.
•Different types of batteries or new and used batteries are not to be mixed.


•Only batteries of the same or equivalent type as recommended are to be used.
•Batteries are to be inserted with the correct polarity.
•Old batteries are to be removed from the toy.
•The supply terminals are not to be short-circuited.

NOTE :THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



Install 2XAA size alkaline batteries with polarity as shown inside battery compartment.

To remove the battery lid, use screwdriver to turn the screw in anti-clockwise.

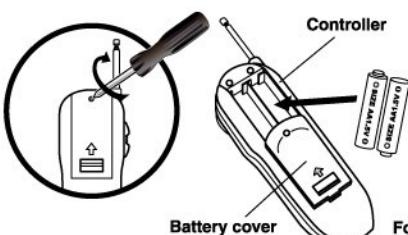



The controller is full function. To make the car go, push the forward or reverse button. The car will turn left and right when the left or right button is pushed. The car will only turn left and right when it is moving in forward or reverse direction. The operating light will come on when car is in use. When indicator light becomes faint, it is time to replace batteries. While operating controller, make sure antenna is fully extended.



FCC ID# REKFF27A

1:64 RADIO CONTROL MINI SPEED RACER OPERATING INSTRUCTIONS

To charge the car, open cover at the bottom of controller. Align metal nodes on controller with the nodes on the car and place car onto controller. The charging indicator light will come on when car is charging. After a full charge (approx 45 seconds) the light will turn off. Take car off of controller.

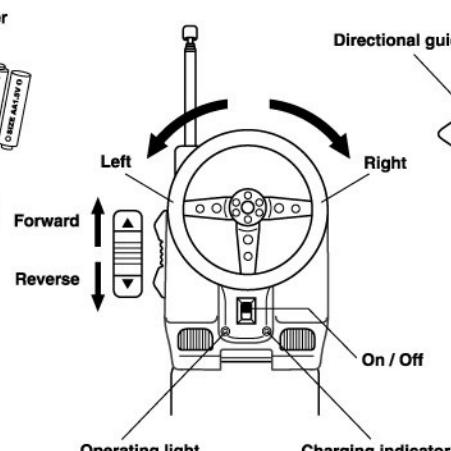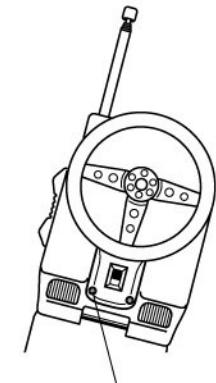

Occasionally the car will sway left or right while moving in forward or reverse direction. To correct this, adjust the direction guide on the bottom of car as shown in the illustration below. This may need to be done a few times while operating car. For best results operate on a smooth dry surface. Radio waves control this toy and can easily be interrupted. Avoid using near phones, electrical lines or CB's. The manufacturer is not responsible for radio or TV interference caused by unauthorized modification of this equipment. Such modifications could void the user's authority to operate the equipment.

WARNING:

Non-rechargeable batteries are not to be recharged.
•Rechargeable batteries are to be removed from the toy before being charged.
•Rechargeable batteries are only to be charged under adult supervision.
•Different types of batteries or new and used batteries are not to be mixed.

•Only batteries of the same or equivalent type as recommended are to be used.
•Batteries are to be inserted with the correct polarity.
•Old batteries are to be removed from the toy.
•The supply terminals are not to be short-circuited.

NOTE :THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.