



<http://www.potaz.com>

Digital multi player **pOTaZ™**

PM-101T/102T/105T(E)
User's Manual



Version 1.0

Thank you for choosing this product.
Please read carefully this manual before you start to use.

Caution



For optimum performance and safety, please read carefully the following instructions.

*. Safety Notes

1. Do not use the product at the following places.
 - Direct expose to high temperature(over 60°C)
 - Isolation in closed space such as inside of a car
 - Humidity
 - Direct expose to sunlight or heat
 - Dusty place
2. Do not apply heavy shock to the unit.
3. Do not use while driving or walking to avoid accident.
4. Do not use the device in places where aviation or electronic equipment is restricted.

*. Warnings on Battery

1. Do not disassemble or attempt to dispose of batteries in fire.
2. Any surface contact to electrolyte should be cleansed out with water, and if electrolyte enters the eyes, rinse out with clean water and seek medical treatment immediately.

*. Discard batteries promptly, if problematic symptoms like smoke or deformation from heat occur.

*. Check the remaining capacity of batteries before recording, for the recording stops if the batteries become exhausted.

*. Beware that we cannot warrant any damage or third party liabilities out of using the unit.

*. Make sure that any memory or data loss due to other reasons than the breakdown or repair of the device are not on warranty list.

Contents



● Product feature -----	3
1. Package contents -----	5
2. PC requirements -----	6
3. Exterior view and displays -----	7
4. Basic functions of MP3 player ---	8
(1) To listen to music	
- Power on/off	
- Playback/Pause/FF&REW	
- EQ mode/3D surround sound	
- Volume up/down	
(2) A-B Repeat	
(3) Using various playback modes	
(4) Browser function	
5. Additional features -----	15
(1) FM Radio(Listening/Recording)	
(2) Voice recorder	
(3) Direct encoding	
6. Using menu keys -----	19
(1) Setting equalizer	
(2) Setting record	
(3) Setting system	
(4) Managing memory	
7. UMS function -----	25
(1) Installing/Removing driver	
(2) Using UMS	
8. MANAGEMENT program -----	28
(1) Running the program	
(2) Display	
(3) Button keys and menus	
(4) Disk mode	
(5) Upgrade mode	
(6) Other functions	
9. E-MAILING program -----	40
(1) Installing/Removing Plug-In Mail	
(2) Getting started Plug-In Mail	
(3) Account manager	
(4) Address manager	
(5) Favorites manager	
(6) Folder menu	
(7) Mail menu	
(8) Opening mail	
(9) Print menu	
(10) View/Help menu	
(11) Other important information on E-MAILING program	
10. Appendix -----	55
(1) Check points before enquiry	
(2) Warrant	

Product features



(1) Supporting Multi-Codec

- Supports playback for MP3 and WMA files.

(2) E-Mailing

- You can check your e-mail and internet explorer favorites almost anywhere even on your trip with Plug-In mail program in the POTAZ, just by connecting the device to the PC. You can upgrade the speed of your business.

(3) Removable storage device

- Provides USB mass storage function usable as a removable hard disk, which enables to save data whenever or wherever with Windows Explorer without extra driver.

(4) FM radio & recording

- Provides auto scan and channel memory to let you listen to FM radio easily. You can record sound anytime while listening to FM radio. And you can experience recording sound of the best quality just as original sound.

(5) Best quality sound

- Brings you the full, eloquent sounds of the best quality as original sound. You can enjoy exquisite sound effects with 3D surround sound. (Sound effect functions may be different with each model.)

(6) Plug & Play

- You do not need any additional program. You can use right away just by connecting to the PC.

(However, You have to install an extra program on Windows 98)

(7) Language study function(A-B Repeat)

- the POTAZ is the best product for language study with its A-B repeat function.

(8) Various EQ Modes

- You can enjoy versatile sound effects with Normal, Rock, Pop, Classic, Live and user mode.

(9) Direct encoding

- Provides direct encoding function, which enables you to convert tracks from your Walkman or CDP to MP3 file in real-time.

(10) Voice recording

- Provides voice record function, which enables you to record meeting or lecture for maximum eight and a half hours. You don't have to worry about missing important data.

(11) Stylish design and accessories

- The innovative design of the POTAZ with versatile colors and its aluminum cover case create a classy look.

(12) Easy control(Jog Button)

- You can control functions easily with jog button.

(13) Supporting multi-language

- the POTAZ services diverse languages including Korean, English, Chinese, Japanese.

(14) Folder navigation

- Supports maximum 256 folders and 1000 files. You may categorize tracks by singer, period, genre and so on.

(15) Firmware upgrade

- You can regularly update the latest functions for this device.

(16) Ultra-lightness

- You can enjoy fist-sized the POTAZ while moving or exercising and you even can put it around your neck because it weighs only 32 g.

(17) Playback over 10 hours with an AAA battery

- Enables to playback continuously over 10 hours.

 
1. Package contents



PLAYER



CASE



USER'S MANUAL



NECK STRAP



USER'S CD



 
BATTERY



EARPHONE



LINE-IN CABLE



USBCABLE

2. PC requirements




- * IBM compatible computer with above 100MHz CPU of AMD or Intel Pentium
- * Minimum 32MB memory (64MB recommended)
- * Port supporting USB 1.1 or higher
- * CD-ROM Drive (for S/W Installation)
- * Operating System
: Microsoft Windows series (98SE, ME, 2000, XP or higher)

* Specifications

Model Name	PM-101T/102T/105T(E)	
Dimensions (W×H ×D)	25 mm×85 mm×25mm	
Weight	32g (battery excluded)	
Memory	Default Memory: 128MB, 256MB, 512MB	
Battery	1 AAA Alkaline	
Continuous playback time	More than 10 hours	
Earphone output	Normal MODE	8.5mW+8.5mW
	User MDDE	20mW+20mW
S/N (Sound-to-Noise) ratio	92db	
Frequency range	20Hz-20KHz	
Transfer rate	4Mbps	
Computer interface	USB1.1	

These accessories are subject to change for performance improvement or user's convenience without any prior notice.

3. Exterior views and displays

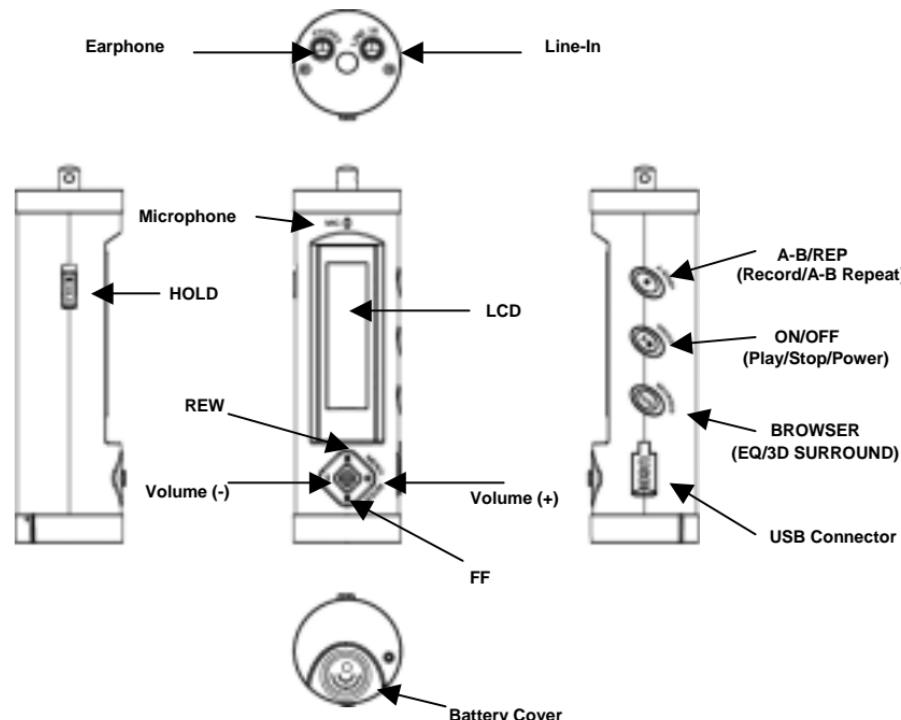

4. Basic functions of MP3 player

(1) To listen to music

POWER ON



Press the Play button long.



long

PLAY



Press the Play button short when the power is set to on.



short

POWER OFF



Press the Play button long when the power is set to on.



long

PAUSE



Press the Play button short during playback.



STOP



Push the Jog button to the FF/REW position during pause.



EQ MODE



Press the EQ button long and adjust the EQ in the box.

long

NOMAL, CLASSIC, LIVE, POP, ROCK modes Are available. For more information on the User mode, refer to the "Using menu keys".

FF/REW



Push the Jog button to the FF/REW position during playback.



You can explore the music by pushing The Jog button 5 Sec to the FF/REW Position during playback

3D SURROUND SOUND



Choose the mode with Jog stick and press the Jog button. ("√"mark shows your choice)

 


(Only available in models including the character 'E' at the closing point of the name.)

VOLUME UP/DOWN



Push the Jog button to the +/- position to adjust volume.




2) A-B repeat

To set the start A-B repeat



 
Press the A-B button shortly during playback to set A-B repeat start.



To set the end A-B repeat



 Press the A-B button once again shortly after A-B repeat start. Then it starts to play A-B repeat.



To release A-B repeat




Press the A-B button once again shortly during A-B repeat to Release A-B repeat.




3) Using various playback modes


All file mode

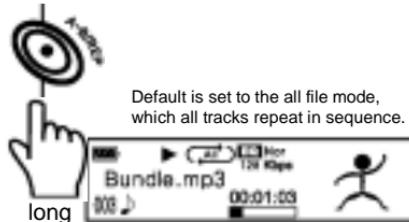


Random mode

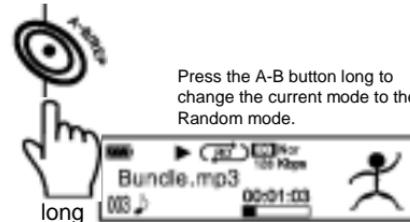


Repeat all folders random

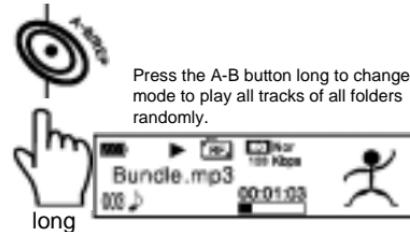


All tracks once

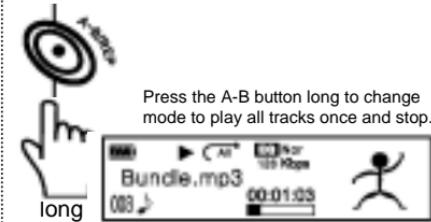

Single file mode

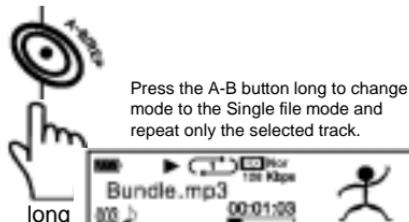

Repeat all folders

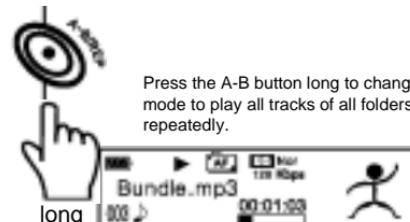

Playlist



* To edit playlist, refer to the "MANAGEMENT program"


* If no playlist exist, you can not see this mode.

4) BROWSER function

BROWSER function




Press the EQ button shortly during stop or pause to use file browser.

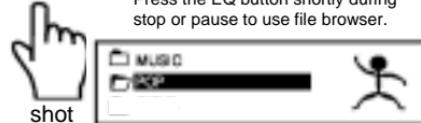

To move to a folder



Use the +/- button in the browser mode to go to a different folder.

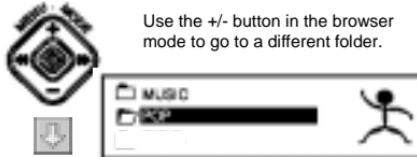


To delete a file or folder



Press the Jog button long in the browser mode to delete a selected file or folder.



 long




To playback the selected track



Press the Play button shortly to playback the track.



 
short



To go to the parent /sub folder




Press the FF/REW button in the browser mode to go the parent/sub folder. Press the Jog button shortly to select a folder.

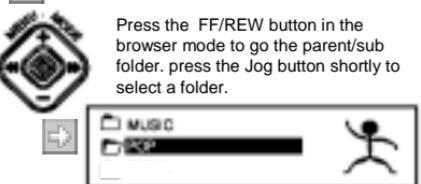

To show a folder




Press the REP key shortly to see a playing folder. Then press the REP key once again to return.

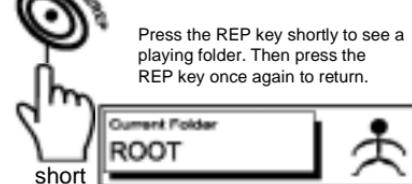

To exit the Browser mode



Press the EQ button shortly in the browser mode to return to the previous mode.

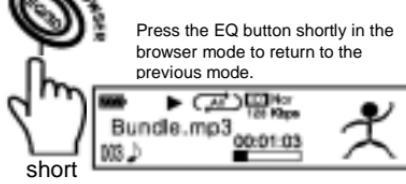


5. Additional features

1) FM RADIO (Listening/Recording)

To listen to FM radio




Press the Jog button long during playback, stop or pause to listen to FM radio.

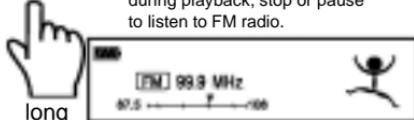

To search and save channel automatically




Press the EQ button long in the FM Mode. Then the device to search and save up to 20 channel automatically.

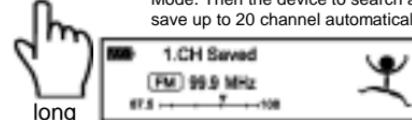

To save channel manually



 Use the FF/REW button to search frequency in the Manual mode and press the EQ button shortly to display the save window. Then, press the EQ button once Again to save the channels.




* Press The play button shortly to cancel "save".

* You can save up to 20 channels. Channels detected by Automatic Channel Search are saved with (■) sign and ignored channels are marked with (■■).

To move to the saved channels(Channel mode)




Press the Jog button shortly In the FM mode to display the channel. Press the FF/REW button to change channels and press the Jog button once again to return to the Manual mode.

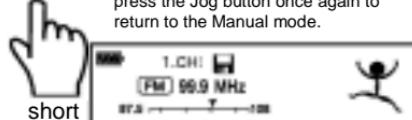

To start recording FM




Press the REP button in the FM mode to start recording.

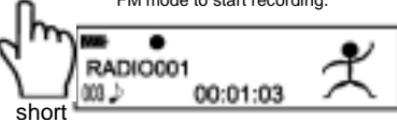

To finish recording & Return to the FM



Press the Play button during FM recording to finish recording. If recording is finished, the mode will return to the FM mode automatically.

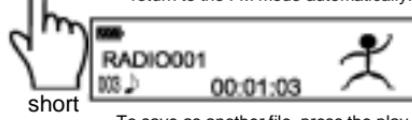


To save as another file, press the play button during FM recording, and press the recording button again.

To pause recording



Press the REP button to pause FM recording. press it again to restart recording in a same file.

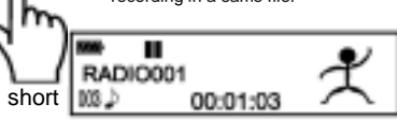


* Recorded files are saved with names such as RADIO001, RADID002 in the "Recorded" folder.


2) Voice Recorder

(For recording setup, refer to "Setting record" section of "Using menu keys")


To start voice recording

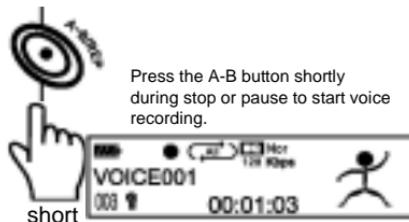


To finish recording

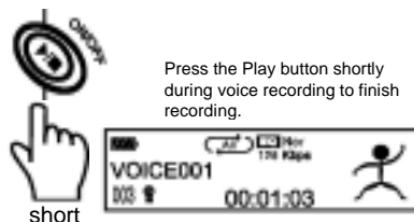

To playback recording

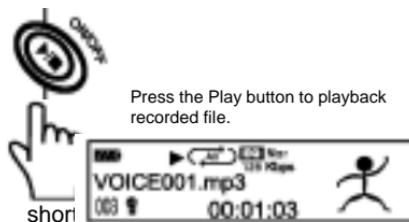


To pause recording

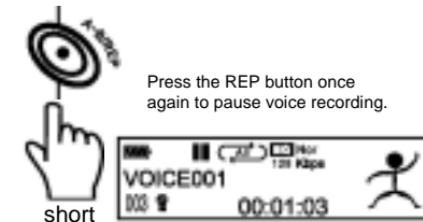


3) Direct Encoding

Step 1

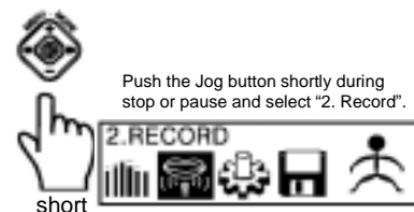

Step 2

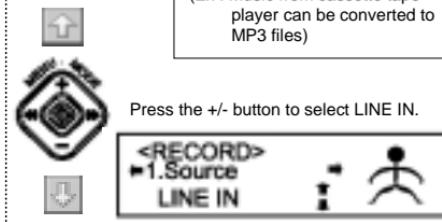

* What is direct encoding?


Direct encoding is the function to convert audio data from other devices to MP3 files in real-time.
(Ex : Music from cassette tape player can be converted to MP3 files)

Step 3 Ex) Connecting to CDP



Connect the cable between line-out port of CDP and line-in port of the mp3 player. Then, playback the CDP.


To start direct encoding

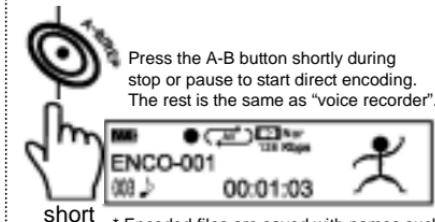

* Encoded files are saved with names such as ENCO001,ENCO002 in the "Recorded" folder.(The volume during encoding is the maximum playback volume.)


6. Using menu keys

To go to menu

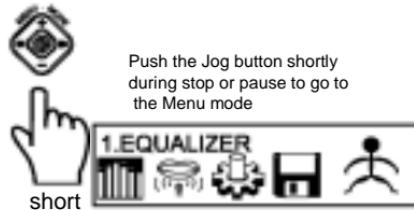

2) Setting record


2-1. To set source

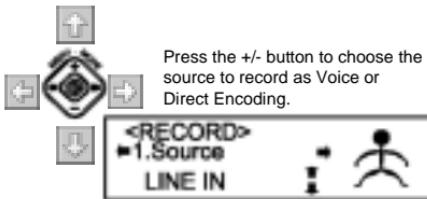


Press the FF/REW button to change the menu.
Press the Jog button or use "5.Exit" to exit the current settings.

1) Setting equalizer

1-1. Adjusting user EQ

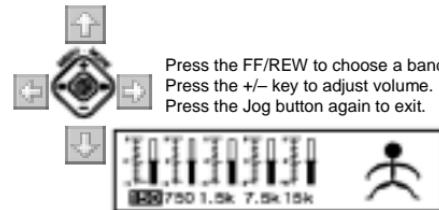


2-3. To set SYNC

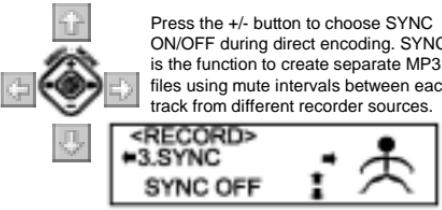


SYNC On is recommended for recording many music files.

3) Setting system


3-1. To set Play Speed

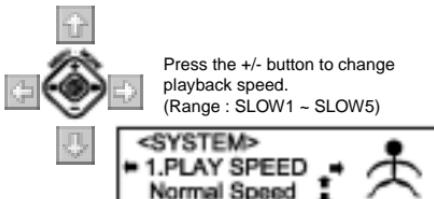

2-4. To set VAD

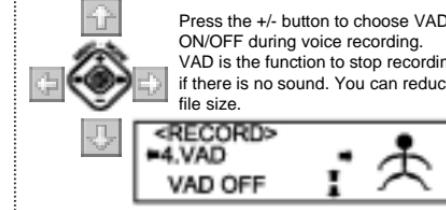


3-2. To adjust FM sensitivity

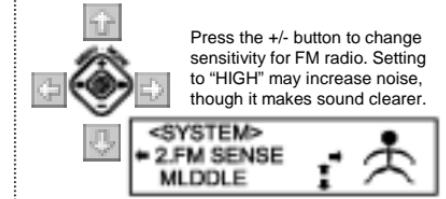


Set the sensitivity to "High" only when sound is not good with "MIDDLE".


3-3. To adjust LED on time

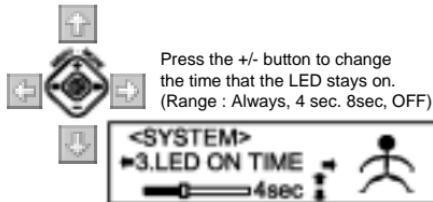


3-4. To adjust LCD contrast

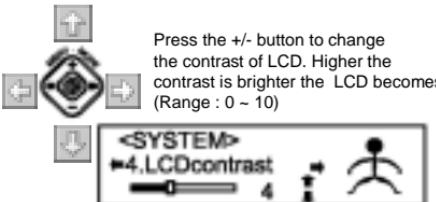

3-5. To select supporting language

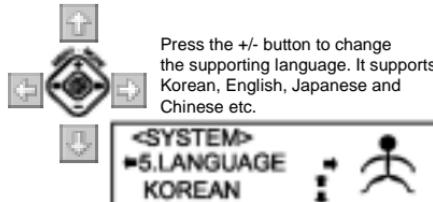

3-6. To go to the Upgrade mode

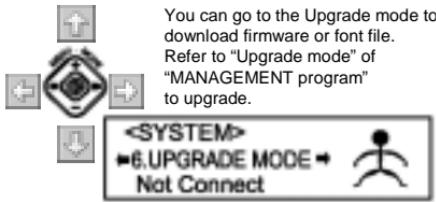


Press the Jog button in "UPGRADE MODE" and connect the USB cable.

4) Managing memory


4-1. Viewing memory size




4-2. Formatting memory

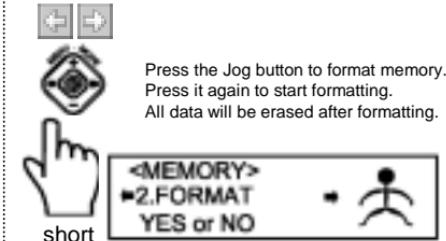

4-3. Low formatting memory

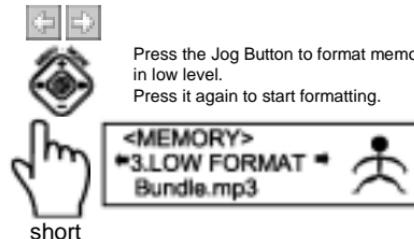

4-4. Deleting a single file

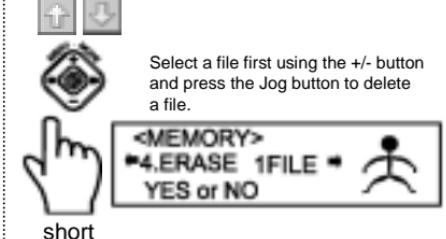

4-5. Deleting all files



Press the Play button shortly
to delete all files in memory.



- If YES or NO is prompted, press the Menu button for YES and move the FF/REW to rightward/leftward for NO.



7. UMS functions



(1) Installing/Removing driver

the POTAZ provides UMS (USB Mass Storage) function, which enables you to use the device as removable disk just by connecting to PC.

You can use the device in Microsoft Windows ME or higher without additional driver.
Microsoft Windows 98 users can utilize the device as removable disk after installing driver as follows.

1. Remove the POTAZ from the PC.

2. Run the "setup.bat" file in the "Driver\Win98DiskDriver" folder of user's CD.



3. Restart the PC if the following message appears after the installation completes.

**All Installation Is Completed !
We Recommend To REBOOT Your Computer**

4. Connect the POTAZ to the PC after restarting.

5. If the following message appears during installation, restart the PC and then install again.


**YOU NEED REBOOT YOUR COMPUTER
and RUN THIS PROGRAM AGAIN !**

6. To remove driver, do as follows.

- Disconnect the POTAZ from the PC.
- Run "uninstall.bat" file in "Driver\Win98DiskDriver" folder of user's CD.
- Restart the PC.

(2) Using UMS


1. If the POTAZ is installed as removable disk, System Device Manager menu appears as follows.
(Device names may be different in each O/S)

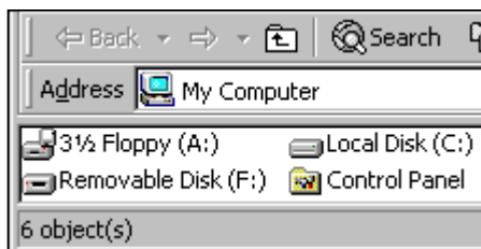


2. To check the POTAZ installed as removable disk, run "My Computer" or "Windows Explorer".
(Drive letters may be displayed differently in each O/S)
3. If the installation is completed, the device can be used with the same method as other hard disks.

(1) Running the program

1. Run "PotazManager.exe" file in "PotazManager\English" folder of user's CD.

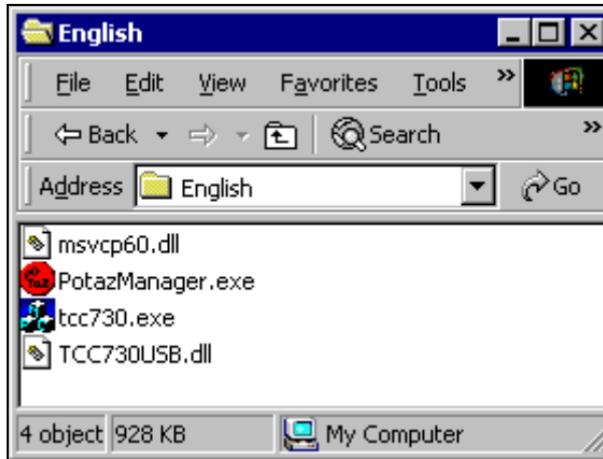

2. To run the program on hard disk, copy "PotazManager\English" folder of user's CD to the relevant hard disk first.
(To run the program, all files as in the illustration are needed.)

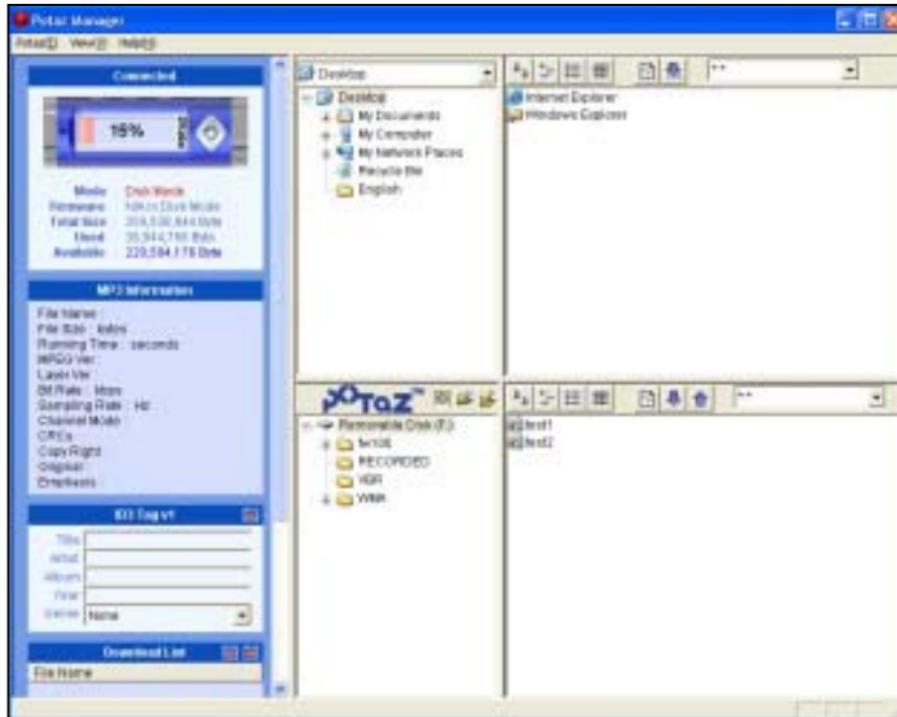

(2) Display

Display of the POTAZ Manager consists of the followings.

- Left Window : displays the POTAZ status, MP3 file information and edits ID3 Tag / Download list.
- Upper Right Window : displays folder and file structure of the computer being connection to the POTAZ.
- Lower Right Window : displays folder and file structure of the POTAZ.
If the POTAZ is being connected in the Upgrade mode, folder/file structure is not displayed.

(3) Button keys and menus



1. Select display method for each Icon.
(Big Icons, Small Icons, List, Details from left)



2. Refresh the current window.



3. Add selected files to the download list.



4. Download files from the PC or upload the POTAZ files to the PC.



5. Display files on the current window by filtering.



6. Update ID3 Tag information of selected files.



7. Delete selected files from the download list



8. Download files from the download list to the POTAZ.



9. Create a new folder or remove an empty one in the selected path.



10. Edit the play list of the POTAZ.


11. "POTAZ" Menus

- Visit POTAZ Homepage : Check the latest information on the POTAZ products.
- Upgrade Firmware : upgrade the POTAZ firmware.
(Beware that the menu can function only in the Upgrade mode)
- Download Firmware : download a firmware file to upgrade from the POTAZ Homepage.

12. View menu : display or hide status bar at the lower side of the program.


13. Help menu : indicate the information about the program.

(4) Disk mode

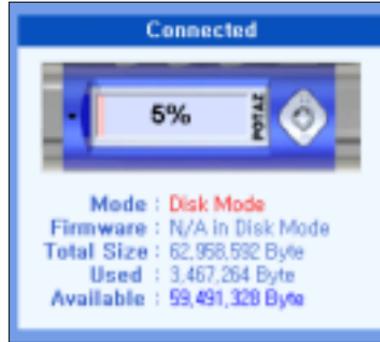


If the POTAZ is being connected in the Disk mode, "DISK Connect" message appears on LCD display. Manager program can perform functions similar to Windows Explorer.


1. Upper left box indicates current status of the POTAZ.
Firmware version may be displayed only in the Upgrade mode.

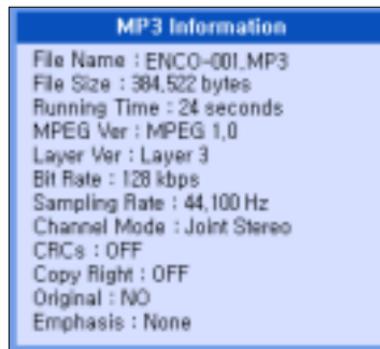

2. Left center box displays detailed information on selected MP3 file.

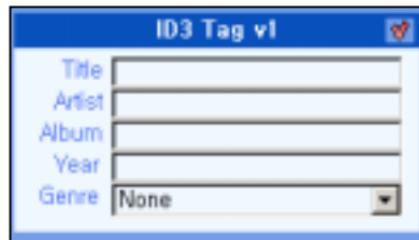

3. Lower left box displays ID3 Tag information on selected file.
User can edit the information on his/her own.
Click the check button to save the changes.

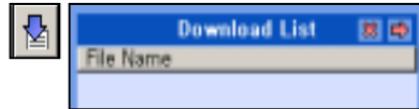

4. Select file(s) to transfer and press the arrow button to transfer files between PC and the POTAZ.

5. To send files of many folders at a time, add them to the download list first.

6. Right-click "DELETE" with mouse or press the "Del" key to delete a file.

7. Other functions concerning files and folders can be operated in the ways similar to Windows Explorer.



8. To change the playback order, Click the button "Edit Playlist".

9. You can add or delete the POTAZ file(Right side) to(from) Playlist(Left side).
Also you can change the order "Up", "Down" button.
With "Sort" button, you can sort the Playlist in name order.

10. After editing of the play list, don't forget to save with 'save' button.

(5) Upgrade mode

1. Installing upgrade driver

You can enjoy improved performance of the device with Firmware Upgrade.
 Firmware upgrade can perform only if the device is being connected in the Upgrade mode.
 To connect the device in the Upgrade mode, Upgrade driver must be installed first.
 (Common in all O/S)



1) Remove the POTAZ from the PC.

2) Run "setup98MeXp.bat" file in "DriverUpgradeDriver" folder of user's CD.
 (Windows 2000 users run "setup2000.bat" file.)

3) Connect the POTAZ to the PC in the Upgrade mode.

(For detailed information, refer to the section of "Using menu keys")

4) If you set the POTAZ to the Upgrade mode, System Device Manager menu appears as in the illustration below.(Device names may be different in each O/S)

2. Firmware download


If the POTAZ is being connected in the Upgrade Mode, "Upgrade mode" message appears on the LCD of the device. And Manager program is run to help firmware upgrade.



- 1) Check your firmware version.
- 2) Go to the "Download Firmware" menu of the "POTAZ" menu and save a firmware file to the PC.
 If you are connected to the POTAZ Homepage, go "Support" or "Download".
 (Version 1.0 is connected directly to the POTAZ Homepage. And automatic check function will be supported later)


3. Firmware Upgrade

1) If firmware file download is completed, run the "Upgrade Firmware" menu.

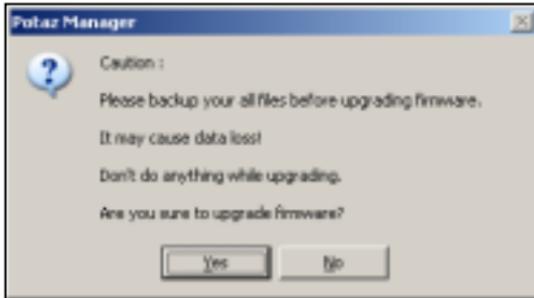


2) If there are important data in the POTAZ, press "NO" to back up the data in different device.

3) Press "YES" to select a downloaded file.

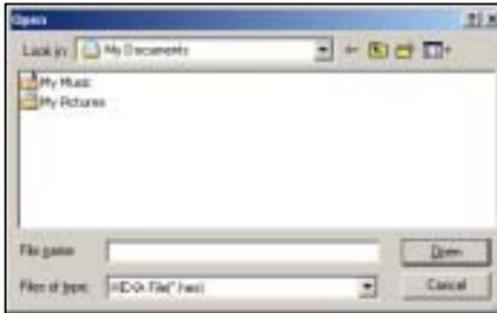

4) Do not perform other tasks while upgrade proceeds.

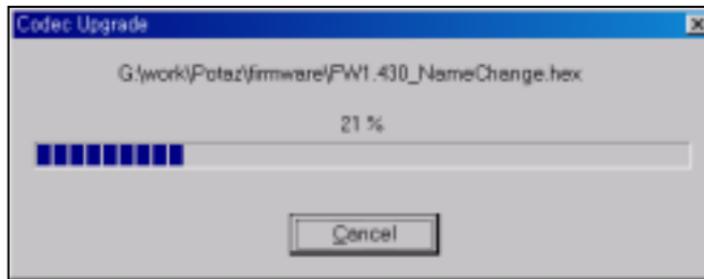


5) If Upgrade is completed, remove the POTAZ from the PC and reconnect it again. The program is finished automatically.




9. E-MAILING program

(6) Other functions

Right-click the mouse on Explore window (from upper right or lower right) to set other functions.

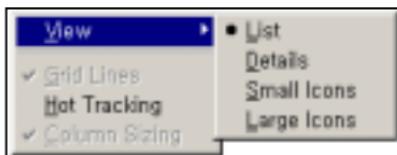

1. View: select a display method for each Icon.
2. Grid Lines: "Details" view function to display lines.
3. Hot Tracking: selects a file automatically. One click can run the file.
4. Column Sizing: column size may be adjusted in "Details" view function.

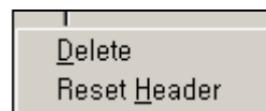

5. Click column header in "Details" view to delete or reset header.


6. When you select the file to copy, the status bar shows the number of files & capacity.

10 Files Selected (51,218,593 Bytes) : Exceed to Copy


(1) Installing/Removing Plug-In Mail



1. Run 'Setup.exe' in 'PlugInMail\English' folder inside the CD.

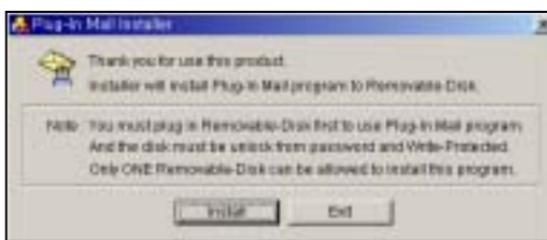

2. When the left dialogue box "Plug-In Mail Installer" appears, then click "Install".

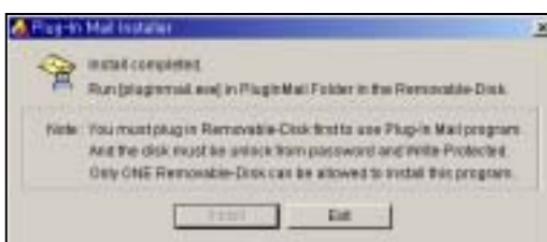

3. When "Install completed" message appears, click "Exit". Then, run the "pluginmail.exe" in the "PlugInMail" folder in Removable-Disk, and start to use the program.

4. The Plug-In Mail program works only in the 'PlugInMail' folder of Removable-Disk.
5. Please delete the 'PlugInMail' folder in Removable-Disk to remove the Plug-In Mail program.
6. When you delete 'PlugInMail' folder, all of your saved data and mails will be deleted.


(2) Getting started Plug-In Mail

Run 'plufinmail.exe' in the 'PlugInMail' folder in Removable-Disk.
Then the program will be started.


1. Each window shows like below.
 - Left, Up : It shows the folder's structure that saves mail.
 - Right, Up : It shows a mail list of the selected folder.
You can read a mail in another new window using double-click or Enter.
 - Left, Down : It shows Address/Favorites list.
You can connect to a new mail & Internet Explorer by double-click.
 - Right, Down : It previews the selected mail of the list.

2. The following are basic folders. So, you can't delete these folders.

- PlugInMail : The folder that drives a program.
you can't move any mail to here.
- inbox : The folder that saves a received mail.
- outbox : The folder that saves a sent mail.

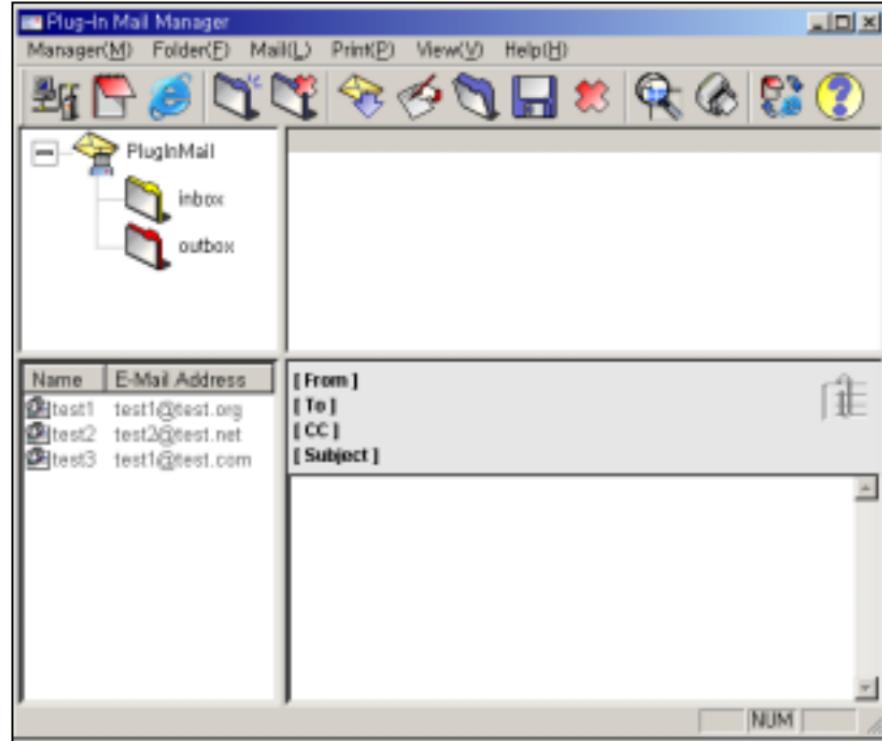


3. The Meaning & Function of each icon on the tool bar is like below.

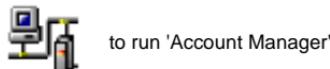


to run 'Account Manager'



 
to run 'Address Manager'




to run 'Favorites Manager'

 


to make a new folder

 


to delete an empty folder

 

to receive a mail from saved account

 

to write a new mail

 

to open a mail



to save as another name



to delete the selected mail



to preview the selected mail before print



to print the selected mail



to toggle Address / Favorites view



Program information


(3) Account manager

Account Manager is for the functions of server address, user's name and password.

Refer to the next, please set up your mail account. If you don't have any information of your account, then ask to your mail server manager.

(Some mail server doesn't support POP3 and SMTP.

Then, you can't use it in mail programs such as the Plug-In Mail, the OutlookExpress, etc.)

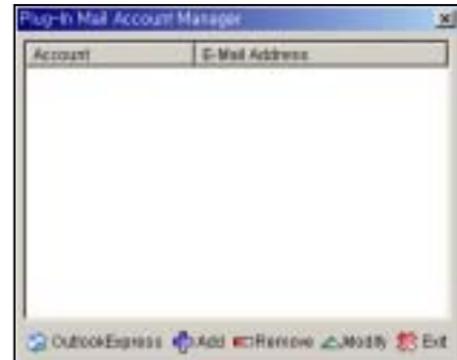

1. When you use this program at first time, or you don't have any saved account, Account Manager will be executed automatically.

2. Load an account from the OutlookExpress : The mail account that is already set up into the OutlookExpress Program of your PC will be added. But, you should enter the password. (In some Vaccine programs, the OutlookExpress mail account was changed to prevent Virus attack. In this case, stop the POP3 supervisory function of that vaccine program During load the account.)

Your Name :	Name of Sender
Account Name :	Name of Account
E-Mail Address :	E-Mail Address of Sender
SMTP Server :	Address of SMTP Server
POP3 Server :	Address of POP3 Server
User ID :	User ID to log on
Password :	Password to log on

3. Add : You have to put your data to set up a mail account.

1. Sort : Sort your address in name order.

Plug-In Mail Address Manager	
Name	E-Mail Address
test1	test1@test.com
test2	test2@test.net
test3	test1@test.org

2. Add / Remove : Add / Remove an address.

Plug-In Mail Manager

	Name : <input type="text"/>	
	Address : <input type="text"/>	

3. A new mail : Write a new mail to the selected address.


(4) Address manager

Plug-In Mail Address Manager	
Names	E-Mail Address
test1	test1@test.com
test2	test2@test.net
test3	test1@test.org

Address Manager is for the functions of user's address-book.

(5) Favorites manager

Favorites Manager is for the functions of user's Internet Favorites(Book Mark). Save Favorites into Removable-Disk, and you can use it in other PCs anywhere.

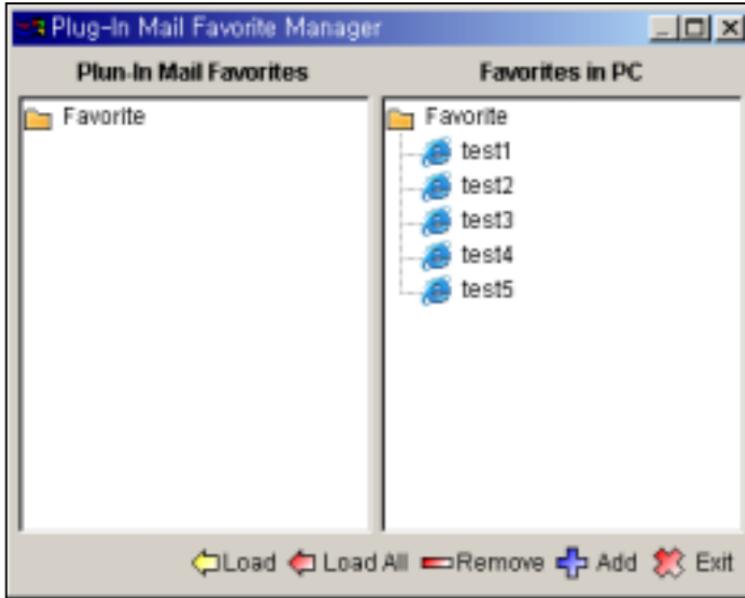

1. Load, Load All : Load some or all Favorites from current PC.

2. Sort : Sort your Favorites in name order.



3. Add : Add a new Favorites.

(6) Folder menu

You can make or delete a folder.

1. You can't make same named folder that already exist.

2. You can't remove a folder that has even a mail or a file inside.

3. You can't remove the basic folders : PlugInMail, inbox and outbox.

(7) Mail menu

Mail Menu is for the functions to receive, write and save a mail.

1. To receive mail

- Receive mails from the server. If there are many servers, it will try to connect one by one.
- If you leave mails in the server after you received all your mails, you can receive same mails in other places.




2. New mail


- To write a new mail.
- Send : Send your written mail to the selected server.
- TEXT/HTML : Choose your content type.
- Change : Choose a sending account from many ones.
- From / CC : you can add an address from your address-book. each address has to be divided by semicolon[;] or comma[,].
- Subject : cursor moves to this line to write a subject.
- Attach a file : attach or delete a file by running 'Attached File Manager'.

3. Open mail : Open a mail in another window.

4. Save as... : Save the selected mail as another name.

5. Remove mail : Remove the selected mail.

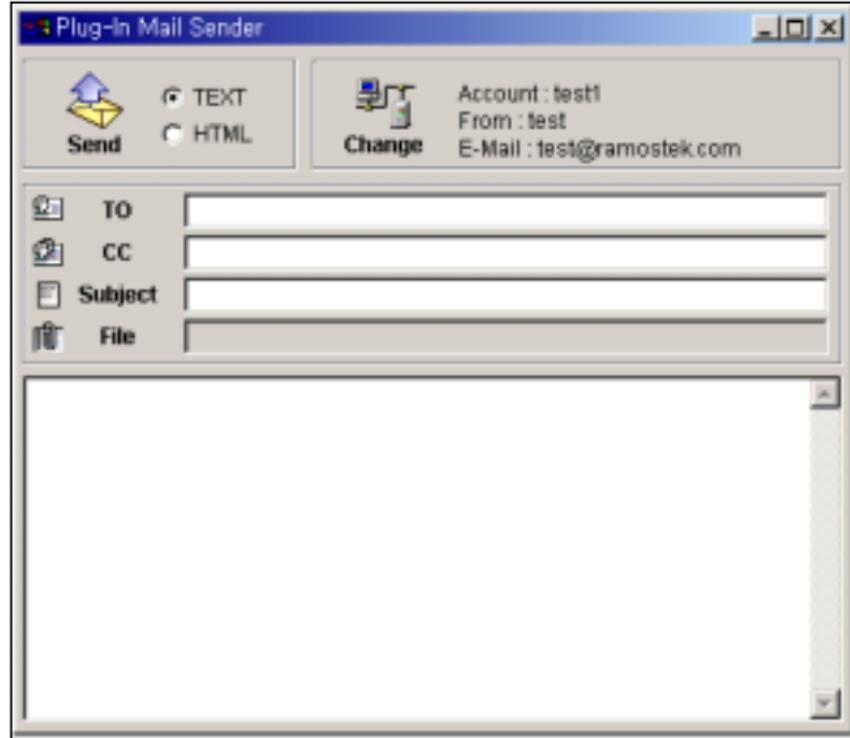

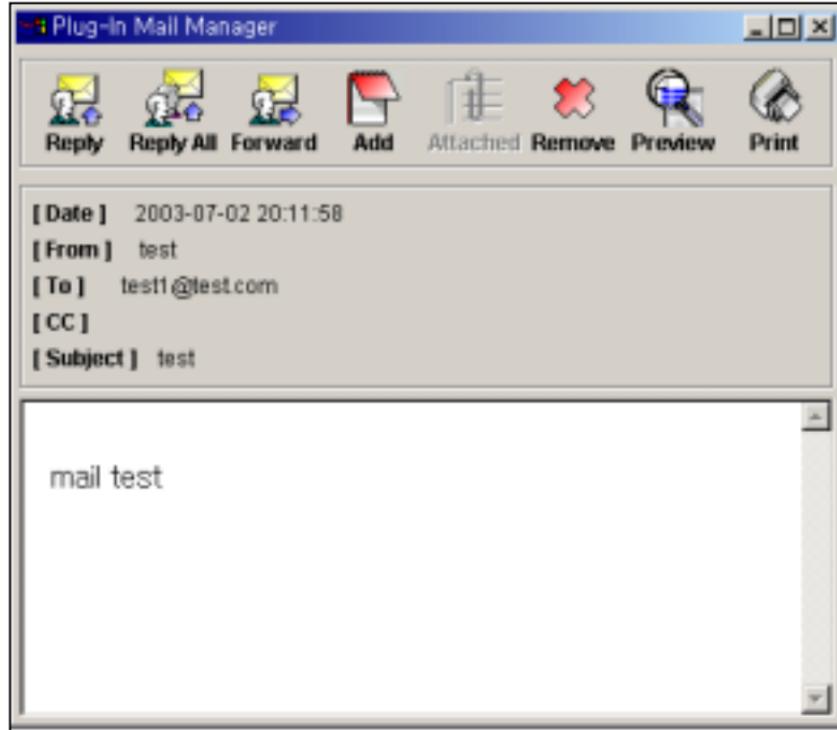

(8) Opening Mail

You can read your mail in a new window, using "open mail" in the menu or "double-click" the mail in the mail list.

1. Reply : to reply to mail sender.
2. Reply All : to reply to all in [From], [CC] list.
3. Forward : to send this mail to another(including attached files).
4. Add : to add all address in the [From], [To], [CC] to address-book.
5. Attached : to save attached files by running "Attached File Manager".
6. Remove : to remove this mail.
7. Preview, Print : to preview or print this mail.


(9) Print Menu

Print menu is for all the functions of mail print.

1. Print Setup : Set up the option of the printer that is connected PC.
2. Print Preview : To preview selected mail before print.
3. Print : Print the selected mail.

(10) View/Help menu

This menu is for setting of program's view.

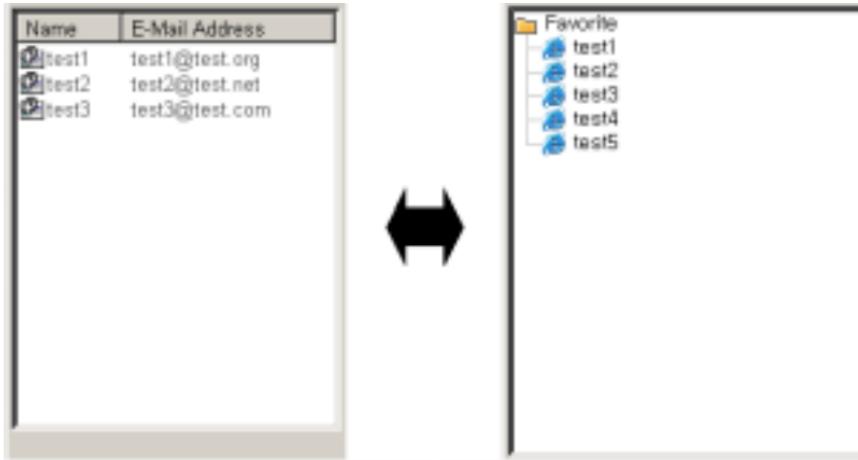

1. Toggle Address/Favorite : To toggle Address and Favorite view in the left-down.
2. To toggle tool bar : make to show or hide the 'tool bar'.
3. To toggle Status bar : make to show or hide 'status bar' in bottom of the window.
4. About Plug-In Mail Manager : You can check program version & language.

(11) Other important information on E-MAILING program

1. Shortcut Key & Additional function

- Receive mail : F5
- Select all in the mail list window : A
- Remove the selected mail in the mail list window : Del
- Open in new window in the mail list window : Enter
- Sort mail list in the mail list window : Click the Header(From, Subject, Date) that you want to sort by order.
- Remove the selected folder in the folder list window : Del
- Write a new mail in the address window : Double-click
- Connect to Internet Explorer on the Favorite window : Double-click
- Run the attached file in "Attached File Manager" : Double-click

2. Program Update

- You can check your program version in Help menu : "About Plug-In Mail Manager".
- Please visit our Homepage to update the program.
- Homepage : <http://www.potaz.com>
[http:// www.rundisk.co.kr](http://www.rundisk.co.kr)

3. Inquiry & update requirements

- If you have any questions about our products or programs, Please call us or leave your opinion in our homepage. We're ready to answer with our best.

10. Appendix



(1) Check points before enquiry

If the device does not function properly, please check once again before enquiry!

1. If the power doesn't turn on.
 - Check the remaining battery capacity.
 - Check if the battery is inserted in according to its polarity marked in compartment.
 - Try to turn the power on again after extracting and reinserting the battery.
2. If there is no sound or too much noise.
 - Check if the volume is set to "0".
 - Files with damaged data can cause noise or break. Try to playback a different file.
3. If FM radio is not received.
 - Try different directions for earphone.
 - Move to window side if you use the device indoors.
 - Check if earphone is being connected properly. Earphone functions as antenna for reception of radio signal.
4. If LCD displays unidentifiable letters.
 - Go to MENU -> 3. SYSTEM -> 3. LANGUAGE and check if language is set properly.
5. If you can't download.
 - Check if the computer and the player are being connected properly with USB cable.
6. If the device cannot recognize files or stop playback
 - Check if it is identified as removable disk, back up and format the data.
 - Go to MENU -> 4. MEMORY -> 2. FORMAT and try to format again.

2) Warrant

1. This is strict quality-tested product.
2. If customer used the product properly and normally, sales agent of the purchase or registered customer service center will fix any breakdown of the device free of charge during warranty period.
3. If warranty period expires or in case of chargeable service as follows though within the warranty period, service fee will be charged.
 - Breakdown from reckless use
 - Breakdown from any modification or dismantlement at customer's discretion.
 - Breakdown from natural disaster such as fire, drought, flood, or earthquake
4. Present this Warrant Statement always when claiming repair service.
5. Please keep the Warrant Statement, for it is not to be replaced for loss.
6. This Statement is valid only in Korea.

At the time of sales, fill out customer's name and purchase date in the box below.

Product			
Model Name			
Production Number(P/No.)			
Customer Contact No.	Name		
	Contact No.		
	Address		
Date of Purchase		Warranty Period Duration	1 year

Radio Frequency Interference Requirements

Caution: Changes or Modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note.