

Operation Instructions

The following is the operational instruction for your IP-Link 1000.

- 1) Install the IP_Link on your board.
- 2) Using your installation CD, install the Helicomm IP-Software inot you computer.
- 3) Apply power to your module.
- 4) Via your interface cable connect the IP-Link 1000 to the computer.
- 5) Down load the firmware into your module.

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."