

PORTABLE CELLULAR TELEPHONE

# SCH 750/5700/770

User's manual




## Contents


---

To insert battery .....	4
To charge battery .....	5
To turn ON/OFF the phone .....	5
To make phone calls .....	6
To answer incoming phone calls .....	7
To select Bell/Vibe/Lamp mode .....	8
To select ringing tone .....	10
To control volume .....	11
To redial numbers recently connected .....	12
To store phone numbers .....	12
To find speed dial numbers not yet assigned .....	13
To search stored phone numbers .....	14
To call stored phone numbers .....	14
To call without prefixes .....	15
To delete stored phone numbers .....	15
To change security code .....	16
Message services .....	16
Appendix .....	20

# User's manual 750/5700/770

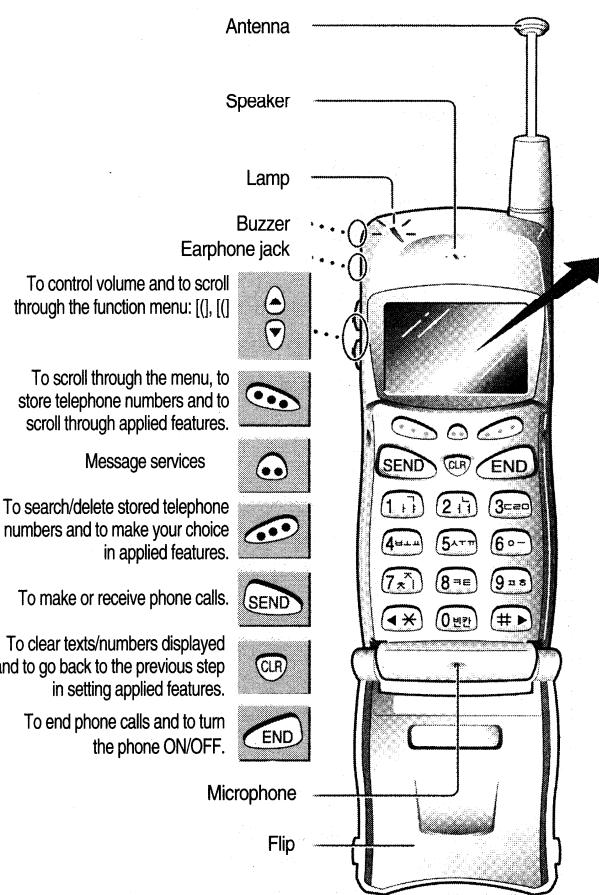


## Display

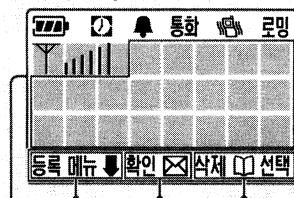


- Displays entered phone numbers, current status, and options in feature setting.
- Symbols represent feature setting status.

	Flashes during dialing; stays on during calls.
	Indicates that you are receiving mobile service from elsewhere than your designated base.
	Current signal strength
	Battery charge level. Full      Insufficient      Charge immediately
	New messages
	Vibration alert mode.
	Alarm is set.
	To store/delete recently connected numbers and stored numbers

## To insert battery

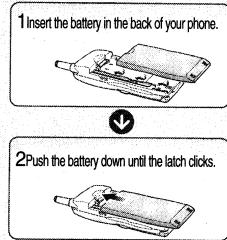


## To remove battery

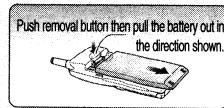 




## To charge battery

Place the battery, attached to the phone, on the charger.

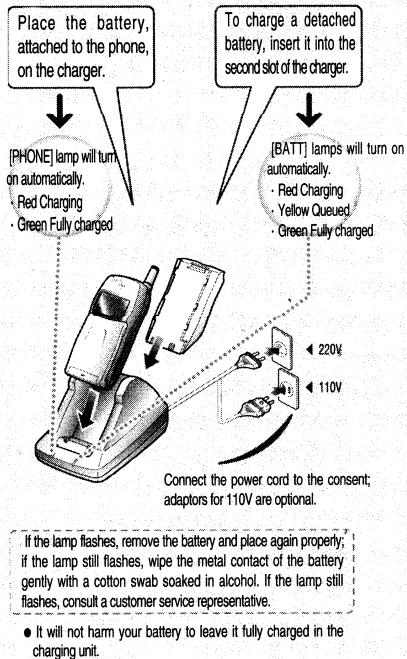

## To turn ON/OFF the phone

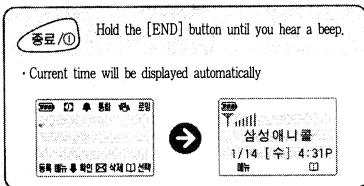

## To make phone calls

- Dial the area code (required) and the number you wish to call.
- Press the [SEND] button.
- To end the phone call, press the [END] button or close the flip.
- If you hold down the last digit of the phone number you are calling, the call will be placed without having to press the [SEND] button.
- Pressing the [DEL] button quickly deletes one number at a time, holding it down deletes all the numbers displayed.
- ' - ' appears automatically.
- When you are connected, you hear the connection beep.
- If you press [SEND] and the call does not go through, the [REDIALING] message will appear and the number will be automatically redialed.
- When you are connected with the base, the call timer function activates. However, you will only be charged from the moment the other party answers.
- If you press the [SEND] button once in standby mode, the last number you dialed will be displayed. Press the [SEND] button again to redial the number.
- If you hold the [SEND] button for a few seconds, the last number you have called will be redialed.



## To answer incoming phone calls


- When the bell rings, open the flip.
- Press any button except the [  ] button if the flip has been already opened.
- To end the phone call, press the [  ] button or close the flip.
- If you have set your Bell/Vibe/Lamp mode to the [VIBE], the phone will vibrate; if you have set it to the [LAMP] mode, only the lamp will flash.
- Press the [  ] or [  ] buttons in the side of your phone to answer calls without opening the flip.
- You will be disconnected automatically if the other party hangs up first.



## To select Bell/Vibe/Lamp mode


These functions alert you of incoming calls by ringing, vibrating, or a flashing lamp.

Press the [  ] button.

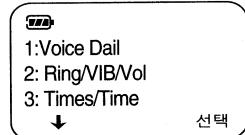


Hold the [  ] button for a few seconds to switch to the [Manner] mode; to switch back to the previous mode you have selected, hold the [  ] button for a few seconds again.

Press the [2] button.

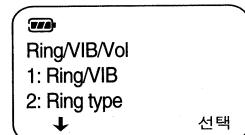


Press the [1] button to select [Ring/VIB]

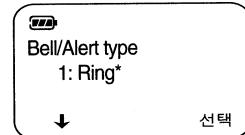


The [  ] sign displayed on the LCD indicates your previous selection.

Using the [  ] button, select the mode of your choice.

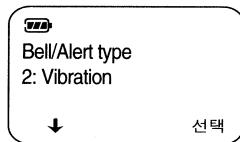

1: Ring	Bell alert mode
2: Vibration	Vibration alert mode
3: Silence(lamp)	Lamp alert mode
4: Vibration&rin	Vibrates twice then bell rings

Press the [  ] button.

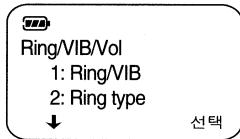


Press the [  ] button.




## To select ringing tone

13 different ringing tones are stored in your phone. Select the tone you want.


Press the [  ] button.

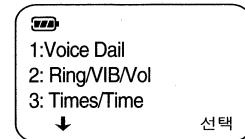

Press the [2] button.

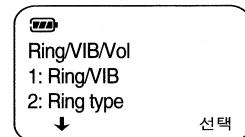

Press the [2] button.

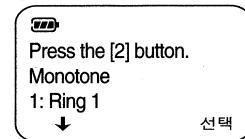

Using the [  ] button, select the ringing tone of your choice.

Press the [  ] button.

Press the [  ] button.



## To control volume

To control the volume of the keypad tones, press the [ $\wedge$ ] or [ $\vee$ ] buttons in the side of your phone while in standby mode.

To control the speaker volume, press the [ $\wedge$ ] or [ $\vee$ ] buttons during phone calls.

To control the ringing tone volume, press the [ $\bullet\bullet$ ], [2] and [3] buttons in the consecutive order. Use the [ $\wedge$ ], [ $\vee$ ] or [ $\bullet\bullet$ ] buttons to adjust the volume. Then press the [ $\text{END}$ ] button.



## To redial numbers recently connected

**Up to 10 numbers recently connected will be stored.**

Press the [ $\bullet\bullet$ ] button.

0 being the most recent, 10 recently connected numbers will be displayed.

Press the [1] button.

Using the [ $\bullet\bullet$ ] button, scroll up/down the 10 numbers you have been connected to, 0 being the most recent.

Press the [ $\text{SEND}$ ] button to make the call.

To delete all the numbers recently connected, press the [ $\bullet\bullet$ ], [5], [Your security code (default:0000)], [6], [ $\bullet\bullet$ ] to choose [YES] then [ $\bullet\bullet$ ] in that order.



## To store phone numbers

Enter the number you wish to store.

Press the [ $\bullet\bullet$ ] button.

Select a speed dial number to assign between 00~79. If you want the speed dial number automatically assigned, press the [ $\text{C*}$ ] button; if you have the [AUTO ADDRESS] function set to AUTO, the speed dial number will be automatically assigned.



## To search stored phone numbers

Press the [  ] button twice.

To store a name, Press the [  ], [  ] buttons to select big or small letters, Press [  ] to enter the name.

To confirm press [  ]

Press the [  ] button.



## To find speed dial numbers not yet assigned.

Press the [  ] button.

Press the [  ] button.

Press the [  ], [  ] or [  ] buttons to find speed dial numbers not yet assigned.

Press the [  ] button.

To search stored phone numbers by name

Press the [  ] button.

Press the [2] button.

Insert the name.

Press the [  ] button.

Using the [  ] button, select the name.

To connect to the number, press the [  ] button.

To search by speed dial numbers

Press the [  ] button.

Press the [3] button.

Using the [  ] button, select the number.

To connect to the number, press the [  ] button.



## To call stored phone numbers

If the assigned speed dial number is between 00~09, just hold down the one digit number for a few seconds.

If the assigned number is [05], hold the [5] button for a few seconds.

If the assigned speed dial number is between 10~79, press the ten digit number then hold down the one digit number for a few seconds.

If the assigned number is [35], press the [3] button quickly then hold the [5] button for a few seconds.



## To call without prefixes

Up to 80 stored numbers and 10 recently connected numbers are stored in your phone. You can find up to 3 numbers with the same last four digits.

Press the last 4 digits; numbers with the same last digits will appear.

Using the [ ] button, select the number.

To connect to the number, press the [ ] button.



## To delete stored phone numbers

Press the [ ] button.


Press the [3] button.

Insert the speed dial number (between 00~79) you wish to delete in two digits.

If the speed dial number is [05], press [05] instead of [5].

Press the [ ] button and use the [ ] button to choose [YES].

Press the [ ] button.

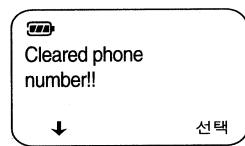

---

PORTABLE CELLULAR TELEPHONE SCH-750/5700/770

---

To delete all stored phone numbers, press [ ], [5], [Your security code (default:0000)] and [5] buttons in that order. Then use the [ ] button to choose [YES]; press the [ ] button.



## To change security code

Default security code is 0000.

Press the [ ] button.

Press the [5] button.

Enter the current security code.

Press the [2] button.

Enter the new security code of 4 digits.

Press the [ ] button.

Press the [ ] button.



## Message services

Message services let you send/receive text, numbers and voice messages. Consult your carrier to find out whether you subscribe to any of these services.

The [ ] sign appears when you receive new

---

PORTABLE CELLULAR TELEPHONE SCH-750/5700/770

---

messages. If the [✉] sign flashes, the new messages are urgent messages. Urgent new messages are also marked by the [URGENT] message.

The [DUPLICATE] message appears if you get the same message more than once. You can store up to 255 messages.

To listen to voice messages, press [✉], [1], [1] then [SEND] buttons in that order.

If a contact number is left with the voice message, you will be connected to the number. If not, you will be connected to a voice message center where you can listen to, store and delete voice messages.

To read received text messages, press [✉], [1] then [2] in that order.

Use the [✖] button to read long messages.

To call the number left with the message, press the [SEND] button.

To read the next message, press the [➡] button.

To read the previous message, press the [⬅] button.

To delete the message, press the [✖] button.



### To delete all received messages

Press the [✉], [1], [3] and [✖] buttons in that order. You can also save messages you send frequently up to 80 numbers/letters.

### To send text messages

Press the [✉] button. Then insert the phone number to which you wish to send the message. Press the [✖] button. Select the delivery speed using the [✖] button. Press the [✖] button. Press the [✖] button again if you wish to save the message to the [SEND MESSAGE], then press the [✖] button again.

### To delete stored messages

\* Press the [✉], [3] then [4] buttons. Using the [✖] button, select the message you wish to delete, then press the [✖] button. Use the [✖] to choose [YES] then press the [✖] button.

### To forward stored messages

Press the [✖], [3] then [2]. Using the [✖] button, select the message you wish to forward. Then press [✖] and [✉].

### To write a new message

Press the [✉], [3] and [3] buttons in the consecutive order. Write your new message. Press the [✉] and [✖]. Then follow the same procedure as shown in P.16.

**To leave just your contact number, press the [  ] button**

 1.Receive Box  
2:HHP Call  
3:Write message  
선택

Press the [2], [your contact number], [  ], [Your contact number] then [CONFIRM]. If the message fails to send, try again.

### **To delete sent messages**

Press the [  ], [4] and [2] buttons in that order. Use the [  ] to choose [YES] then press the [  ] button.

### **To check sent messages**

Press [  ], [4] then [1].

Press the [  ] button to check sent messages.

To read the next message, press the [  ] button.

To read the previous message, press the [  ] button.

To forward the message, press the [  ] button, then the [  ] button.

To finish checking sent messages, press the [  ] button.

To delete sent messages, press the [  ] button.



## **Appendix**

### **I. Message services**

Step 1	Step 2	Step 3	Step 4
	1: RECEIVE BOX 2: HHP CALL 3: WRITE MESSAGE	1: VOICE MAIL 2: TEXT MAIL 3: ERASE MESSAGE 4: MESSAGE ALERT	YES/NO MUTE/ONCE/EVERY 2 MIN
		1: EDIT TEXT 2: LOAD TEXT 3: WRITE NEW TEXT 4: ERASE TEXT	UP TO 10 MESSAGES
		1: SEND MESSAGE 2: ERASE MAIL-BOX	UP TO 10 MESSAGES YES/NO

### **II. Phone book functions**

Step 1	Step 2	Step 3
	1: LAST NUM DIAL 2: RECALL NAME 3: RECALL MEMORY *: STORE IN ADDR #: OWN NUM.DISP~	INSERT YOUR CRITERIA

### **III. During calls**

Step 1	Step 2	Step 3
	1: SPEAKER OFF 2: KEYPAD TONES OFF 3: SEND YOUR NUMBER 4: SEND DTMF	"SPEAKER OFF" IS DISPLAYED "KEYPAD TONES OFF" IS DISPLAYED

## IV. Applied use

Step 1	Step 2	Step 3	Step 4
	1: VOICE DIAL	1: RECORDING 2: DELETE ONE 3: PLAY BACK 4: DELETE ALL 5: AUTO VOICE D...	ON/OFF
	2: RING/VIB/VOL	1: BELL/VIB- 2: RINGING TYPE 3: RING VOLUME	RING*/VIBRATION/SILENCE (LAMP) VIBRATION&RIN MONOTONE (1-6) & MELODY (7-13)
	3: TIMES/TIME	1: WORLD TIME 2: DUAL TIME 3: SET TIME 4: AIR TIMER 5: LAST CALLTIMER	24 CITIES WORLDWIDE
	4: RESERV/ALARM	1: SETRSVD CALL 2: RELEASE CALL 3: SETUP ALARM 4: RELEASE ALARM	
	5: SECURITY (LOCK CODE REQUIRED)	1: NAME 2: LOCK CODE 3: RESTRICT 4: SEND PIN 5: CLEAR MEMORY 6: CLEAR LIST # 7: NAM SELECT 0: RESET PHONE	1: MEMORY 2: RECEIVE 3: INTERNATIONAL 4: SPECIAL SETUP/CANCEL YES/NO YES/NO NUMBERS (1, 2, 3, 4) YES/NO
	6: SUB FUNCTIONS	1: AUTO AREA NO2: CALCULATOR 3: STOP WATCH 4: AUTO ADDRESS 5: TONE LENGTH 6: DISCONNECTION	AUTO/ PASSIVITY SHORT*/ LONG SETUP/CANCEL*
#:	AUTO LOCK	ON/OFF	
	SWITCH TO THE VIBE MODE		

**Caution:**  
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RF Exposure Info:**

This device has passed the SAR testing, with the worst case data of 0.0088mW/g at the position of right head cheek touching phantom when antenna extended.