



## Quick Guide

English Version

© Kata Copyright Reserved, 2012

### Getting Started

Please read the following instructions carefully before use.


### Important Notes

- Keep T2 away from water, humidity and all types of liquids may damage device parts or electronic circuits.
- Do not store T2 near or in heaters, microwaves, hot cooking equipment, or high pressure containers.
- Do not drop T2 or cause impacts to your T2.
- Do not disassemble, modify, or repair your T2.
- To avoid damage, please do not put objects on the T2.
- Please do not cut off the power during software update and download, or it may cause data lost and system error.
- For the sake of data safety, please back up the important information or keep a hard copy.

#### Remarks:

- The components are authentic to the actual product.
- All pictures are for reference only, subject to our available products.
- For more information, please refer to the user manual at [www.katadigital.com](http://www.katadigital.com).

### Basic Functions

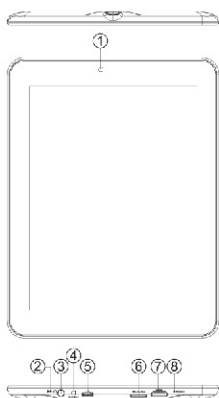

1. Front Camera 2.0 MP
2. Microphone
3. Earphone Jack
4. DC IN
5. Micro USB Port
6. Micro SD Card Slot
7. Mini HDMI Port
8. Reset Key
9. Power Key
10. Volume Keys
11. Speaker
12. Rear Camera 5.0 MP

#### Remarks:

Optional components may not be provided or different components may be provided depending on models.

### Quick Start

#### Power On

To turn on T2, press and hold power key 3 seconds. If you turn on your T2 for the first time, follow the on-screen instructions to set up your T2.



#### Screen Lock

To unlock, turn on the screen by pressing "Power Key", and drag "🔒" to "🔓" direction until it reaches the border of the circle.

#### Power Save and Screen Lock

After switching on T2, press power key to SLEEP mode and it will lock the screen automatically.



#### Power Off

To turn off your T2, press and hold 3 seconds and select "Power off" and "OK"

 
### Icons



- ↶ : Return
- 🏠 : Go to Home Screen
- 📄 : Check the running applications
- 🔌 : Connected to PC
- ⚠️ : Error occurred or caution required
- 🔔 : Alarm activated
- 📶 : Wi-Fi connected
- 📶 : Bluetooth activated
- 🔋 : Battery power level
- 10:00 : Current time
- 🔄 : Auto-rotate screen
- ☀️ : Adjust screen brightness
- 📢 : Notification

### Wi-Fi Setting

- Select the "⌵" to enter into applications list.
- Then select "⚙️" to enter the setting interface.
- Turn on Wi-Fi on "Wireless and networks" column, and select the network and enter the password you would use.



### Bluetooth Setting

- Turn on Bluetooth column and connecting Bluetooth device.

### Play Store (available on certain models only)

- Select the "⌵" icon to enter into Application Menu.
- Then select "Play Store" to enter the application.
- Select "Get a Google Account" to create Gmail account; if you have Gmail account, please select "Sign in" to insert Gmail address and password.
- Input your credit card information for purchasing apps or select "Skip" to skip the page
- Select "Next" on Account sign-in successful page
- Select "Accept" to accept Google Play Terms of Service.
- Search for an application and download it to T2.

#### Remarks:

A Gmail account is required for downloading apps in "Play Store".

