


Manual

WEALHOME

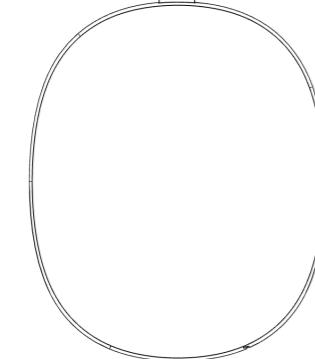


Instructions:

Thank you for choosing this product. Please read the instructions carefully before use and operate it correctly. Our company is not responsible for any problems caused by improper operation according to the instructions.

1. Please store and use this product in a room-temperature environment.
2. Do not throw this product, to avoid damage caused by falling.
3. Do not disassemble, repair, or modify this product by yourself. Our company is not responsible for any issues resulting from such actions.
4. The product contains a built-in battery which is not replaceable. Do not dispose of it or place it in fire to avoid danger.
5. Do not place the product in strong magnetic field environments to prevent damage.
6. If not in use for an extended period, please charge the product every 3 months to extend the battery lifespan.

Product list:

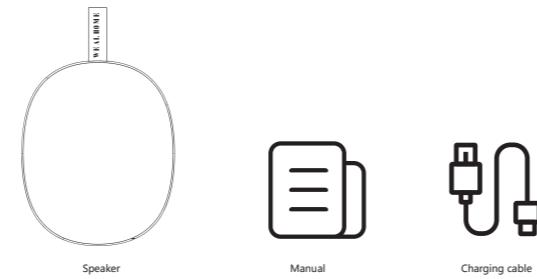

Speaker


Manual

Charging cable

Instructions for use:

1. Power On/Off:

Power On: Press and hold the power button for 2 seconds to turn on the device. A prompt sound will play, the night light will illuminate, and it will default to the white noise mode. (When a TF card is inserted, it will automatically enter TF card mode upon startup.)
Power Off: Press and hold the power button for 2 seconds to turn off the device. The lights will simultaneously turn off.

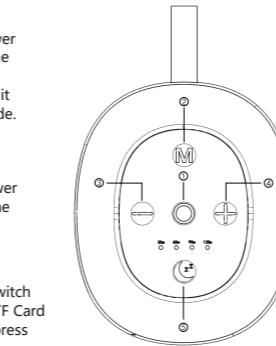

2. Mode Switching:

Short press the mode button to switch between White Noise/Bluetooth/TF Card modes. In Bluetooth mode, long press to enter TWS mode.

3. Volume Decrease:

Short press to decrease the volume, long press to play the previous track.

4. Volume Increase:

Short press to increase the volume, long press to play the next track.

5. Sleep Button:

Short press to toggle sleep shutdown time between 30 minutes/60 minutes/90 minutes/120 minutes, or to turn off sleep mode.
Long press to toggle light on/off.

6. White Noise Switching:

In white noise mode, long press "-" to switch to the previous track, long press "+" to switch to the next track.
Built-in 6 types of white noise: white noise/brown noise/fan sound/rain sound/waves sound/lullaby.

Specification parameter:

Bluetooth Version	V5.3	Bluetooth Name	WEALHOME D16
Bluetooth Calling	N/A	TWS Function	N/A
Speaker	40mm 4Ω 5W	Frequency Response Range	100Hz ~ 18KHz
Output Power	5W, 10% THD	Shutdown Leakage Current	≤30uA
Battery Specification	18650, 1200mAh 3.7V, NTC	FM Radio	N/A
Working Time	>12 Hours (50% volume, Bluetooth music) >24 Hours (50% volume, white noise)	Charging Time	2-3 Hours (charging current 1A)
Light	Warm White	Operating Environment	-10°C ~ +60°C
Storage Environment	-20°C ~ +60°C	Compliance Standards	CE-RED, FCC-ID, ROHS

FQA:

1. Unable to Power On:

Check the battery level of the speaker and try charging it.

2. Bluetooth Connection Issue:

Reboot the device, ensure it is switched to Bluetooth mode, and check if the device is connected to other devices. If connected, disconnect it first before connecting to a new device.

3. TF Card Playback Issue:

Reboot the device, switch to TF Card mode, and check if the TF card is damaged.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.