

W1
Wooden Bluetooth Alarm Clock Speaker System

Table of contents

1. Features.....	1
2. Included in this Package	2
3. Technology Specification.....	2
4. Diagram of the LED Display&the Button.....	3
5.Operating Instruction of the Button and DC & Aux-in Jack	5
5.1 Time Settings	5
5.2 Alarm Settings	6
5.3 Bluetooth Function	7
5.4 Handsfree Function	8
5.5 Aux in Jack	8
6. Playing and Connection diagram	9

Dear customer, thanks for your purchasing B11. Please read all safety instruction before proceeding for your safety and proper using.

1.Features

- Pure wood, texture surfaces, stylish appearance.
- Integrate clock, alarm, speaker and thermometer function in one.
- LED digital display.
- High sense touch key.
- 3.5mm stereo line-in cable (included) for playing other audio devices.
- Easily paired with Bluetooth-enabled devices, easy to enjoy music.
- Simple appearance, easy setting.
- Built-in microphone,have a clear call through Bluetooth hands-free function.
- Built-in high-quality speakers, bright treble, deep bass.Music performance beyond your imagination.

1

2. Included in this package (please check the accessories included in this package after purchasing)

W1 main unit	1 pc
3.5mm jack audio cable	1 pc
Power Adaptor	1 pc
User manual	1 pc

3. Technology Specification

Bluetooth Version: 2.1
Bluetooth Profiles: A2DP , AVRC P , HFP , HSP
Bluetooth Range: 10 M
Output Power : RMS 3W+3W
Speaker : 4Ω 3W 1.5in
Frequency Response : 60Hz-20KHz
S/N Ratio : > 70dB
Distortion : <1%
Cable : 3.5mm jack audio cable
Power Adaptor: AC100 - 240V 50/60Hz DC 5V 1.5A
Product Net Weight : 0.81kg
Product Dimension : 221X140X68mm

2

4.Diagram of the LED Display&the Button

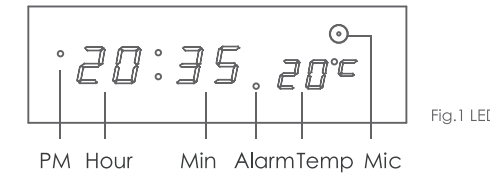 


Fig.1 LED Display

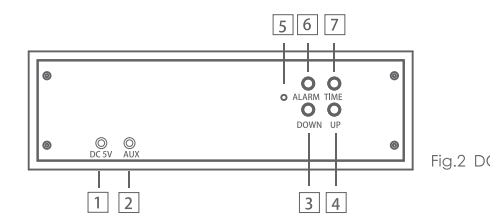 


Fig.2 DC&AUX JACK

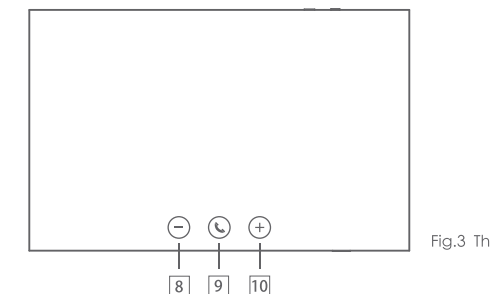 


Fig.3 The Top Button

3

- DC 5V power jack
- AUX support other audio sources
- DOWN adjust time /turn on alarm/turn off alarm/ stop alarm
- UP adjust time /switch hour mode/ stop alarm
- temperature temperature sensor
- ALARM set alarm/stop alarm
- TIME set time/stop alarm
- volume down
- pause/play/answer call/hang up/turn off bluetooth
- volume up

4

5. Operating Instruction of the Button and DC & Aux-in Jack

Connect the adaptor with the unit to turn on the unit. The time displaying on the LED screen is random time during the first use of the unit.; The figure on the right side is the room temperature.There are 2 degree difference between the displaying temperature and the actual temperature.

5.1. Time Settings

Press “UP” to switch 12 and 24 hours mode. In 12- hour mode, a single hour figure begins to flash; In 24- hour mode, both of the two hour figures begin to flash.

After confirm the hour mode, press “TIME” , the HOUR figure begins to flash. Press “UP” / “DOWN” to adjust the HOUR; Press “TIME” again, the MINUTE figure beings to flash. Press “UP” / “DOWN” to adjust the MINUTE. To exit time setting, press “TIME” to confirm your setting. (No operation on any keys in 15 seconds, it exits time setting automatically)

5

5.2. Alarm Settings

Press “DOWN” to turn on alarm. The alarm indicator light begins to display on the LED screen. (See Fig.4)

Press “ALARM” to set alarm time, the HOUR figure begins to flash, Press “UP” / “DOWN” to adjust the HOUR; Press “ALARM” again, the MINUTE figure beings to flash. Press “UP” / “DOWN” to adjust the MINUTE. To exit alarm setting, press “ALARM” to confirm your setting. (No operation on any keys in 15 seconds, it exits alarm setting automatically)

When alarm is on, it can last for one hour. Press any key on “TIME” / “ALARM” / “UP” / “DOWN” to stop the alarm.

After stop the alarm, it will be on again after 24 hours. To turn off alarm, press “DOWN” , the alarm indicator light goes out.

6

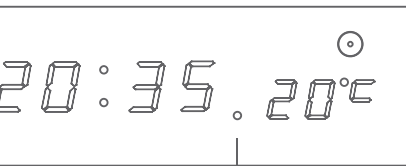 


Fig.4 alarm function

Press “DOWN” to turn on alarm, the circle dot lights up.
Press “DOWN” to turn off alarm, the circle dot goes out.

5.3 Bluetooth Function

When connecting the power with the unit, the unit is under Bluetooth Mode. If Bluetooth is not needed, Press and hold 3 seconds on “PLAY” to turn off Bluetooth. When it is needed, press and hold 3 seconds on “PLAY” to turn on Bluetooth.

Turn on the Bluetooth function in your mobile, searching Bluetooth devices. Choose “W1 BY HOMETIME” to pair. When it is successfully paired, you will hear a sound of “DU” Play music now.

7

When playing music, Press “PLAY” to pause the music. Press it again to play music(See Fig.5) Hold and press “+” and “-” to vlume up and down

5.4 Handsfree Function

When playing music via Bluetooth, the phone call is coming in, press “PLAY” to answer the call. Press “PLAY” to hung off the call, the music playing continues.

5.5 AUX-in Jack

When the unit is on, connect the device to “AUX- in” jack on the back of the unit with an 3.5mm stereo audio cable. The unit will switch to AUX mode automatically and play AUX-in aduio sources only(See Fig.6).

8

6. Playing and Connection diagram

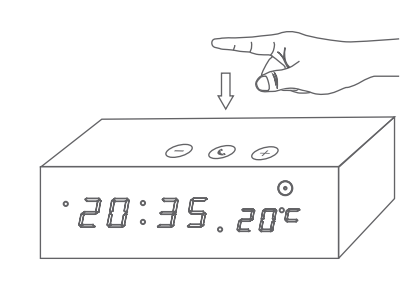 


Fig.5 pause/play/answer call/hang up/turn off bluetooth

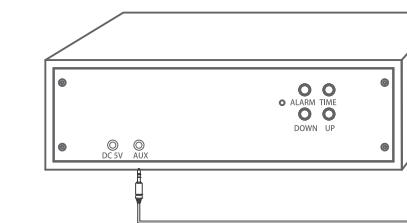 


Fig.6 play aux-in audio sources

9

FCC ID: RH8-W1

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.