

GF22 User Menu



目录

<i>GF22 User Menu</i>	11
<i>Section 1: Getting Started</i>	11
<i>Turning Your Device On and Off</i>	11
<i>Setting Up Your Device</i>	11
<i>Memory Card</i>	11
<i>Installing a Memory Card</i>	11
<i>Securing Your Device</i>	12
<i>Section 2: Understanding Your Device</i>	12
<i>Controls</i>	12
<i>Home Screen</i>	13
<i>Extended Home Screen</i>	13
<i>Customizing the Home Screens</i>	13
<i>Navigating Your Device</i>	14
<i>Notifications</i>	14
<i>Status Details</i>	14
<i>Status Bar</i>	15
<i>Widgets</i>	15
<i>Section 3: Setting Your Device</i>	15
<i>Accessing Settings</i>	15
<i>The Settings Screen</i>	15
<i>Wireless and Network</i>	16
<i>Device</i>	16
<i>Sound</i>	16
<i>Notifications</i>	17
<i>System</i>	17
<i>Display</i>	17
<i>Storage</i>	17
<i>Battery</i> ¹	17
<i>App</i>	17
<i>Personal</i>	17
<i>Security</i>	17
<i>Language and Input</i>	17
<i>Factory reset</i>	17
<i>System</i> ³	17
<i>Date and Time</i>	17
<i>Accessibility</i>	17
<i>Show CPU usage</i>	17
<i>About tablet</i>	17
<i>Connect to TV with HDMI Cable</i>	17
<i>Section 4: Applications</i>	18
<i>Gallery</i>	18
<i>Camera</i>	18
<i>Browser</i>	18
<i>Calendar</i> ⁸	18

Section 1: Getting Started:

This section helps you to quickly start using your device.

Turning Your Device On and Off

Turning Your Device On

Press and hold the Power/Lock Key  .

Turning Your Device Off

1. Press and hold the Power/Lock Key  .
2. At the prompt, touch Power off → OK.

Note: 1. long press Power/Lock Key for turn on/off the device.
2. Short press Power/Lock Key for wake up or sleep the device
3. If your device is frozen and unresponsive, press and hold the Power/Lock Key for 6 seconds.

Setting Up Your Device

When you first turn on your device, it is better to set up a few things as the

following steps.

From a Home screen, touch Apps  → Settings ;

1. Language & Input (page 21);
2. Date & Time (Page 22);
3. Wi-Fi (Page 13);
4. Accounts (Page 19);

Memory Card

Your device supports removable microSD™ or microSDHC™ memory cards with maximum capacities of 32 GB (depending on the memory card manufacturer and type). Memory cards are used to store music, photos, videos, and other files.

Note: You can only store music files that you own (from a CD or purchased with the device) on a memory card.

Installing a Memory Card

With the gold contacts facing up, carefully slide the memory card into the slot (1), pushing gently until it clicks into place (2).

Removing a Memory Card

Gently press down on the memory card (1), so that it pops out from the slot, and carefully pull the card out (2).

Securing Your Device

By default, the device locks automatically when the screen times out or you can lock it manually. You can unlock the device using one of the default Unlock screens or, for increased security, use a personal screen unlock pattern. For more information about creating and enabling a Screen unlock pattern, see "Screen Lock" on page 15.

Locking the device manually

Press the Power/Lock Key 

Unlocking the Device

Press the Power/Lock Key 

The Lock screen displays.



Swipe across the screen as shown.



Tip: Swipe to the app shortcut icons and then swipe to launch that application.

Troubleshooting

If your device has fatal errors, hangs up, or freezes, you may need to reset the device to regain functionality.

- If your device is frozen and unresponsive, press and hold the Power/Lock Key  for 6 seconds.

Section 2: Understanding Your Device

This section outlines key features of your device and describes the screen and the icons that appear when the device is in use. It also shows how to navigate through the device.

Controls



1. **Memory Card Slot:** Install a memory card for storage of files.
2. **Micro USB Port:** Plug in a USB cable to sync files and connect to computer.
3. **HDMI:** Plug in HDMI cable for connecting with TV device.
4. **3.5mm Headset Jack:** Plug in for headphones.
5. **Microphone:** Used for voice recording or video chat.

6. **Power/Lock Key:** Press and hold to turn the device on or off. Press to lock the device or to wake the screen for unlocking.
7. **Front Camera:** Take photo or video
8. **Back Camera:** Take photo or video
9. **Speaker**

Home Screen



The Home screen is the starting point for using your device.

Note: Unless stated otherwise, instructions in this user manual start with the device unlocked, at the Home screen.

- *****
- 1. **Google Search:** Search the web by typing or speaking.
- 2. **Home screen:** The starting point for using your device. Place shortcuts, widgets and other items to customize your device to your needs.
- 3. **Widgets:** Applications that run on the Home screen. Some widgets are found on the Home screen by default. For more information, refer to "Widgets" on page 12.
- 4. **App Shortcuts:** Shortcuts to common applications.
- 5. **Apps:** Display the Apps screen.
- 6. **Back:** Return to the previous screen or option.
- 7. **Home:** Display the central Home screen.
- 8. **Navigation:** Open a list of thumbnail images of apps you have worked with recently. Touch an App to open it. Touch and hold app to remove it from list or see that App info.
- 9. **Menu:** display the option window on screen.
- 10. **System Bar:** The area along the bottom of the Home screen where you can find navigation buttons and icons that show notifications, battery power, and connection details.
- 11. **Notification Icons:** Presents icons to show notifications from the system or from an application. Touch a Notification Icon to display more detail. For a list of icons, see "Status Bar" on page 12.
- 12. **Time:** The current time. For more information, refer to "Date and Time" on page 22.
- 13. **Status Icons:** Indicate the status of your tablet. Touch the Time / Status

Icons area to display the Status Details panel. For more information, refer to "Status Bar" on page 12.

Extended Home Screen

The Home screen consists of the Home panel, plus four panels that extend beyond the display width to provide more space for adding shortcuts and widgets. Slide your finger horizontally across the screen to scroll to the left or right side panels. As you scroll, the indicator at the top of the display shows your current position.

Note: The center panel displays when you touch  Home.

Customizing the Home Screens

To customize the Home screens to suit your preferences:

Change Wallpapers

1. Navigate to one of the Home screen panels.

2. Touch and hold on the screen until the **Choose Wallpaper** from pop-up displays.
3. The **Choose wallpaper** from pop-up displays the following options:
 - **Gallery:** Access the Gallery to select a photo. Touch a photo to select it. Crop and resize the picture, if desired. Touch **Done** to save the picture as wallpaper. Touch **Cancel** to cancel.
 - **Live wallpapers:** Choose from pre-loaded interactive animated wallpapers. Touch a wallpaper to see an example. If available, touch **Settings** to view options for the selection. Touch **Set wallpaper** to save your choice. Touch  Back to return to the Live wallpapers menu.
 - **Wallpapers:** Choose from pre-loaded wallpaper images. Touch an image to view it. Touch **Set wallpaper** to save it as wallpaper. Touch  Back to return to the Home screen.

Note: Live wallpapers is not available for the Lock screen.

Adding and Removing Widgets on Home Screen

1. From a Home screen, touch 
2. Swap across the screen to left to the widgets screen
3. Touch and hold one of widgets and then swap to home screen.

Navigating Your Device

Use command buttons and the touch screen to navigate.

Command Buttons

Back

Touch **Back**  to return to the previous screen, option, or step.

Note: When the on-screen keyboard is active,  Close Keyboard displays.

Home

Touch **Home**  to display the first center Home screen.

Navigation

Touch **Navigation** to open a list of thumbnail images of apps you have worked with recently. Touch an App to open it.

Touch and swap an App to remove it from list

Other Buttons

Google Search 

Touch Google to search the web.

Menu 

Touch Menu to display a list of options.

Application Bar

The Application Bar is the area along the top of various application screens. It usually contains the Search and Menu icons, as well as other icons that are used to display options and settings.

Notifications

When you receive a notification, the Notification icons display in the System Bar, to the left of the Time. Notifications indicate the arrival of Gmail, Email, alarms, and more.

Touch a Notification icon for more detail. For example, touch a Gmail Notification icon to see who sent the message.

Touch the Time field to open the Notifications list to view all of your current notifications. Touch a Notification in the list to display the item. For example, touch a Gmail entry to open the Gmail application and view the message.

Most apps that send notifications, such as Gmail and Google Talk, have individual settings that can be configured. See the settings for individual applications in the applicable section of this user manual.

Status Details

To display the current date and time, battery status, and Wi-Fi connectivity

status, open Status Details.

1. Touch the Time in the Status Bar.

The Status Details display. If you have any current notifications, their summaries are listed below the Notifications title.

2. Touch a notification summary to respond to it.
3. Touch outside the Status Details screen to close the window.

Status Bar

The Status Bar is part of the System Bar and displays icons to show network status, battery power, and other details.



Battery Level: Shown fully charged.



Charging Indicator: Battery is charging.



Device Power Critical: Battery has only three percent power remaining. At about 15 percent power remaining, a popup is displayed to remind you to charge immediately.



Wi-Fi Active: Wi-Fi is connected, active, and communicating with a Wireless Access Point .



Download in progress: An application is being downloaded to the device.

Widgets

Widgets are self-contained applications that you can place on the Home screens to access your favorite features.

Adding Widgets to a Home screen

1. Navigate to the Home screen on which you want to place the Widget.



2. From that Home screen, touch Apps

3. Touch the **Widgets** tab.

Note: Swipe across the screen horizontally to view all Widgets.

Touch and hold the widget's icon, then slide your finger where you want to place the icon and release it.

Note: Swipe across the screen horizontally to view all Widgets.

4. Touch Back

to return to the Home screen.

Removing Widgets

*Touch and hold the Widget until the **Remove** icon displays, then drag the Widget toward the top of the screen and drop it over the **Remove** icon.*

Section 3: Setting Your Device

This section explains Settings for customizing your device.

Accessing Settings

From a Home screen, touch Apps  → Settings 
– or –

From any screen, touch the **Time** in the System Bar, then touch  Settings.

The Settings Screen

The Settings screen has tabs on the left side of the screen. Information related to the tabs displays on the right side of the screen. There are four major groups of settings: Wireless and network, Device, Personal, and System.

Wireless and Network

Control your device's wireless connections.

Wi-Fi

Your device supports Wi-Fi 802.11b/g/n. Use Wi-Fi settings to manage your device's Wi-Fi connections. Turning Wi-Fi On or Off When you turn Wi-Fi service on, your device automatically searches for available, in-range Wireless Access Points (WAPs).

- From any Home screen, touch the time, then touch Wi-Fi from the Quick Settings menu.
- or –
- From a Home screen, touch Apps  → Settings . On the Wi-Fi tab, touch the OFF / ON icon  **ON** to turn Wi-Fi on or off.

Scan for Wi-Fi Networks

To make sure you have an accurate list of Wi-Fi networks.

From a Home screen, touch Apps  → Settings  → Wi-Fi, and then touch Scan.

Add Wi-Fi Network

To open a dialog where you can add a Wi-Fi network by entering its Network SSID (the name it broadcasts), security type, and other properties:

- From a Home screen, touch Apps  → Settings  → Wi-Fi, and then touch Add network.
- Use the keyboard to enter Network SSID.

3. Touch the **Security** field and then touch a security type.
4. If necessary, touch **Password** and enter the **password** or hex key.
5. Touch **Save**.

Advanced Settings

Set up and manage wireless access points.

1. From a Home screen, touch **Apps**  → **Settings**  → **Wi-Fi**.
2. Touch **Menu**  → **Advanced**.

The following options display:

- **Network notification:** Have your device alert you to new Wireless Access Points (WAPs). Touch **Network notification** to turn notifications On or Off. When enabled, a check mark appears in the check box.
- **Keep Wi-Fi on during sleep:** Specify when to disconnect from Wi-Fi. Options are: Always, Only when plugged in, or Never.
- **MAC address:** View your device's MAC address, required when connecting to some secured networks (not configurable).
- **IP address:** View your device's IP address.

More Settings

This tab displays additional wireless and network information.

From a Home screen, touch **Apps**  → **Settings**  → **More**.

Options display for **Airplane mode** and **VPN**,

Airplane Mode

Airplane mode allows you to use many of your tablet's features, such as Camera, Games, and more, when you are in an airplane or in any other area where accessing data is prohibited.

Important! When your tablet is in Airplane Mode, it cannot access online information or applications.

From any Home screen, touch the time, then touch **Airplane mode** from the Quick Settings menu.

– or –

Press and hold the **Power** button then touch **Airplane mode**.

– or –

From a Home screen, touch **Apps**  → **Settings**  → **More** → **Airplane mode** and then touch **OK** to turn on Airplane mode. A check mark  appears in the check box when Airplane mode is On.

VPN

The VPN settings menu allows you to set up and manage Virtual Private Networks (VPNs).

Important! Before you can use a VPN you must establish and configure one.

Adding a VPN

Before you add a VPN you must determine which VPN protocol to use: PPTP (Point-to-Point Tunneling Protocol), L2TP (Layer 2 Tunneling Protocol), L2TP/IPSec PSK (Preshared key based L2TP/IPSec), or L2TP/IPSec CRT (Certificate based L2TP/IPSec).

Note: You must also set a screen unlock PIN or password before you can use credential storage.

1. From a Home screen, touch Apps  → Settings  → More → VPN.
2. Touch Add VPN network.
3. In the form that appears, fill in the information provided by your network administrator.
4. Touch Save to save your VPN settings.

Connecting To a VPN

1. From a Home screen, touch Apps  → Settings  → More → VPN.
2. Touch the VPN to which you want to connect.
3. In the pop-up that opens, enter any requested credentials.
4. Touch Connect.

Edit a VPN



1. From a Home screen, touch Apps  → Settings  → More → VPN.
2. Touch and hold the VPN that you want to edit.
3. In the pop-up that opens, touch Edit network.
4. Make the desired VPN setting changes.
5. Touch Save.

Delete a VPN



1. From a Home screen, touch Apps  → Settings  → More → VPN.
2. Touch and hold the VPN that you want to delete.
3. In the pop-up that opens, touch Delete network.

Device

This section of the Settings screen contains settings for your device.

Sound

Set the volume level for all types of sounds.

Note: You can only set volume when Silent Mode is disabled.

1. From a Home screen, touch Apps  → Settings  → Sound → Volume.
2. Touch and drag the sliders to set the volume for:
 - **Music, video, games, and other media:** Sounds made by music apps, video apps, and more.
 - **Notifications:** Sounds for alerts to new messages and other events.
 - **Alarms:** Sounds for alarms.

Tip: You can also set System volume from the Home screen by pressing the Volume Key.

3. Touch **OK** to save your settings.

Notifications

Select a default ringtone for message, alarm, and other notifications.

1. From a Home screen, touch Apps  → Settings  → Sound → Default notification
2. Touch a ringtone to hear a sample and select it.
3. Touch **OK** to save the setting.

System

You can activate or deactivate both touch and screen lock sounds.

1. From a Home screen, touch Apps  → Settings  → Sound
2. Touch **Touch sounds** or **Screen lock sound** (both default to **On**).

When enabled, a check mark  appears in the check box.

Display

Brightness

Set the default screen brightness.

1. From a Home screen, touch Apps  → Settings  → Display → Brightness
2. Touch and drag the slider to set the brightness or touch **Automatic brightness**.
3. Touch **OK** to save the setting.

Sleep

Set the length of delay between the last key press or screen touch and the automatic screen timeout (dim and lock).

1. From a Home screen, touch Apps  → Settings  → Display
2. Touch **Sleep** and select the screen delay time. The screen delays shutting off after inactivity for the selected period of time.

Auto-Rotate Screen

When this option is checked, the screen orientation changes when you rotate the device. When this option is not checked, the screen orientation locks in the current orientation (landscape or portrait) and the orientation does not change when you rotate the device.

1. From a Home screen, touch Apps  → Settings  → Display
2. Touch **Auto-rotate screen** to enable or disable the auto-rotate feature.

Tip: Touch the Time in the System Bar to display the Quick Settings pop-up.

Touch **Screen rotation** to enable or disable the auto-rotate feature.

Using different direction for Gsensor Game

In some of Game need you rotate the device to control, but sometimes the orientation is wrong. When this option is checked, it will helps you change the orientation in that game.

Font Size

Set the font size you want it to display.

1. From a Home screen, touch Apps  → Settings  → Display
2. Touch **Font size** and select a font size.

Wallpaper

You can choose a picture to display on the Home Screen, Lock screen, or to both the Home and lock screens. Choose from preloaded wallpaper images or select a photo you have downloaded or taken with the Camera.

1. From a Home screen, touch Apps  → Settings  → Wallpaper.
2. Touch **Home screen, Lock screen, or Home and lock screens**.
The Select wallpaper from screen displays the following options: **Gallery**, **Live wallpapers**, and **Wallpapers**.

Storage

From this menu you can view the device memory or mount, unmount, or format an SD card.

The Device memory displays as Total space, Apps, Pictures, videos, Audio, Downloads, Miscellaneous files, and Available space.

SD Card

Once a memory card has been installed in your device, the SD card memory displays as Total space and Available space.

Mounting an SD Card

1. Install an SD card.
2. From a Home screen, touch Apps  → Settings  → Storage.

3. Touch Mount SD card.

Unmounting an SD Card

1. From a Home screen, touch Apps  → Settings  → Storage

Touch **Unmount SD card**.

2. At the prompt, select **OK** to safely unmount the memory card.
3. Remove the SD card from the slot.

Note: Unmounting an SD card will stop some applications from functioning.
Applications may not be available until you mount the SD card again.

Battery

See how much battery power is used for device activities

1. From a Home screen, touch Apps  → Settings  → Battery

The battery level displays in percentage. The amount of time the battery was used also displays. Battery usage displays in percentages per application.

2. Touch **Screen, Wi-Fi, or Standby** to view how the display, the Wi-Fi, and the standby are affecting battery use.

Note: Other applications may be running that affect battery use.

App

This is application manager, You can download and install applications from Google Play or create applications using the Android SDK and install them on your device. Use Application manager settings to manage applications.

Warning! Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Personal

This section of the Settings screen lets you manage the personal settings for your device.

Security

Screen Lock

Choose settings for unlocking your screen.

1. From a Home screen, touch Apps  → Settings  → Security.
2. Touch **Screen lock** for these settings:
 - **Slide:** Slide the screen to unlock it.

- **Pattern:** A screen unlock pattern is a touch gesture you create and use to unlock your device. Follow the prompts to create or change your screen unlock pattern.
- **PIN:** Select a PIN to use for unlocking the screen.
- **Password:** Create a password for unlocking the screen.
- **None:** No pattern, PIN, or password is required.

Note: Additional options are available only if you set **Screen lock** to display the lock screen (any setting other than **Slide** or **None**).

Passwords

When enabled, password characters display briefly as you touch them while entering passwords.

1. From a Home screen, touch Apps  → Settings  → Security.
2. Touch **Make passwords visible** to enable or disable brief displays of password characters. When enabled, a check mark  appears in the check box.

Device Administration

To add or remove device administrators:

1. From a Home screen, touch Apps  → Settings  → Security.
2. Touch **Device administrators**.

Enable or disable installation of non-Google Play applications.

1. From a Home screen, touch Apps  → Settings  → Security.
2. Touch **Unknown sources**. An informational pop-up displays.
3. Read the message and touch **OK** to allow installation of non-Google Play applications. When enabled, a check mark  appears in the check box.

Warning! Enabling this option causes your tablet and personal data to be more vulnerable to attack by applications from unknown sources.

Credential Storage

Trusted Credentials

If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From a Home screen, touch Apps  → Settings  → Security.
2. Touch **Trusted credentials**.

The trusted credentials screen has two tabs:

- **System:** Displays CA certificates that are permanently installed in the ROM of your device.
- **User:** Displays any CA certificates that you installed, for example, in the process of installing a client certificate.

3. Touch a CA certificate to examine its details. A scrolling screen displays the details.

4. Scroll to the bottom of the details screen and touch **Disable** to disable a System certificate or Remove to **remove** a User certificate.

Caution! When you disable a system CA certificate, the **Disable** button changes to **Enable**, so you can enable the certificate again, if necessary. When you **remove** a user-installed CA certificate, it is permanently deleted and must be re-installed, if needed.

5. Touch **OK** to return to the certificate list.

When enabled, a check mark appears in the check box.

Install from Device Storage

Install encrypted certificates from an installed memory card.

Note: You must have installed a memory card containing encrypted certificates to use this feature.

1. From a Home screen, touch **Apps**  **→ Settings**  **→ Security**.
2. Touch **Install from device storage**, then choose a certificate and follow the prompts to install.

Clear Credentials

Clear stored credentials.

Note: This setting only appears if you have installed encrypted certificates.

1. From a Home screen, touch **Apps**  **→ Settings**  **→ Security**.
2. Touch **Clear credentials** to remove all certificates.

Language and Input

Language

Set the language used by your device.

1. From a Home screen, touch **Apps**  **→ Settings**  **→ Language and Input** **→ Language**.
2. Touch a language / locale from the list.

Keyboards and Input Methods

Set the keyboard used by your device.

1. From a Home screen, touch **Apps**  **→ Settings**  **→ Language and Input**
2. Touch **Default** and select a keyboard.

Factory reset

From a Home screen, touch Apps  → Settings  → Factory reset.

Backup & Restore

Touch **Back up my data** to enable or disable back up of application data, Wi-Fi passwords, and other settings to the Google server.

Backup Account

If you have enabled the **Back up my data** option, then the

Backup account option is available.

Touch **Backup account** and touch your Google Gmail account or touch **Add account** to set your Google Gmail account to be backed up to the Google server.

Automatic Restore

When enabled, backed-up settings are restored when you reinstall an application.

Touch **Automatic restore** to enable or disable automatic restoration of settings from the Google server.

Personal Data

Factory Data Reset

Use **Factory data reset** to return your device to its factory defaults. This setting

erases all data from the device, including Google or other email account settings, system and application data and settings, and downloaded applications, as well as your music, photos, videos, and other files. If you reset the tablet in this way, the next time you turn on your tablet you are prompted to reenter the same kind of information as when you first started Android.

1. From a Home screen, touch Apps  → Settings  → Factory reset

2. Touch **Factory data reset**.

The Factory data reset screen displays reset information.

3. Touch **Reset device**, then follow the prompts to perform the reset.

Note: 1. If you have set up your Google account, it has to be deleted before performing this function.

2. When option **Erase SD card** is checked, it will erase all the data on the internal flash.

System

Date and Time

By default, your device receives date and time information from the wireless network. When you are outside network coverage, you may want to set date and time information manually using the **Date & time** settings.

1. From a Home screen, touch **Apps**  → **Settings**  → **Date and Time**
2. Configure the following settings:
 - **Automatic date & time:** Use network-provided time.
 - **Set date:** Enter the current date (only available when the Automatic setting is disabled).
 - **Set time:** Enter the current time (only available when the Automatic setting is disabled).
 - **Select time zone:** Choose your local time zone (only available when the Automatic setting is disabled).
 - **Use 24-hour format:** Set the format for time displays.
 - **Select date format:** Set the format for date displays.

Accessibility

Accessibility services are special features to make using the device easier for those with certain physical disabilities. Use the Accessibility settings to activate these services.

Note: You can download accessibility applications from Google Play and manage their use here.

Apps

1. From a Home screen, touch **Apps**  → **Settings**  → **Developer Options**
2. Touch **Do't keep activities** to destroy every activity as soon as the application is closed.
3. Touch **Background processes limit** to set the number of processes that can run in the background. Options are: Standard limit, No background processes, and 1 to 4 processes at most.
4. Touch **Show all ANRs** to display a prompt when applications running in the background are not responding.

Show CPU usage

Screen overlay showing current CPU usage.

About tablet

View information about your device, including status, legal information, hardware and software versions, and battery use.

1. From a Home screen, touch **Apps**  → **Settings**  → **About tablet**
2. Touch items to view details:

- **System update:** Connect to the network and download new system.
- **Status:** View Battery status, Battery level, IP address, Wi-Fi MAC address, Bluetooth address, Serial number, Up time, and Device status.
- **Legal Information:** Display Open source licenses, Google legal, and License settings information.
- **Model number:** Display your device's model number.
- **Android version:** Display the firmware version of your device.
- **Kernel version:** Display the kernel version of your device.
- **Build number:** Display your device's build number.

Connect to TV with HDMI Cable

When you connect device to TV with HDMI cable, an icon HD will pops up on stats bar:

1. Touch icon HD
2. A option window will pops up
3. Touch Device

Section 4: Applications

Gallery

Your device's 7-inch 800*480 TFT LCD screen provides a high-resolution display of photos and videos. Use Gallery to view, capture, and manage photos and

videos.

Selecting Photos and Videos to View

1. From a Home screen, touch **Apps**  → **Gallery** .
All albums display.
2. Touch **Albums** to display other ways to group your photos and videos.
Options are:
 - **Albums:** Based on the folder in which they are stored.
 - **Locations:** Based on where taken.
 - **Time:** Based on the time taken.
3. Touch **Camera**  to launch the Camera app.
4. Touch **Menu**  to display the following options:
5. **Select album:** Touch one or more albums or groups that you want to share, stream to another device, or delete.

Viewing Groups of Photos and Videos

1. From a Home screen, touch **Apps**  → **Gallery** .
2. Touch a category and then a group to view it.
Thumbnails for each photo and video in the group display.
3. Touch **Slideshow**  to view a slideshow of the available pictures and videos.

4. Touch **Menu**  for these options:

- **Select item:** Touch one or more items that you want to share or delete.
- **Group by:** Further group this group by Location, Time, Person, or Group, depending on the way you chose the group.

3. Touch the screen with two fingers or double-tap on the screen to zoom all the way in or out.

4. Sweep across the screen to display the next or previous photo. The current photo is outlined in the thumbnails at the bottom of the screen. Touch a thumbnail to view the photo it represents.

5. Touch **Share**  to use Group Cast, S Note, ChatON, Dropbox, Picasa, Google+, Wi-Fi Direct, Gmail, or Email to share the photo.

6. To delete the photo being displayed, touch **Delete**  and then touch **Delete** to delete the photo or **Cancel** to exit.

7. Touch **Slideshow**  to display a slide show of the available pictures and videos.

8. Touch **Menu**  to select **Set picture as** to assign the photo as a Contact photo, Home and lock screens, Home screen wallpaper, or Lock screen wallpaper.

Camera

Use your device's built-in camera and camcorder to take photos and record videos.

1. From a Home screen, touch **Apps**  → **Camera** .

2. Using the display as a viewfinder, compose your photo by aiming the lens at the subject.

3. To take the photo, touch the **Camera** button.

4. Touch **Back**  to leave the Camera and display the previous screen.

Viewing Photos with the Image Viewer

After taking a photo, use the Image Viewer to view, share, delete, or edit photos.

1. Touch **Image Viewer** to view the photo.
2. Touch the screen to show or hide Image Viewer options.

Browser

Access the Internet.

Your device is equipped with a full HTML Browser that allows you to access the Internet.

From a Home screen, touch **Apps**  → **Browser** .

Navigating the Internet

The following options are available for Internet navigation.

Command Keys

- Touch  **Back** or  to return to the previous page.
- Touch and hold  **Back** display browser History.
- Touch **Forward**  to go forward to a recent page.
- Touch **Refresh**  to reload the current page

Touching and Dragging

Touch and drag your finger on the screen to navigate pages and to reposition pages within the screen.

Zoom

- Tap the screen twice to zoom in or out.
- Use two fingers, such as your index finger and thumb, to zoom out by making an inward pinch motion on the screen. To zoom in, make an outward motion by sweeping



your fingers out.

Calendar

The Calendar app lets you view and edit your schedule.

When you first set up your tablet, you configured it to use an existing Google Account (such as Gmail), or you created a new one. The first time you open the Calendar application on your tablet, it displays any existing calendar events from that Google Account on the web. As you edit events from any mobile device or web browser, they are synced automatically across all the places you need them.

To view your Calendar, touch  on a Home or App screen.

To change the Calendar view, touch the date at the top and choose Day, Week, Month, or Agenda. Swipe to scroll vertically or horizontally. In the Day or Week views, spread your fingers apart or pinch them together to zoom in or out.

From any of these views, you can

- **Read or edit event details.** Touch an event to view its details.
- **Manage events and calendars.** Touch icons across the top or Menu to search or create events, return to today, or adjust settings.

Specification

CPU		1.2GHz/533MHZ InfoTM/iMAPx820 1.2GHzX2
Screen	Display	8 inch touch panel,
	Resolution	1024*768
Memory	Flash ROM	8G Nand
	RAM	DDR3 512MB*16bit*2 1GB
Antenna		Real built-in antenna
Wifi		Support
G-Sensor		Support
Camera		0.3M pixel Front 2M pixel Back/
Audio Decoder		IIS/IIC MP3, AAC, WMA, AMR-nb/wb
Video Decoder		MPEG4 H264, H263
Photo		JPG, PNG
Input/Output	Touch Panel	capacitive type touch panel
	Speaker	Built-in loud speaker
	Headphone	3.5mm stereo jack
	MIC	Internal MIC-phone
	SD / MMC	TF slot, capacity up to 32GB (support TF HC)
	USB	Micro 5Pin
	HDMI	MINI HDMI (C-Type)
Buttons / Switches		Hardware Power ON/OFF Switch
Battery	Type	Built-in rechargeable 3.7V 3500mAh Li polymer
	Active	3~4 hrs battery life on full power mode with backlight setting on mid range
Charger	Output	5V, 2A, micro USB
Certification & Regulation		RoHS,

Environment Conditions	Temperature	Operation	-20~+60°C	
		Storage	-20~+80°C	
	Humidity	Operation	4%~90%RH	
		Storage	40%RH	
Video Performance		Video Decoding Format: H.264, MPEG4, H.263		
		Support File Format: RM, RMVB, AVI, MPEG4, FIV		

FCC NOTE :

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.□□

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE
TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID AND
CHANGE ANNTENA WHICH THE MANUFACTURER PROVIDES.
IT IS THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.