

IMPRESSION



9.7" ANDROID TABLET Instruction Manual

CONTENTS

 
Safety Alerts and Cautions.....	2
Controls.....	3
Function Keys.....	4
Home Key.....	4
Menu Key.....	4
Backspace Key.....	4
On/Off Key (Power Key).....	4
Volume Key.....	5
Get around.....	6
Touch & Type.....	8
Change the wallpaper.....	9
Change other Sound setting.....	9
Arrange & Work with Apps.....	10
Add widgets.....	11
Manage notifications.....	12
Try some apps.....	13
Start Email.....	13
Manage your Calendar.....	14
Use your Camera.....	14
Gallery.....	15
Manage files on your tablet.....	16
Settings.....	16
Specification.....	18
FCC Statement.....	20

Safety Alerts and Cautions:

To keep the Tablet working normally and to protect your Tablet, please:

1. Do not use your tablet in extreme temperatures, when wet, or when extremely dusty.
2. Do not apply too much pressure to the screen, and do not use hard objects to press the screen.
3. Be careful to not damage the inner components when carrying or moving the tablet.
4. Avoid dropping the product.
5. To ensure stable wi-fi, please access the internet where wi-fi is provided.
6. Do not touch the tablet when it is formatting, or the hard-disk may malfunction.
7. Keep the tablet away from static.
8. Do not use the tablet for prolonged periods.
9. Do not use the tablet in direct sunlight.
10. Use soft fabric to gently clean the surface shell and LCD screen. Do not use solutions or chemicals to clean the tablet.
11. Do not attempt to remove the battery because of electric shock.

Controls

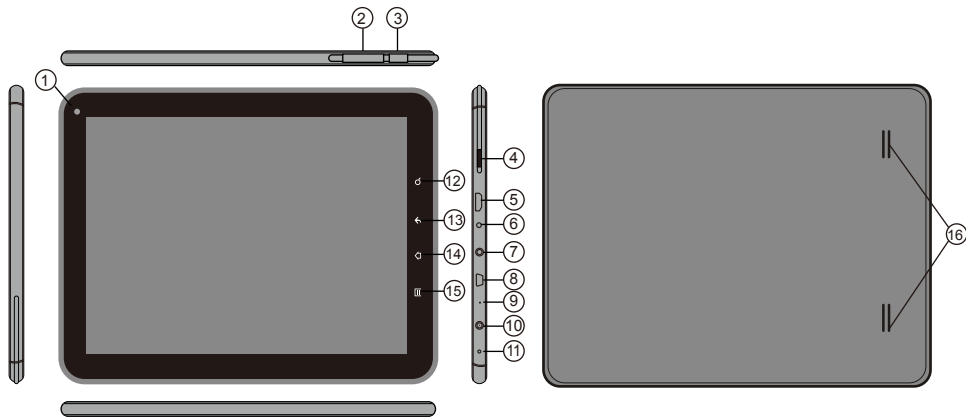

1. Camera

2. Volume

3. Power

4. Micro SD Slot

5. HDMI Jack

6. Reset

7. Earphone Jack

8. Micro-USB Jack

9. Indicator Lights

10. DC-IN Jack

11. Microphone

12. Search Key

13. Backspace Key

14. Home Key

15. Menu Key

16. Speaker

Function Keys

Home Key

1. Press the home key at anytime to return to the main interface
2. Press & hold the home key, and a list of your recently opened applications will appear.

Menu Key

1. Press the Menu key to open the sub-menu for a page.
2. Press the Menu key again to close the sub-menu.
3. Press & hold the menu key while in an application to open/close the virtual keyboard.

Backspace Key

Press the backspace key to return to the previous operation or previous screen.

Search Key

Press the search key for the search input interface

On/Off Key (Power Key)

To turn ON the tablet

Press and hold Power ON/OFF key to turn on the tablet

To turn OFF the tablet

 
1. Press the ON/OFF key to lock the screen and enter sleep mode.
2. Press and hold ON/OFF key to have the mode selection window pop up. From there, the user can choose for the device to enter either standby mode, or to power off.

Volume Key

Press + to increase the volume.

Press - to reduce the volume.

Get around

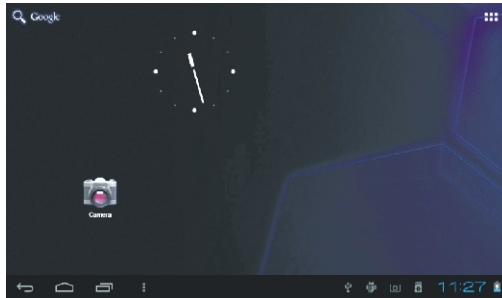

At the left bottom of the screen, you'll find three Navigation buttons. They're always available. No matter what you're doing with your tablet, you can always get back to the main Home screen or return to previous screens:

-  **Back:** Opens the previous screen / app. Once you are on the home screen the button will not go back any further.
-  **Home:** Returns to the home screen. If you were on pages other than the default screen, the button will return you to the default screen.
-  **Recent apps:** To open an app, touch it. To remove a thumbnail from the list, swipe it left or right.

After a short time without getting used, these buttons may shrink to dots or fade away, depending on the current app. To bring them back, touch their location.



At the left top of the screen, you will see a icon “Google”, you can tap it for searching on Google quickly.



Status icons: On the right bottom of the screen, you will see Status icons, it will tell you which apps have sent you notifications; for example, that a message has arrived, or your tablet have connected with PC.

To see your notifications, swipe your finger up from the right bottom of the screen.

System icons: on the right corner of the screen display the current wireless and network connection strength, battery level, time, and more.

Touch & Type

Use your fingers to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the touchscreen. You can also change the screen's orientation.

To select or activate something, touch it.

To type something, such as a name, password, or search terms, just touch where you want to type. A keyboard pops up that lets you type into the field. Other common gestures include:

Touch & hold: Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs.

Drag: Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. For example, you can drag to reposition shortcuts on the Home screen.

Swipe or slide: Quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag something instead). For example, you can slide a Home screen left or right to view the other Home screens.

Double-tap: Tap quickly twice on a webpage, map, or other screen to zoom. For example, double tap a webpage in Browser to zoom in, and double-tap again to zoom out.

Pinch: In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

Rotate the screen: On most screens, the orientation of the screen rotates with your device as you turn it. You can change this Display setting.

Change the wallpaper

Wallpapers are images from Gallery (pictures you shot with Camera, synced from Picasa, and so on), still images included with the system, and live images (such as an animation or a map that centers on your location). They take the place of the default background for your Home screens.

1 .Touch & hold anywhere on a Home screen that's not occupied. A list of options appears.

2 .Touch a wallpaper source:

Gallery: Choose from pictures that you've taken with Camera or downloaded to your device.

Live Wallpapers: Choose from a scrolling list of animated wallpapers.

Wallpapers: Choose from thumbnails of default images, or touch a thumbnail for a larger version.

You can download additional wallpapers from Android Market.

3. To set a wallpaper, touch Set wallpaper at the top of the screen (for Gallery images).

Change other Sound setting

To change other sounds and vibrations, go to Settings > Device > Sound and touch the one you want:

Volume: sets the master volume separately for music, ringtones & notifications, and alarms. You can still use the physical volume control on the tablet to raise or lower volume of whatever sound is currently playing.

Vibrate: controls vibration feedback across the entire tablet.

Silent mode: turns off all sounds.

Default notification: announces the arrival of notifications unless you specify a different sound in an individual app.

System settings: control feedback sounds and vibrations for standard actions performed with your Tablet.

Arrange & Work with Apps

To see all your apps, touch the All Apps icon on any Home screen.

The main All Apps screen opens. This is where you can see all your apps, including those downloaded from Android Market. You can move app icons to any of your Home screens.

From All Apps, you can

Move between screens: Swipe left or right.

Launch an app: Touch its icon.

Place an app icon on a Home screen: Touch & hold the app icon, slide your finger, and lift your finger to drop the icon in place.

Place an app icon in the Favorites tray: Touch, hold, & slide to move one of the Favorites icons out of the tray. Then use the same technique to move another one into the same position.

Explore your widgets: Touch the Widgets tab at the top of any All Apps screen.

Get more apps: Touch the Market icon.

To remove an app icon from the Home screen, touch and hold it, slide your finger toward the top of the screen, and drop the app over the Remove icon.

Add widgets

Widgets are like windows into your apps. They're available from an All Apps tab for you to move onto your Home screens.

To see your widgets:

1. Touch the All Apps icon  on your Home screen.
2. Touch Widgets at the top of the screen.

From the main Widgets screen, you can

Move between screens: Swipe left or right.

Drag a widget to a Home screen: Touch and hold the widget's icon, slide your finger where you want to place it, and lift your finger.

You may be asked to make further choices before the widget activates. If there isn't room where you dropped it, the widget won't get added to the Home screen.

Manage notifications

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you've configured your tablet as a Wi-Fi hotspot. When you receive a notification, its icon appears in the top left corner of the screen. Depending on your Sound settings, you may also hear a sound.

- See your notifications: Swipe your finger down from the top of the screen.
- Respond to a notification: Touch it.
- Dismiss a notification: Swipe it sideways.
- Dismiss all notifications: Touch the X in the top right corner.

Tip When the list of notifications is open, you can also get to Settings by touching the Quick Settings icon  at the top of the list. This provides a quick way to get to Settings from any screen. Most apps that send notifications, such as Email and Google Talk, have notification settings that you can adjust.

Try some apps

Start Email

You can use the Email app to read and write emails from your tablet. All your emails are always up to date and available no matter where you connect from.

To launch Email: Touch the Email icon  on the home screen or in your app drawer. The first time you launch the app you will be prompted to sign in to your email account. Once setup you can:

Read email: Touch a message to read it. Unread messages are bold. While you're reading a message:

- Touch the icons and menu along the bottom of the screen to archive, throw away, label, or perform other actions on that message.
- Swipe left or right to read the previous or next conversation.
- **Organize email:** Check the box beside a message to select it. Then use the icons and menu along the bottom of the screen to manage the selected messages.
- **Change your settings:** Touch the Menu icon  to change your preferences, add an account, or get Help.

No matter where you are within Email, you can always get back to the Inbox by touching  in the top left corner of the screen.

Manage your Calendar

The Calendar app lets you view and edit your schedule.

When you first set up your tablet, you configured it to use an existing Google Account (such as Gmail), or you created a new one. The first time you open the Calendar application on your tablet, it displays any existing calendar events from that Google Account on the web. As you edit events from any mobile device or web browser, they are synced automatically across all the places you need them.

To view your Calendar, touch  on a Home or App screen.

To change the Calendar view, touch the date at the top and choose **Day**, **Week**, **Month**, or **Agenda**. Swipe to scroll vertically or horizontally. In the Day or Week views, spread your fingers apart or pinch them together to zoom in or out.

From any of these views, you can

- **Read or edit event details:** Touch an event to view its details.
- **Manage events and calendars:** Touch icons across the top or Menu to search or create events, return to today, or adjust settings.

Use your Camera

The Camera app is a combination camera and camcorder.

You can view photos and videos you take with Camera in the Gallery  app. Your personal videos are also available in the Videos app , along with movies that you rent or download. To take pictures and videos, first touch the Camera icon  on a Home or All Apps screen.

When Camera opens, you can

- Take a picture: Touch the blue button.
- View the most recently taken picture: Touch the thumbnail near the blue button.

To view this picture and others in the Gallery app, touch the picture.

While Camera is open, you can also touch these icons to adjust its settings:



Slide the finger along the arc between + and to adjust pixel and size while taking photos and videos.



Switch front camera and back camera.



Mode: Switch among camera, video, and panorama modes.



Settings: Reveals additional icons that you can use to set exposure, flash, focus, scene mode, white balance and other settings.

Gallery

The Gallery app is a window that you can view your photos and videos here.



Touch the Gallery icon on App screen, then you will see a picture wall shows on your screen, you can tap the picture or video to open it to see.

Manage files on your tablet

The FileManager app lets you can manage all the files in your tablet or Micro SD card.

 
-  Touch this icon you will see all the files in your Micro SD card.
-  Touch this icon you will see all the files in you tablet.
-  Touch this icon you can change the style of the icons on the FileManager's window.
-  Touch the search icon will help you get the file that you want very quickly.

And also here are some icons can help you to copy, past or create a folder which you want to touch the icons



Settings

Touch the setting icon  on App screen, and then you will see the following screen that you can setup the tablet's optional functions.

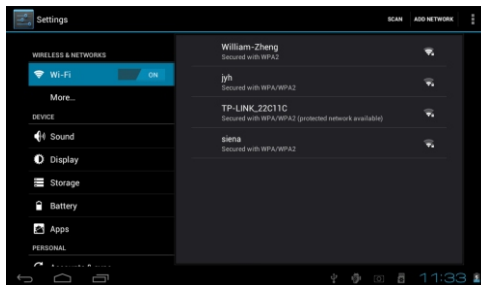

In the Settings screen here are many things you can setup, for example turn on/off Wi-Fi network, adjust the sound of the tablet and manage the apps in your device.

- 1.Wi-Fi: you will the visible network shows on the right window, you can touch it and enter the correct password to access the internet.
- 2.Sound: in this function, you can adjust the volume for your device.
- 3.Display: after you touch the “Display”, then you can adjust the brightness on the right window and also you can change wall paper, setup sleep time and so on.
- 4.Storage: touch it to check the information of the storage. Our device totally has 4GB memory inside, but the android system already took 1GB away, so you will see there are 1GB for INTERNAL ALLLOCATION STORAGE (the space that for you installing apps), and 2GB INTERNAL USER DATA STORAGE (the space that for you saving files).
- 5.Battery: for you checking battery information.
- 6.Apps: touch it you will see all the installed apps shows on the right window, and you can tap anyone of them to uninstall it or clean data for that app.
- 7.Language & input: touch it you can change your tablet's language and input method.
- 8.Backup & reset: this can help you recover all the data in your tablet
- 9.Date & time: you can setup your device's time information here.

Specification

CPU		Samsung A8 SC5C110– 1GHz
Screen	Display	9:7" Capacitive IPS Multi Touch Display
	Resolution	1024*768
Memory	Flash ROM	512MB Nand
	RAM	512MB DDR2
Antenna		Built-in Antenna
WIFI		802.11 b/g/n
G-Sensor		Support
Camera		2.0M pixel Front camera
Audio		MP3,AAC
Video		MPEG4,H264, H263
Photo		JPG, PNG

Input/Output	Touch Panel	Capacitive type Touch Panel
	Speaker	Built-in Speaker
	Headphone	3.5mm stereo Jack
	MIC	Internal Microphone
	SD/MMC	Micro SD Slot, Capacity up to 32GB (support TF HC)
	USB	Mini USB
Buttons/Switches		1.Hardware Power ON/OFF Switch and Reset Switch 2.Volume up, Volume Down 3.Back key, home key, Menu Key, Search Key
Battery	Type	Built-in rechargeable 3.7V 6800mAh Li polymer
	Active	4~5 hrs battery life on full power mode with backlight setting on mid range
	Output	5V, 1.5A,DC (2.5mm) (must use original charger)
Certification & Regulation		CE, FCC, RoHs

FCC Statement

FCC Caution:

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Compliance:

- To assure continued compliance, follow the attached installation instructions.
- Use only the provided shield interface cables when connecting to computer.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with part 15 subpart B of the FCC Rules. Operation is subjected to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This product may receive radio interference caused by mobile telephones or other products during operation. If such interference is apparent, please increase separation between the product and the mobile telephone or other product.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Industry Canada Requirement:

This Class B apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned. The TM and ® marks are not used to identify registered trademarks and trademarks in these instructions.

This manual was correct and complete at the time of printing. However, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of Leader International Inc.. Any unauthorized distribution of this manual is expressly forbidden.

Leader International Inc may find it necessary to modify, amend or otherwise change or update this manual. We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice. All screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals or other information, be sure to visit our website at:
www.leaderinternationalinc.com

Or write to us at:
Leader International Inc
225 S. Lake Avenue, Suite 300
Pasadena, CA 91101
USA
Copyright 2012



© 2012 Leader International Inc.

Impression is a trademark and service mark of Leader International Inc.

All products distributed by Leader International Inc. Unless otherwise indicated.

All other brand names, trademark and service marks are property of their owners.

225 S. Lake Avenue, Suite 300, Pasadena, CA 91101

www.leaderinternationalinc.com