

## User Guide AR2010

### In the box



AC Adapter




Remote Control



RCA Audio Cable

### Installing the battery

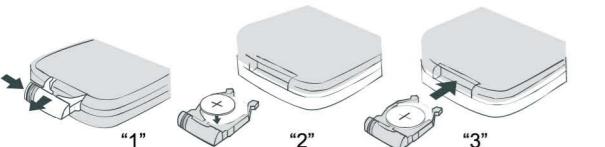

**NOTE:** The battery for the remote control (1 CR2025 lithium battery) is included. To replace the battery, push and slide out the battery door in the remote control. Replace the battery with a new CR2025 battery with the polarity "+" facing up. Slide the door back.

### Pairing the speaker with a Bluetooth enabled device

1. Plug the speaker into a power source.  
2. Turn on the speaker by pressing the Main Power switch on the back of the speaker to the ON position.  
3. Keep the speaker and Bluetooth enabled device within 3 feet of each other during the pairing process.  
4. Set your mobile phone or other Bluetooth enabled device to search for Bluetooth devices.

### Using your Bluetooth Speaker




#### Powering ON/OFF

- To turn on, flip the Main Power switch on the back of the unit to the ON position.
- To turn off, flip the Main power switch on the back of the unit to the OFF position.


#### Adjusting the volume

- Quick press the [VOL+] button on the speaker or the remote control to gradually increase the volume; long press it to continually increase the volume to maximum level.
- Quick press the [VOL-] button on the speaker or the remote control to gradually decrease the volume; long press it to continually decrease the volume to minimum level.
- Press the [MUTE] key on the remote control to mute the sound. Press again to turn the sound back on.

### Location of controls

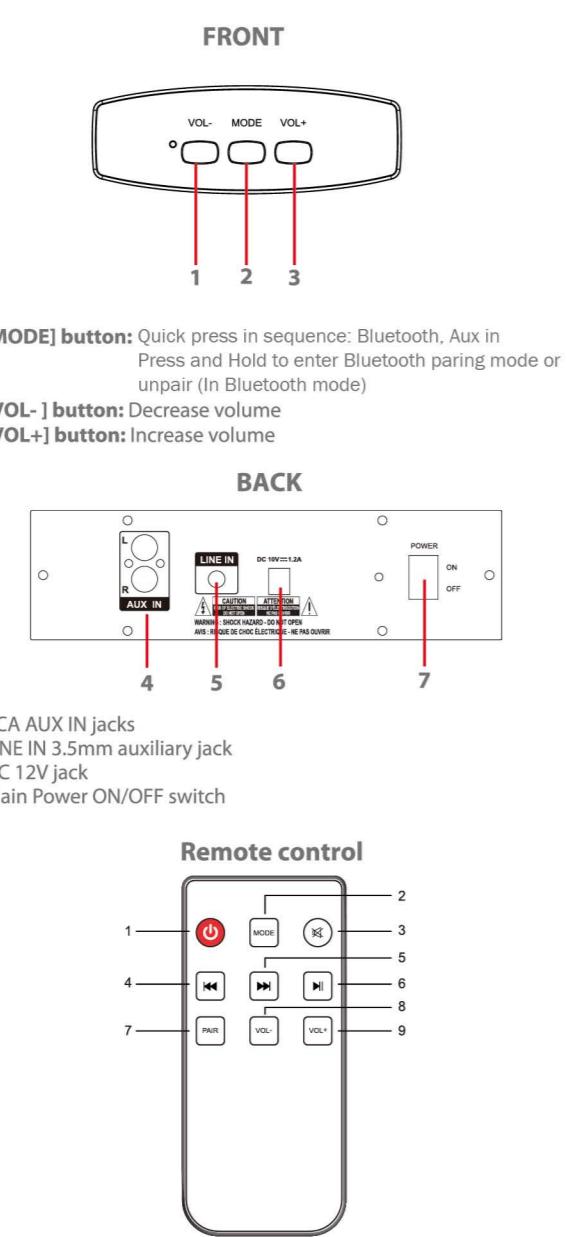


#### FRONT

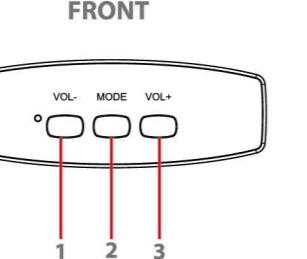


1. [MODE] button: Quick press in sequence: Bluetooth, Aux in. Press and Hold to enter Bluetooth pairing mode or unpair (In Bluetooth mode)
2. [VOL-] button: Decrease volume
3. [VOL+] button: Increase volume

#### BACK

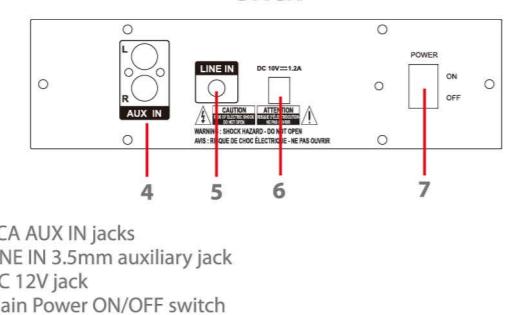


4. RCA AUX IN jacks
5. LINE IN 3.5mm auxiliary jack
6. DC 12V jack
7. Main Power ON/OFF switch

#### Remote control

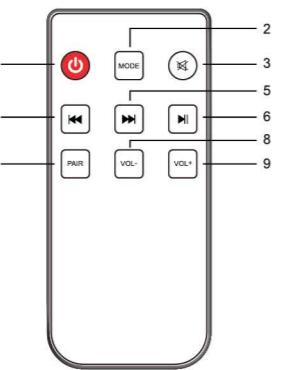


1. [PWR] key: Standby Power ON/OFF
2. [MODE] key: AUX IN, Bluetooth
3. [MUTE] key: Mute volume
4. [◀◀] key: Quick press to skip to previous track (In Bluetooth mode)
5. [▶▶] key: Quick press to skip to next track (In Bluetooth mode)
6. [▶▶] key: Play / pause (In Bluetooth mode)
7. [PAIR] key: Press to enter Bluetooth pairing mode or unpair (In Bluetooth mode)
8. [VOL-] key: Decrease volume
9. [VOL+] key: Increase volume

#### FRONT

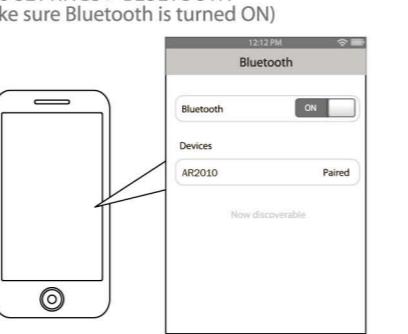

#### On an iPhone

- Go to SETTINGS > BLUETOOTH (Make sure Bluetooth is turned ON)

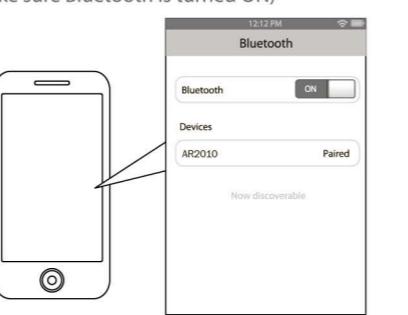

#### ON AN iPhone


You can also adjust the volume from your connected device's volume control.

#### Switching modes

Press the [MODE] button on the speaker or the remote control repeatedly to switch between modes:  
• Bluetooth  
• AUX IN


#### On a BlackBerry

- Go to SETTINGS/OPTIONS > BLUETOOTH & Enable BLUETOOTH

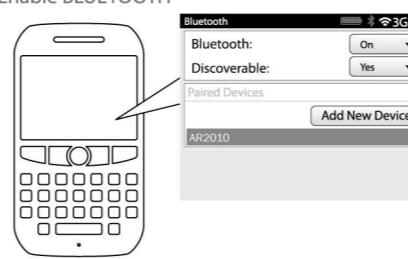


#### On an Android Phone

- Go to SETTINGS > BLUETOOTH > MENU > Search for devices (Make sure Bluetooth is turned ON)

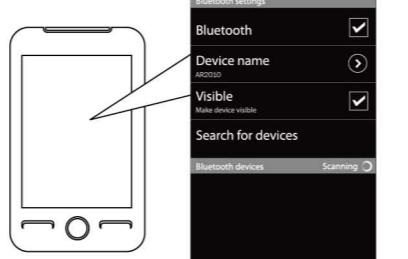

#### On other Cell Phones/Devices

Review the instruction manual that came with your phone/device.

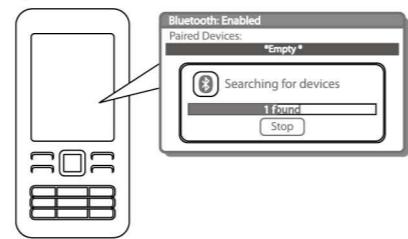

5. When the Bluetooth enabled device finds the speaker, select "AR2010" from the list of found devices.  
6. If required, enter the password 0000. Select OK or Yes to pair the two units.  
7. After a successful pairing, a voice prompt will be heard indicating that the device and speaker have been paired.

**NOTE:** If you would like to connect the speaker to another device, you must unpair the speaker from the currently paired device first. On your device's Bluetooth settings, select "AR2010", then select "unpair"; or press the [PAIR] key on the remote control. When the speaker has been unpaired, it automatically goes into pairing mode again.

**NOTE:** The screenshots above are typical of many Bluetooth enabled devices in the market today, and are used to assist in the explanation of the pairing process. Your Bluetooth enabled device's interface and interaction with the speaker may slightly differ from the illustrations above.

### Using your Bluetooth Speaker

#### Powering ON/OFF

- To turn on, flip the Main Power switch on the back of the unit to the ON position.
- To turn off, flip the Main power switch on the back of the unit to the OFF position.

#### Adjusting the volume

- Quick press the [VOL+] button on the speaker or the remote control to gradually increase the volume; long press it to continually increase the volume to maximum level.
- Quick press the [VOL-] button on the speaker or the remote control to gradually decrease the volume; long press it to continually decrease the volume to minimum level.
- Press the [MUTE] key on the remote control to mute the sound. Press again to turn the sound back on.

### Safety instructions



Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. "This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation."

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body.

### Limited Warranty

#### 90 Days Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

#### TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of unshielded dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

**CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.**

**WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet of this unit may cause marks or staining where they reside. We recommended using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.**

**WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.**

**WARNING: Shock hazard - Do Not Open.**

**WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

The shipping address of the authorized service center is:

**Southern Telecom, Inc.**  
**Attention: Customer Service (2nd Floor)**  
**14-C 53rd Street**  
**Brooklyn, NY 11232**

Should you have any questions or problems concerning this product, please contact our customer service department at:

**Customer Support:**  
Phone: 1-877-768-8481  
Monday-Friday 8AM-10PM(EST)  
www.southerntelecom.com  
Click on "Product Support"

#### Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

#### Limitation of Warranty:

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC., ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

### Legal information

#### FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Sharper Image® name and logo are registered trademarks. Manufactured and marketed by Southern Telecom under license. © Sharper Image. All Rights Reserved.