

MANUAL

PBT9010-BGL

Bluetooth Speaker



FEATURES

 
Support Bluetooth, Aux in input. With Li-ion battery inside.

Support AC powered supply. With 12V-30V regulated power output.

When using AC powered or external DC - power supply, the li-ion battery will be automatically charging at the same time.

Inside have protection for Automatic switch, anti - access to prevent the damage to the speaker by misoperation.

BUTTON FUNCTIONS

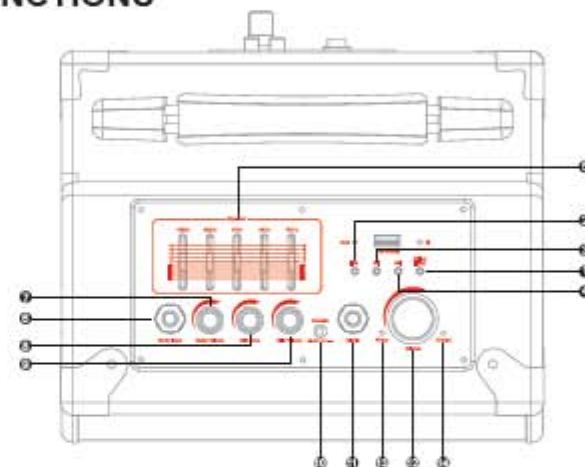

SELECT INPUT ① : Press to change playing mode – AUX IN, Bluetooth
Under the playing mode of AUX, the AUX LED will light. Under the playing mode of Bluetooth, the Bluetooth LED will be light.

PREV ② : Under the playing mode of Bluetooth, press to previous track.

PLAY/PAUSE ③ : Press to play/pause. Under the playing mode of Bluetooth, Press and HOLD to enter Bluetooth pairing mode.
Under the playing model of AUX, press and HOLD to mute volume. Bluetooth device PBT9010.

NEXT ④ : Under the playing mode of Bluetooth, press to skip to next track.

PANEL SWITCHES AND KNOBS FUNCTION

EQUALIZER ⑤ : The five push-pull type potentiometer is used to adjust the frequency of 100 hz, 500 hz, 1 KHZ, 5 KHZ to 10 KHZ. All push-pull potentiometer default is located in the middle. The speaker

of the frequency response is smooth. The sound is without modification. It also can adjust to their preferences by pushing the potentiometer to adjust the size of the different frequency band.

GUITAR INPUT PORT ⑥ : It is for external electric Guitar for amplification.

GUITAR VOLUME KNOB ⑦ : Adjust the Volume of an electric Guitar.

MIC ECHO KNOB ⑧ : Receiver reverberation depth adjustment.

MIC VOLUME KNOB ⑨ : Microphone Volume adjustment.

MIC PRIORITY SWITCH ⑩ : Microphone priority function switch, play up effective. When inserted into the microphone to the MIC jack, will switch according to the high, in the microphone to sing or talk, Bluetooth or AUX input music signal will automatically become smaller, to highlight the vocals and prevent background music vocal cover. It is useful when meeting or singing.

MIC IN PORT ⑪ : microphone input

VOLUME KNOB ⑫ : volume adjust

 
POWER ⑬ : With the POWER indicator light

CHARGE ⑭ : When using the external AC or DC converter, if the battery is not full, it will charge for it automatically. The charging LED will be light.

SWITCHES ON THE BACKSIDE

AC POWER SWITCH ⑮ : This switch is used for external AC switch.

MAIN SWITCH ⑯ : Main power.

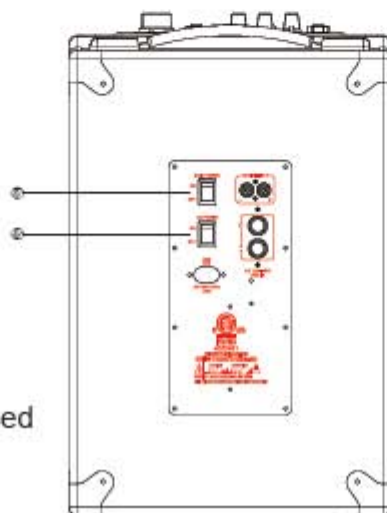


ATTENTION

External DC DC power supply, please don't more than 30v. If more than the limit, it is likely to damage the audio. When open the speaker, EQ default please call center 0 db has card points, according to their own preferences. When the built-in lithium battery voltage is too low, the music will increase the distortion degree. When the battery less than 9v, the speaker will be automatically shut down to protect the battery. Please plug in the AC or DC converter power supply at this time. Normal the charging time is about 4 to 5 hours. The battery is full with the charging light went out.

IMPORTANT SAFETY INSTRUCTIONS

 - 1) Read these instructions
- 2) Keep these instructions
- 3) Heed all warnings
- 4) Follow all instructions
- 5) Do not use this apparatus near water
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

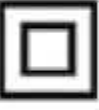

- 13) Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- 17)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 18) • A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 19) CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type
- 20) The remote control supplied with] This product contains a coin button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- 21) Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children
- 22) If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



WARNING: SHOCK HAZARD - Do Not Open.

AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

CAUTION:

DISCONNECT POWER CORD BEFORE CHANGING FUSE.

REPLACE WITH SAME TYPE OF FUSE.

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.

REPLACE ONLY WITH THE SAME OF EQUIVALENT TYPE.

ATTENTION:

DEBRANCHER AVANT DE REMPLACER LE FUSIBLE.

UTILIZER UN FUSIBLE DE RECHANGE DE MEME TYPE.

DANGER D'EXPLOSION SI LA PILE N'EST PAS REMPLACÉE CORRECTEMENT.

NE REMPLACER QUE PAR LE MÊME TYPE OU UN TYPE ÉQUIVALENT



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



WARNING

 
DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

CONSIGNES IMPORTANTES DE SÉCURITÉ

- 1) Lisez ces instructions.
- 2) Conservez ces instructions.
- 3) Respectez tous les avertissements.
- 4) Suivez toutes les instructions.
- 5) Ne pas utiliser ce appatarus près de l'eau.
- 6) Nettoyer seulement avec un chiffon sec.
- 7) Ne pas bloquer la ventilation openigs, Install conform•ment aux instructions du fabricant.
- 8) Ne pas installer soign•e toute source de chaleur comme les radiateurs, registres de chaleur, poêles ou autres appareils (y compris les amplificateurs) qui pro
duisent de la chaleur.
- 9) Ne supprimez jamais la sécurité de la fiche polarisée ou d' échouement. Un bouchon polatized a deux lames with une est plus large que l'autre. Une fiche
de terre a deux broches et baldes gounding tiers. La lame large ou la troisi•me broche est fournie pour votre sécurité. Si la fiche fournie ne rentre pas da
ns votre prise, consultez un electrician pour remplacer la prise obsolète.
- 10) Protégez le cordon d'alimentation ne soit pi•tin••ou pinc•; particulièrement au niveau des bouchons, recptacles commodité, et au point où ils sortent de l'ap
pareil.
- 11) N'utilisez que des fixations / accessories specifiques par le fabricant.
- 12) Utilisez uniquement le chariot, stand, tr•pied, support ou table specifiques par le fabricant ou vendu avec le apparatus. When un chariot ou un support est uti
lis•; faites attention lorsque vous d•placez l'ensemble chariot / appareil pour éviter de vous blesser plus.



- 13) Débranchez l'appareil pendant les orages ou si inutilisé pendant de longues périodes de temps.
- 14) Confier toute réparation à un personnel qualifié. Une reparation est nécessaire lorsque l'appareil a été endommagé de quelque facon que ce cordon d'alim
entation ou la fiche est endommagé, du liquide a été renversé ou des objets sont tombés dans l'appareil a été exposé à la pluie ou l'humidité, ne fonction
ne pas noemally, ou s'il est tombé.
- 15) ATTENTION: La prise secteur est utilisée comme dispositif de déconnexion, le dispositif de déconnexion doit rester facilement accessible.
- 16) ATTENTION: Pour réduire le risque d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ou appareils moisture. The ne doit pas être pla
ce sur l'appareil.

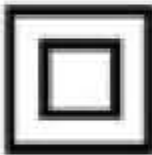

- 17) Cet équipement est une classe II ou double isolation appareil électrique. Il a été concu de telle facon qu'il ne nécessite pas une connexion à la
terre de sécurité électrique.
- 18) Batterie (batterie ou piles installées) ne doit pas être exposée à une chaleur excessive comme le soleil, le feu, etc
- 19) ATTENTION: Danger d'explosion si la pile n'est pas remplacée correctement . Ne remplacer que par le même type ou un type équivalent.
- 20) La télécommande fournie avec] Ce produit contient une pile bouton de pièce de monnaie. Si la pile pièce / bouton est avalé, il peut causer des brûlures i
nternes graves en seulement 2 heures et peut conduire à la mort.
- 21) Gardez les piles neuves et d'occasion à partir des enfants. Si le compartiment de la batterie ne se ferme pas correctement, arrêtez d'utiliser le produit et
garder loin des enfants.
- 22) Si vous pensez que les batteries peuvent avoir été avalé ou placé à l'intérieur d'une partie du corps, consulter immédiatement un médecin.



WARNING: SHOCK HAZARD - Do Not Open.
AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

CAUTION• •
DISCONNECT POWER CORD BEFORE CHANGING FUSE.
REPLACE WITH SAME TYPE OF FUSE.
DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.
REPLACE ONLY WITH THE SAME OF EQUIVALENT TYPE.

ATTENTION:
DEBRANCHER AVANT DE REMPLACER LE FUSIBLE.
UTILIZER UN FUSIBLE DE RECHANGE DE MEME TYPE.
DANGER D'EXPLOSION SI LA PILE N'EST PAS REMPLACÉE CORRECTEMENT.
NE REMPLACER QUE PAR LE MÊME TYPE OU UN TYPE ÉQUIVALENT



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magntude to constitute a risk of electric shock to the persons.



WARNING

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation."

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.