

MANUAL

SBT1001BK


Bluetooth Speaker 



 Bluetooth®


SHARPER IMAGE®

SPEAKER

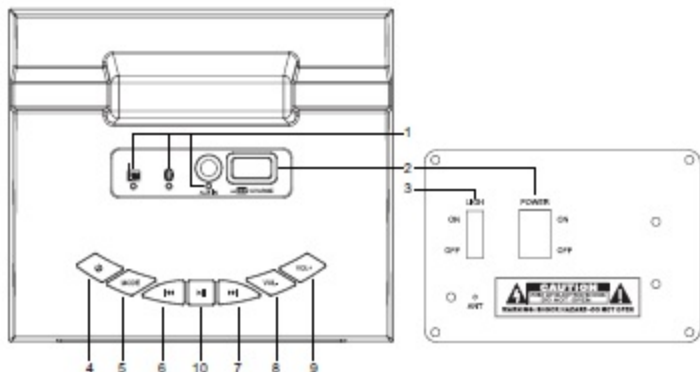

1. **FUNCTION:** FM Radio、Bluetooth、AUX IN. When turn on the speaker and press Standby, the defaulted playing mode is FM.
2. When turn the speaker, it can use the USB slot to charge cell phone or iPad.
3. It has a button at the backside of speaker to turn on/off the LED light.
4. "STANDBY": Press to turn on/off.
5. "MODE": Press to change playing mode (FM—BT—AUX IN).
6. "SKIP-/TUNE-": Quickpress for previous track.
Under the playing mode of FM, press and HOLD for FM scan.
7. "SKIP+/TUNE+": Quickpress for next track.
Under the playing mode of FM, press and HOLD for FM scan.
8. "VOL-": Press to decrease volume.
9. "VOL+": Press to increase volume.
10. "PLAY/PAUSE": Under the playing mode of Bluetooth, press and HOLD for pair. Quickpress for Play/Pause. Under the playing mode of FM, press and HOLD for automatically scan. Quickpress for mute.

BUTTON ON REMOTE CONTROL

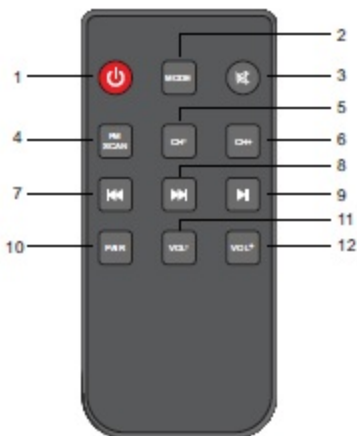


1. "STANDBY"KEY: Press to turn ON/OFF.
2. "MODE"KEY: Press to change the playing mode (FM—BT—Aux in)
3. "MUTE": Press to mute.
4. "FM SCAN": Under the playing mode of FM, press to AUTO scan.
5. "CH-"KEY: Press to FM preset.
6. "CH+"KEY : Press to FM preset.
7. "SKIP-": Quickpress for previous track. Press and HOLD for FM scan.
8. "SKIP+": Quickpress for next track. Press and HOLD for FM scan.
9. "PLAY/PAUSE": Under the playing mode of Bluetooth, press for play/pause. Under the playing mode of FM and Aux in, press for mute.
10. "PAIR": Under the playing mode of Bluetooth, press for Bluetooth pair.
11. "VOL- ": Press to decrease volume.
12. "VOL+" : Press to increase volume.

1. Bluetooth pairing : Change the playing mode of speaker to be Bluetooth. When the Bluetooth enabled device finds the speaker, select SBT1001 from the list of found device. If required, enter the password 0000. Select OK or Yes to pair the two units. After a successful registration, a tone will sound and the buttons will stop blinking.
2. It has three LED indicator light (FM, Bluetooth, Aux-in).
 - Under FM playing mode, FM indicator is bright. When searching, the FM indicator will be blinking.
 - Under Bluetooth playing mode, Bluetooth indicator is bright. When pairing or Mute, the indicator will be blinking.
 - Under Aux in playing mode, Aux in indicator is bright. When MUTE, the indicator will be blinking.
3. FM can save 20 stations

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions
- 2) Keep these instructions
- 3) Heed all warnings
- 4) Follow all instructions
- 5) Do not use this apparatus near water
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) **WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- 17)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION
RISQUE D'ÉLECTROCUTION
NE PAS OUVRIR



WARNING : SHOCK HAZARD - DO NOT OPEN
AVIS : RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION:
DISCONNECT POWER CORD BEFORE CHANGING FUSE.
REPLACE WITH SAME TYPE OF FUSE.

ATTENTION:
DEBRANCHER AVANT DE REMPLACER LE FUSIBLE.
UTILIZER UN FUSIBLE DE RECHANGE DE MÊME TYPE.




The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.

CONSIGNES IMPORTANTES DE SÉCURITÉ

- 1) Lisez ces instructions
- 2) Conservez ces instructions
- 3) Respectez tous les avertissements
- 4) Suivez toutes les instructions
- 5) Ne pas utiliser ce apparatus près de l'eau
- 6) Nettoyer seulement avec un chiffon sec
- 7) Ne pas bloquer la ventilation openings. Install conformément aux instructions du fabricant.
- 8) Ne pas installer soignée toute source de chaleur comme les radiateurs, registres de chaleur, poêles ou autres appareils (y compris les amplificateurs) qui produisent de la chaleur.
- 9) Ne supprimez jamais la sécurité de la fiche polarisée ou d'échouement. Un bouchon polatized a deux lames with une est plus large que l'autre. Une fiche de terre a deux broches et Baldes gounding tiers. La lame large ou la troisième broche est fournie pour votre sécurité. Si la fiche fournie ne rentre pas dans votre prise, consultez un électricien pour remplacer la prise obsolète.
- 10) Protégez le cordon d'alimentation ne soit piétiné ou pincé, particulièrement au niveau des bouchons, recptacles commodité, et au point où ils sortent de l'appareil.
- 11) N'utilisez que des fixations / accessoires spécifiés par le fabricant.
- 12) Utilisez uniquement le chariot, stand, trépied, support ou table spécifiés par le fabricant ou vendu avec le apparatus. When un chariot ou un support est utilisé, faites attention lorsque vous déplacez l'ensemble chariot / appareil pour éviter de vous blesser plus.



- 13) Débranchez l'appareil pendant les orages ou si inutilisé pendant de longues périodes de temps.
- 14) Confier toute réparation à un personnel qualifié. Une réparation est nécessaire lorsque l'appareil a été endommagé de quelque façon que ce cordon d'alimentation ou la fiche est endommagé, du liquide a été renversé ou des objets sont tombés dans l'appareil a été exposé à la pluie ou l'humidité , ne fonctionne pas noemally, ou s'il est tombé.
- 15) ATTENTION: La prise secteur est utilisée comme dispositif de déconnexion, le dispositif de déconnexion doit rester facilement accessible.
- 16) ATTENTION: Pour réduire le risque d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ou appareils moisture. The ne doit pas être placé sur l'appareil.
- 17)  Cet équipement est une classe II ou double isolation appareil électrique. Il a été conçu de telle façon qu'il ne nécessite pas une connexion à la terre de sécurité électrique.



CAUTION
 RISK OF ELECTRIC SHOCK
 DO NOT OPEN


ATTENTION
 RISQUE D'ÉLECTROCUTION
 NE PAS OUVRIR



WARNING : SHOCK HAZARD - DO NOT OPEN
AVIS : RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION:
 DISCONNECT POWER CORD BEFORE CHANGING FUSE.
 REPLACE WITH SAME TYPE OF FUSE.

ATTENTION:
 DEBRANCHER AVANT DE REMPLACER LE FUSIBLE.
 UTILIZER UN FUSIBLE DE RECHANGE DE MÊME TYPE.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.

FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation."

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.