

Venue 10 Pro

5000 Series


Quick Start Guide

Quick Start Guide
Quick Start Guide
Quick Start Guide
Quick Start Guide

For Proof Only
Dell Confidential


1 Connect the power adapter and turn on your computer

Connect the power adapter and turn on your computer
Connect the power adapter and turn on your computer
Connect the power adapter and turn on your computer
Connect the power adapter and turn on your computer

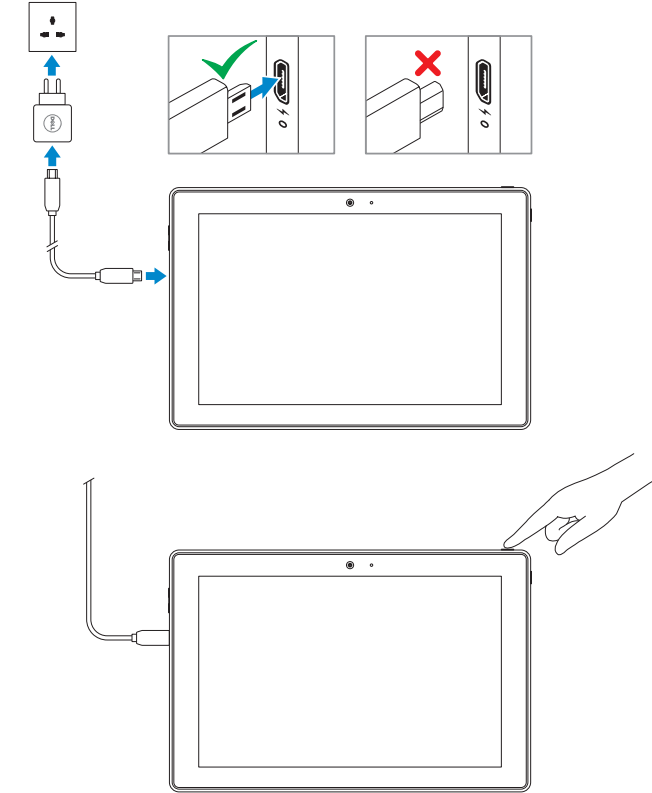

2 Finish Windows setup

Finish Windows setup | Finish Windows setup
Finish Windows setup | Finish Windows setup

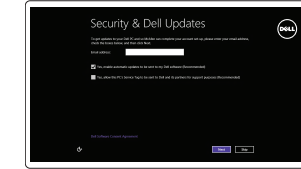

Enable security and updates
Enable security and updates
Enable security and updates
Enable security and updates



Connect to your network
Connect to your network
Connect to your network
Connect to your network


NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

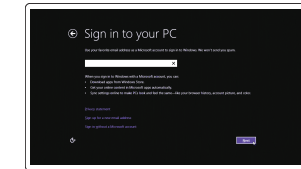

Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account

Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account

Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account

Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account

Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account

3 Register your tablet

Register your tablet
Register your tablet
Register your tablet

dell.com/support/retail


Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

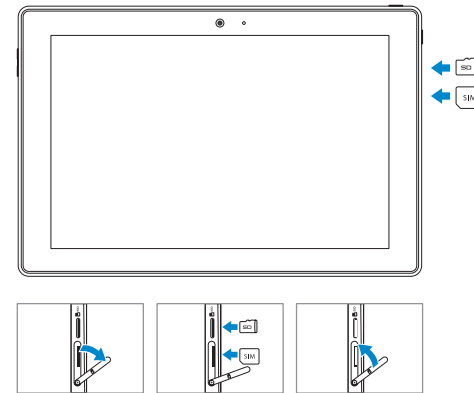

Locate your Dell apps

Locate your Dell apps | Locate your Dell apps
Locate your Dell apps | Locate your Dell apps




Register your computer

Register your computer | Register your computer
Register your computer | Register your computer




Dell Backup and Recovery

Dell Backup and Recovery | Dell Backup and Recovery
Dell Backup and Recovery | Dell Backup and Recovery

 

My Dell

My Dell | My Dell
My Dell | My Dell

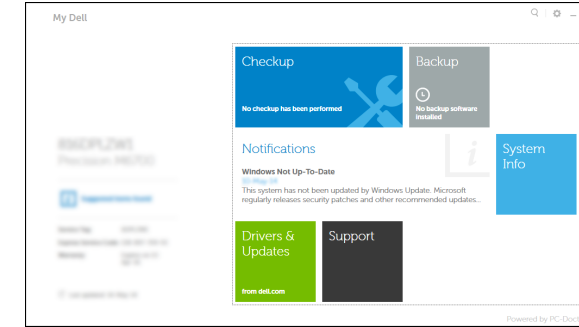

NOTE: For more information, see *Owner's Manual* at dell.com/support/manuals.

NOTE: For more information, see *Owner's Manual* at dell.com/support/manuals.

NOTE: For more information, see *Owner's Manual* at dell.com/support/manuals.

NOTE: For more information, see *Owner's Manual* at dell.com/support/manuals.

NOTE: For more information, see *Owner's Manual* at dell.com/support/manuals.


Learn how to use Windows

Learn how to use Windows | Learn how to use Windows
Learn how to use Windows | Learn how to use Windows



Help and Tips

Help and Tips | Help and Tips
Help and Tips | Help and Tips

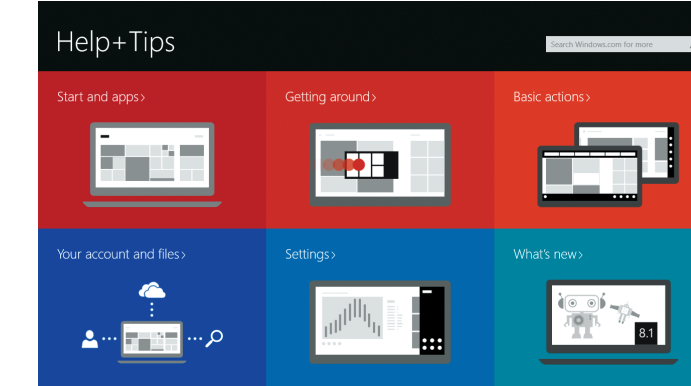

Connect to a network — optional

Connect to your network — optional
Connect to your network — optional
Connect to your network — optional
Connect to your network — optional



In the charms sidebar, tap **Settings** , tap the Wireless icon , select your network, and tap **Connect**.

In the charms sidebar, tap **Settings** , tap the Wireless icon , select your network, and tap **Connect**.

In the charms sidebar, tap **Settings** , tap the Wireless icon , select your network, and tap **Connect**.

In the charms sidebar, tap **Settings** , tap the Wireless icon , select your network, and tap **Connect**.

In the charms sidebar, tap **Settings** , tap the Wireless icon , select your network, and tap **Connect**.

NOTE: You may need to activate your network service before connecting.

NOTE: You may need to activate your network service before connecting.

NOTE: You may need to activate your network service before connecting.

NOTE: You may need to activate your network service before connecting.

NOTE: You may need to activate your network service before connecting.

Product support and manuals

Product support and manuals
Product support and manuals
Product support and manuals
Product support and manuals

Contact Dell

Contact Dell | Contact Dell
Contact Dell | Contact Dell

Regulatory and safety

Regulatory and safety | Regulatory and safety
Regulatory and safety | Regulatory and safety

Regulatory model

Regulatory model | Regulatory model
Regulatory model | Regulatory model

Regulatory type

Regulatory type | Regulatory type
Regulatory type | Regulatory type

Computer model

Computer model | Computer model
Computer model | Computer model

Información para NOM, o Norma Oficial Mexicana

La información que se proporciona a continuación se mostrará en los dispositivos que se describen en este documento, en conformidad con los requisitos de la Norma Oficial Mexicana (NOM):


Importador:

Dell México S.A. de C.V.
Paseo de la Reforma 2620 - Piso 11.º
Col. Lomas Altas
11950 México, D.F.


Número de modelo reglamentario:	T14G
Voltaje de entrada:	100 VAC–240 VAC
Corriente de entrada (máxima):	0,3 A
Frecuencia de entrada:	50 Hz–60 Hz
Corriente de salida:	2 A
Voltaje de salida	5 VDC

Connecting the keyboard

Connecting the keyboard | Connecting the keyboard
Connecting the keyboard | Connecting the keyboard

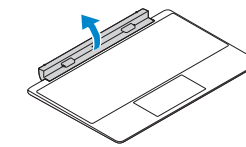


Turn the dock panel outwards to 90 degrees.
Turn the dock panel outwards to 90 degrees.
Turn the dock panel outwards to 90 degrees.
Turn the dock panel outwards to 90 degrees.

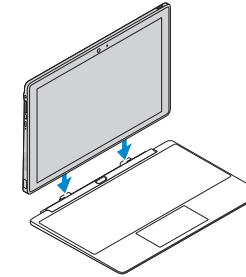

Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.
Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.
Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.
Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.
Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

Disconnecting the keyboard


Disconnecting the keyboard | Disconnecting the keyboard
Disconnecting the keyboard | Disconnecting the keyboard

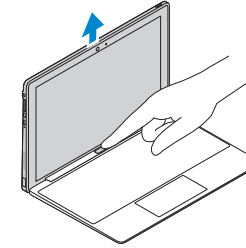

Press the undock button and remove the computer.
Press the undock button and remove the computer.
Press the undock button and remove the computer.
Press the undock button and remove the computer.


Modes

Modes | Modes | Modes

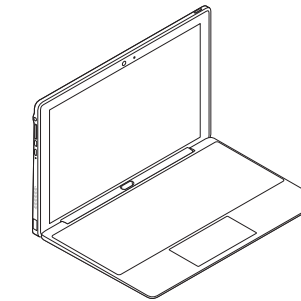

Laptop mode

Laptop mode
Laptop mode
Laptop mode
Laptop mode

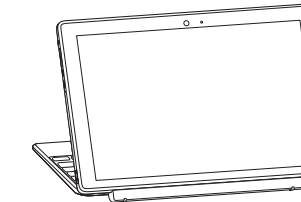


Media mode

Media mode
Media mode
Media mode
Media mode

Features

Features | Features | Features | Features

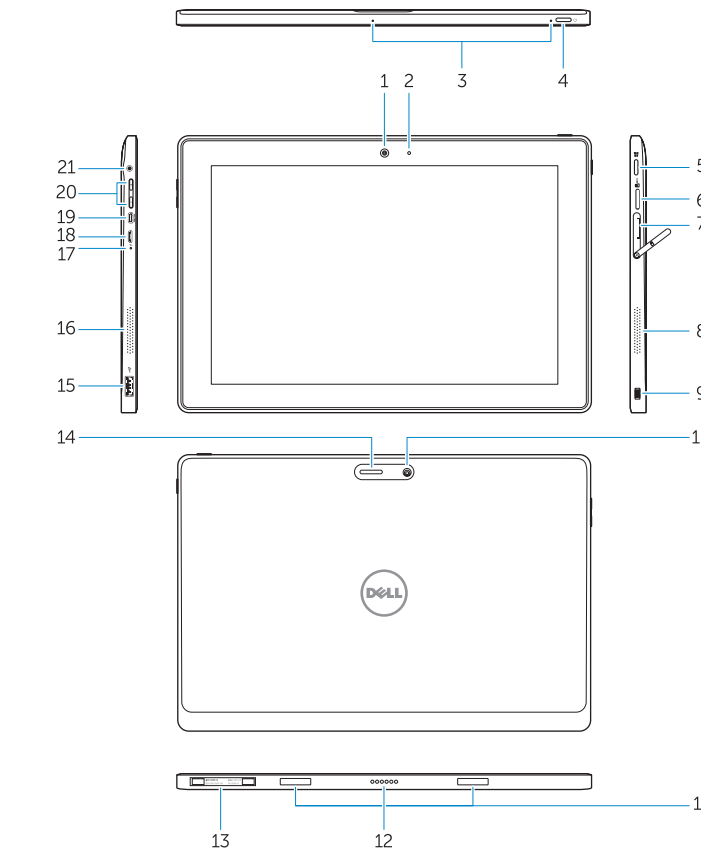

1. Camera
2. Camera-status light
3. Microphones
4. Power button
5. Windows button
6. MicroSD memory card reader
7. Micro-SIM reader (LTE/HSPA+ models only)
8. Speaker
9. Noble security-cable slot
10. Back camera
11. Dock-guide slots
12. Dock pins
13. Service-tag label
14. Wi-Fi / WWAN status light
15. USB 2.0 connector
16. Speaker
17. Battery-status light


18. Micro USB power connector
19. Micro HDMI connector
20. Volume buttons
21. Audio connector

Keyboard dock

22. Dock pins
23. Dock latches
24. Undock button
25. Touchpad

Pen (Optional)

26. Pen Tip (replaceable)
27. Programmable buttons
28. Pen loop

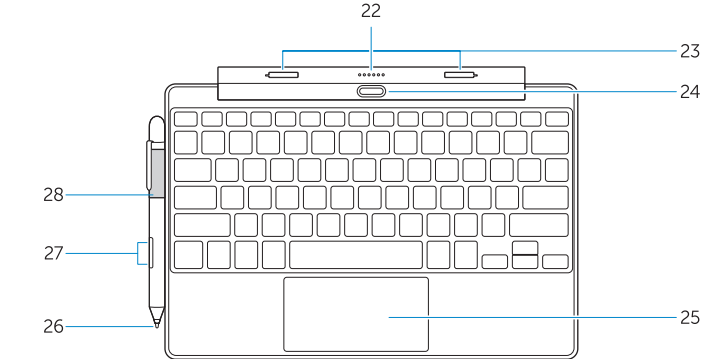

1. Language2
2. Language language language
3. Language
4. Language language
5. Language
6. Language language language
7. Language language
8. Language language language
9. Language language language
10. Language language
11. Language
12. Language language language
13. Language language
14. Language language language
15. Language
16. Language language
17. Language language language

1. Language3
2. Language language language
3. Language
4. Language language
5. Language
6. Language language language
7. Language language
8. Language language language
9. Language language language
10. Language language
11. Language
12. Language language language
13. Language language
14. Language language language
15. Language
16. Language language
17. Language language language

18. Language
19. Language language language
20. Language
21. Language language
22. Language language language
23. Language
24. Language language language
25. Language language
26. Language language language
27. Language
28. Language language

18. Language
19. Language language language
20. Language
21. Language language
22. Language language language
23. Language
24. Language language language
25. Language language
26. Language language language
27. Language
28. Language language

1. Language4
2. Language language language
3. Language
4. Language language
5. Language
6. Language language language
7. Language language
8. Language language language
9. Language language language
10. Language language
11. Language
12. Language language language
13. Language language
14. Language language language
15. Language
16. Language language
17. Language language language

1. Language5
2. Language language language
3. Language
4. Language language
5. Language
6. Language language language
7. Language language
8. Language language language
9. Language language language
10. Language language
11. Language
12. Language language language
13. Language language
14. Language language language
15. Language
16. Language language
17. Language language language

18. Language
19. Language language language
20. Language
21. Language language
22. Language language language
23. Language
24. Language language language
25. Language language
26. Language language language
27. Language
28. Language language

18. Language
19. Language language language
20. Language
21. Language language
22. Language language language
23. Language
24. Language language language
25. Language language
26. Language language language
27. Language
28. Language language