



- Insert the TR-151A with the Power button side facing out.



- Push TR-151A into the Belt Clip until it clicks in position.



- There are 4 circular magnets on back of the Belt Clip for attaching TR-151A onto the metal material of vehicle or machine.



- To remove TR-151A, slightly push outward the two sides of Belt Clip and slide out the TR-151A.