

USER MANUAL

Hardware rules:



- 1: VOL +
- 2: VOL-
- 3: Back to the home screen
- 4: Press the button to show the tools.
- 5: Return (Return to last interface.)
- 6: Earphone Connector
- 7: MICRO SD Card slot
- 8: USB Connector
- 9: Power ON/OFF, Short press to enter or leave the hibernation.
- 10: RESET
- 11: MIC Slot

MID hardware parameters	
CPU	BOXCHIP F20 533MHz
Memory	256MB DDR2 RAM

Storage	Memory built-in 2GB/4GB/8GB/16GB Support Micro SD card to expand memory upto 16GB	
Wireless	WiFi 802.11B/G/N	
USB	USB2.0 OTG high speed interface	
Audio	3.5mm headphone jack High-quality stereo loud speaker Built-in microphone Frequency response: 20Hz-20KHz SNR: greater than 90db	
Screen	Size	4.3 inch
	Resolution	480X272
	Color	65K colors
	Operating	Resistive touch panel
Other	Size	115*76*11 mm
	Battery	Built-in lithium polymer battery 1200MAH

 
Startup and shutdown

*Boot: Press and hold the power button, the system will enter the startup process, System has been started, are entering the Android system:



The system enters the default home interface.

*Shutdown: Press the power button, pop-up device options, select Shut Down, as follows:

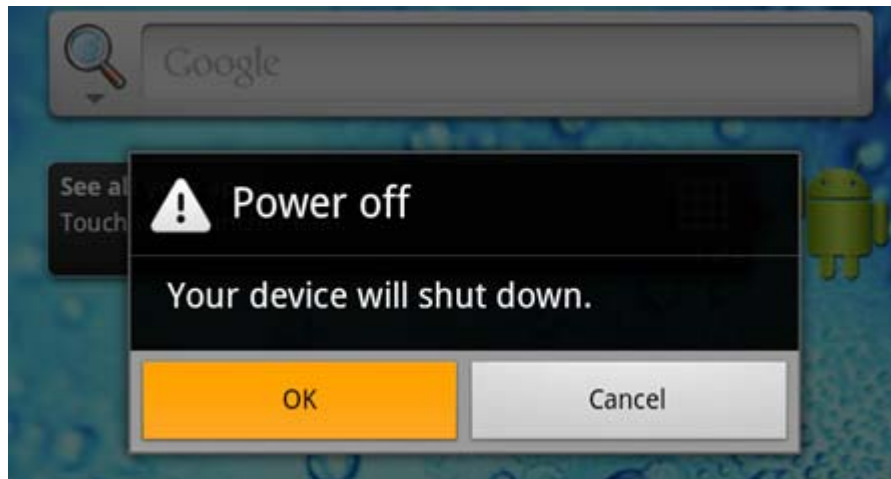


Click OK, you can safely shut down.


*Sleep: the machine under normal operating conditions, Short press the power button, Into hibernation, Now, Screen will close. Short press the power button again, Be able to resume normal mode. When the time being use this MID can enable this feature when, To reduce power consumption.


Desktop:

 System after the completion of normal start, Desktop can see Status Bar、Quick Search Bar、Main menu labels and market.

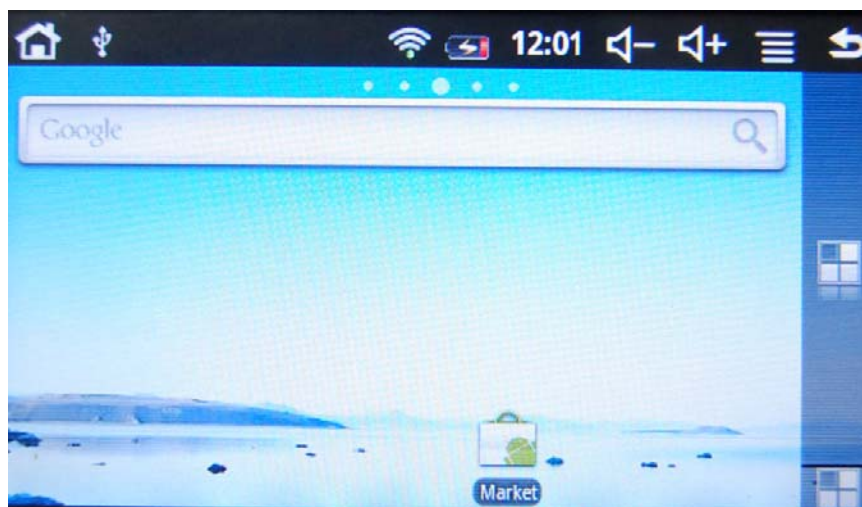

Main Menu Operation:

 
Click  to show the main menu ,And is as follows:

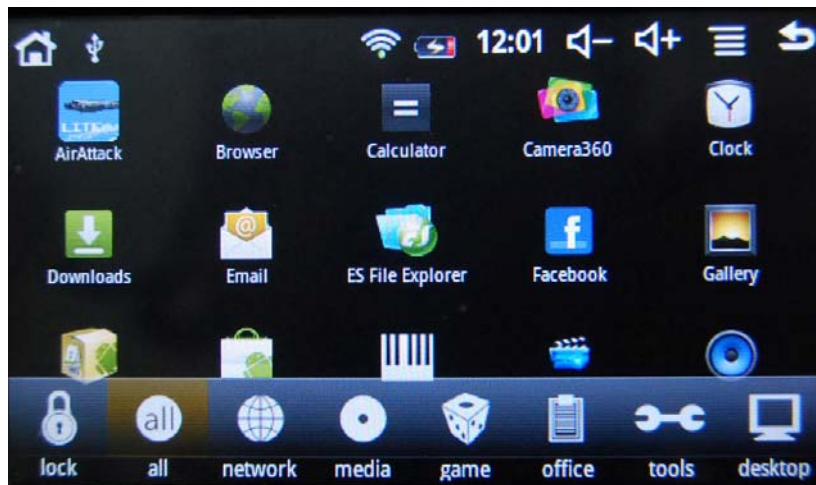

In the main menu, the system can be set to run existing applications, music player, video player, web browsing and other operations.

System Settings:

 Click the main menu interface in the "Settings" icon, you can open the system settings interface, as shown below:

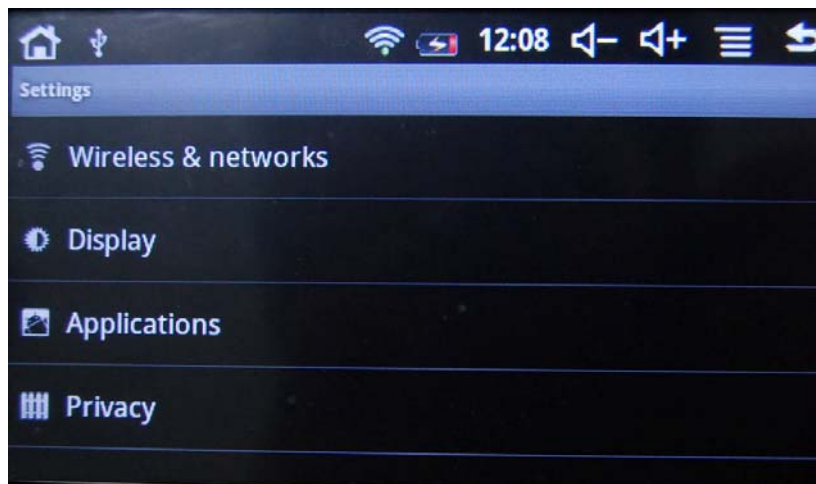

Select the appropriate operation of the relevant items, such as:

 
- * Wireless and network
- * display
- * Date & time
- * About Device
- Etc

*Date and time settings:

Set interface options "time and date settings options" to enter the date and time settings interface:

Can also select to set the date, select the time zone, set the time, time format, date format and other information.


For example, choose to set the date, as follows:

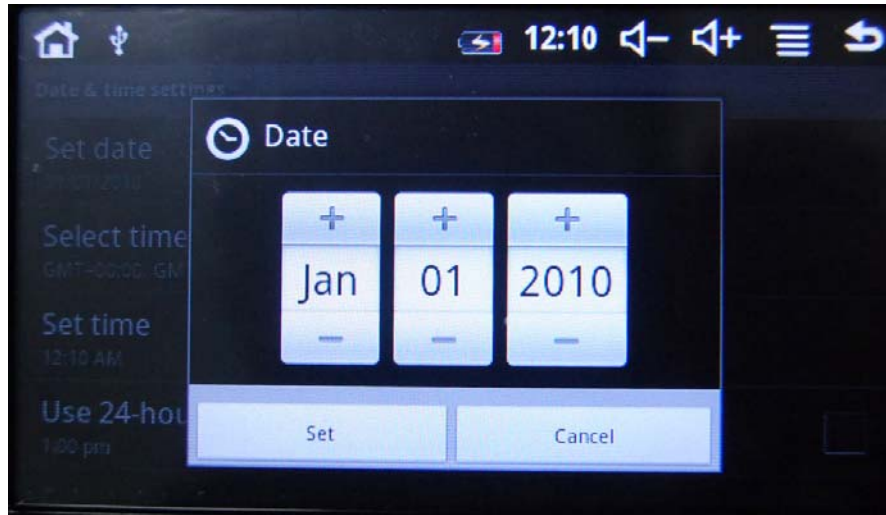

Select +: that the increase of 1 unit,

Select -: that the reduction of 1 unit.

 
Also can choose the number, enter the input mode. Directly entering the desired number, then select Done. As follows:

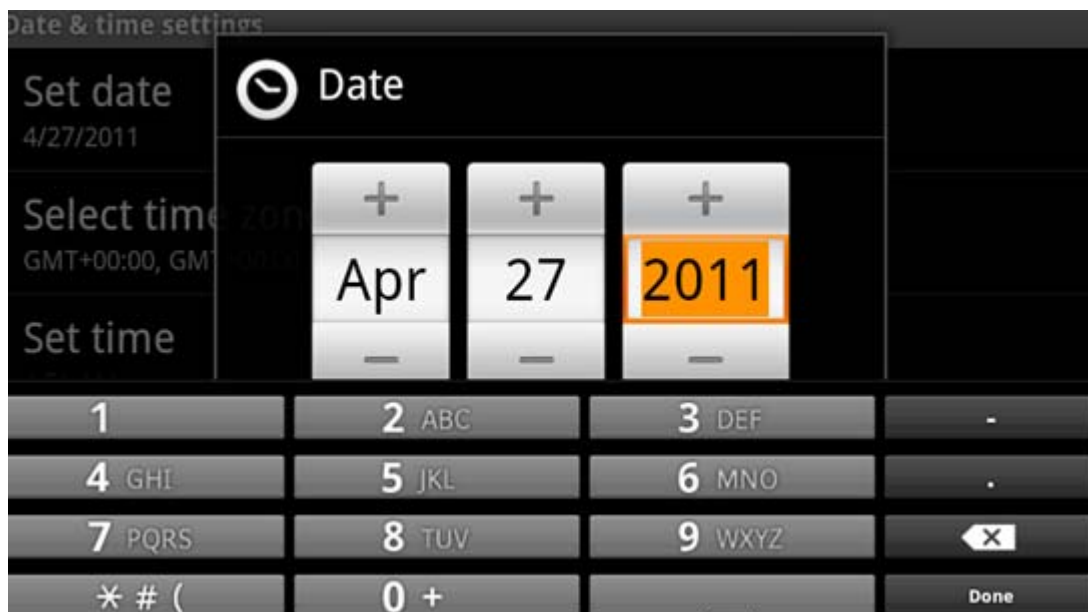

Select "Settings." If you enter the number of legitimate, then the operation is successful, the system will set the option to use the new.

*Display:

 In the setup interface choose "Display" to enter the display settings interface, select "Brightness", there are interface:

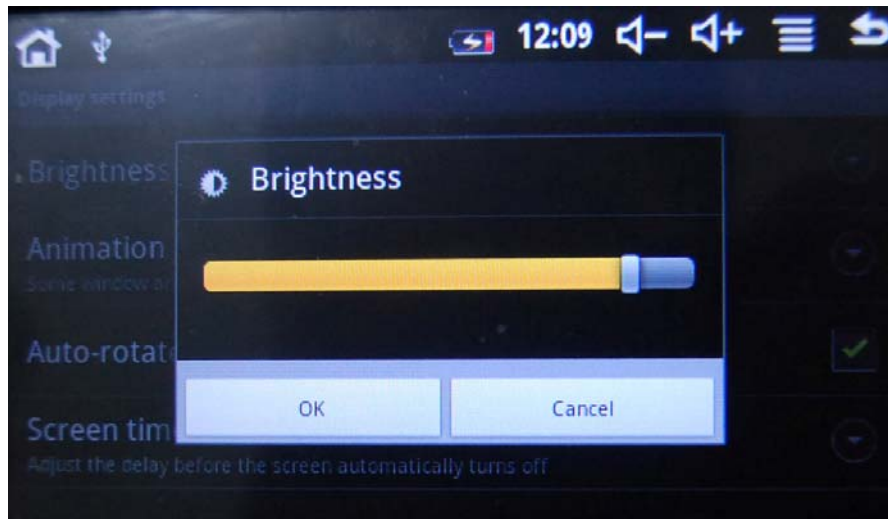


*screen timeout:

Screen timeout: the screen automatically locks the delay before.


In the setup interface choose " display settings" to enter the display settings interface, scroll down section, select the " screen timeout " interface appears, as follows:

 Note: In the video, the screen auto-standby function does not.

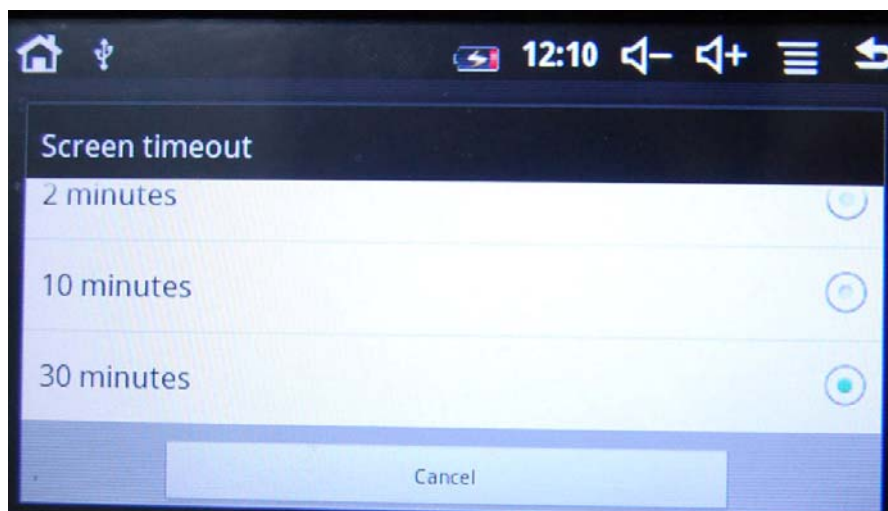


*WIFI Wireless Connection:

 Click the main menu "Settings" icon, go to "System Settings" screen, click on "Wireless and network" into the "Wireless and network" setup interface. Click the "WIFI" section to quickly open the WIFI feature, click on "WIFI settings" column enter "WIFI set interface" as shown below:

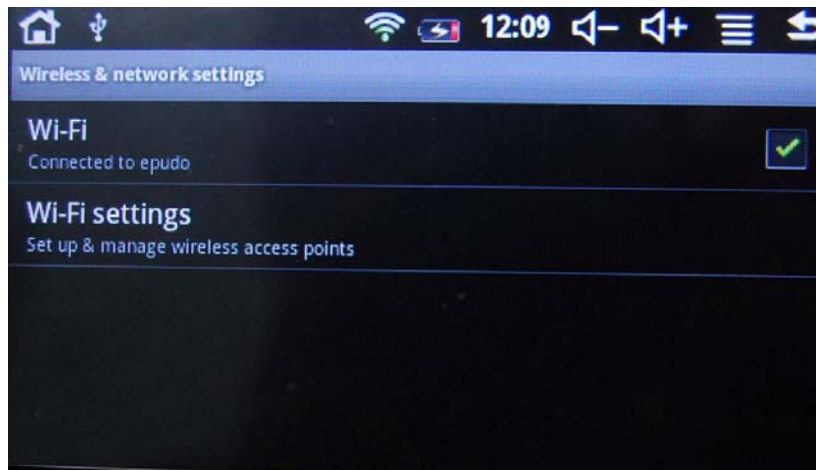

 In the "WIFI settings" interface (above), click on the WIFI column also can open and close the WIFI feature, click on the "Network Notice" lists MID search to the wireless router, click the search name will pop up settings window, please follow the prompts to complete the WIFI network links. Some encrypted network, need to enter a valid key. Link diagram below:

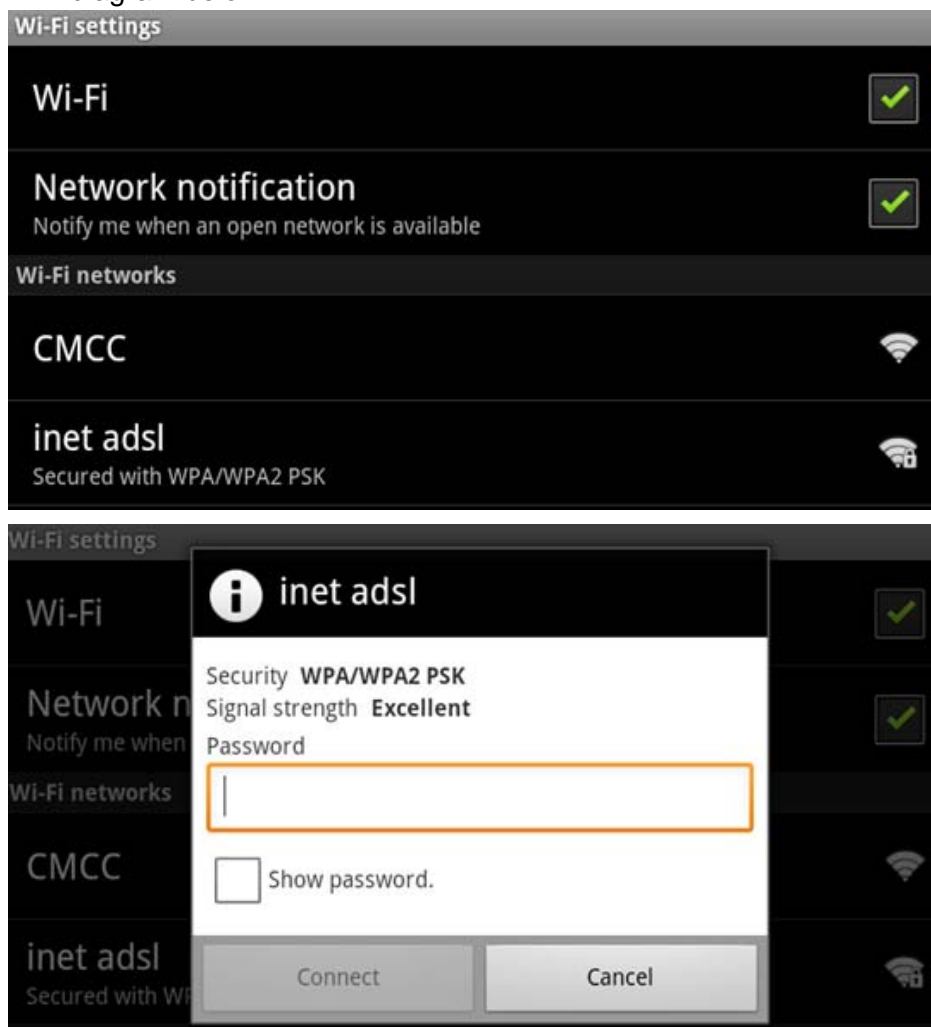


According to the above method to connected Wi-Fi.

Touch Calibration

When you first start the system by default called touch calibration procedures. Users can also in the main menu, select "touch calibration", enter the touch calibration procedures.

Follow the prompts to complete the calibration operation, if successful touch calibration, the system prompts and automatically exit the touch calibration interface.

 As follows:




After complete calibration,must reboot the MID to keep calibraton valid.

Network:

Web browsing:

 When the connected network, open the Web browser enter the URL, you can quickly browse the Web; or through the main desktop search bar enter the URL, open the web page.

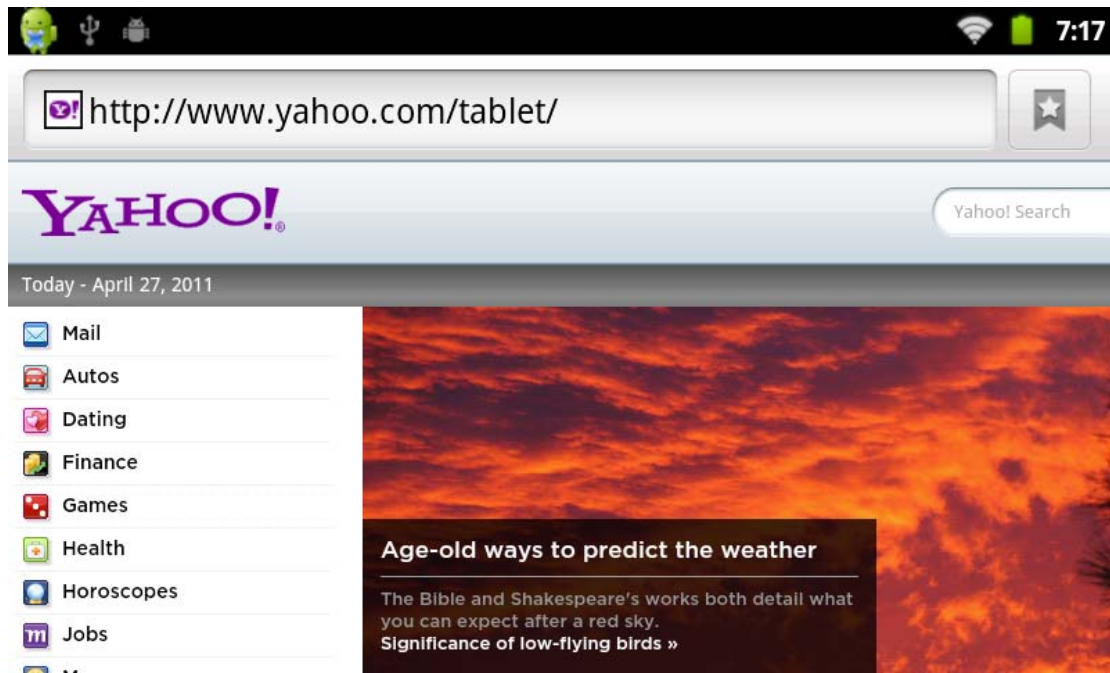

Free page can use the zoom controls zoom, as shown below:



or websites to search Alexa's Web information da

 
es: laptops or lexus.com

Online video:

Through "Android market" or other means to download online video player software, online TV player, online music software, then install to this MID. Open the software installed, you can watch online video or online TV, listening to online radio stations. Users can also download other third-party Web applications, including web browsing, video playback, Web client, instant messaging software, etc.


Music:

Click the main menu in the "music" icon, you can enter the music player interface. Here lists the system default user data area of all audio files. As shown below:

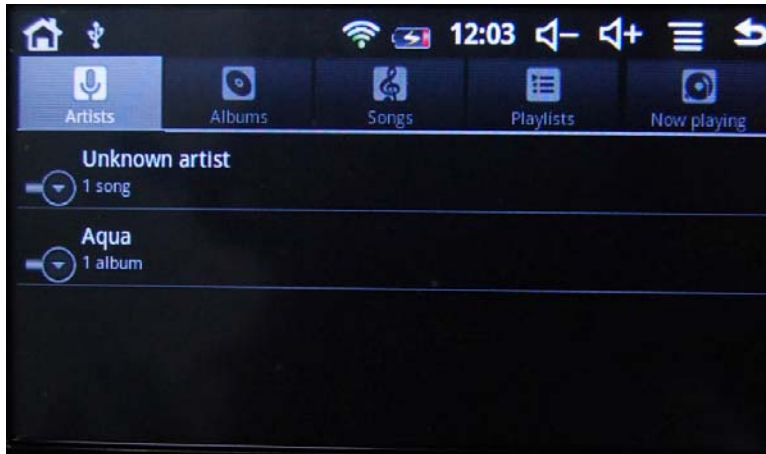

We can spread through the USB audio files synchronized manner, or by inserting the SD card with audio files were audio files, you can also download the audio files via the network.

 Select the appropriate tab key, you can see for example "Artist", "album", "songs" and other interfaces. Select song to play.

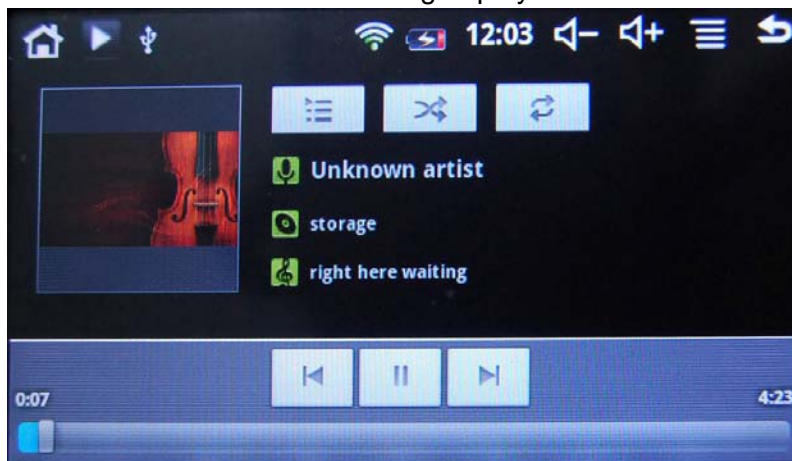

Video:

Click the main menu in the " Video Player " into the "Video Player" the main interface, there will list all the video files. As shown below:

Video Player	
Lady_Gaga-Poker_Face	59MB
Show.Girls	206MB
a wonderful day	54MB

Select video file into the video player interface, as shown below. Can select "Play", "stop", "Volume +", "Volume -", "fast forward", "rewind", "progress bar" and control keys to control playback of the progress.



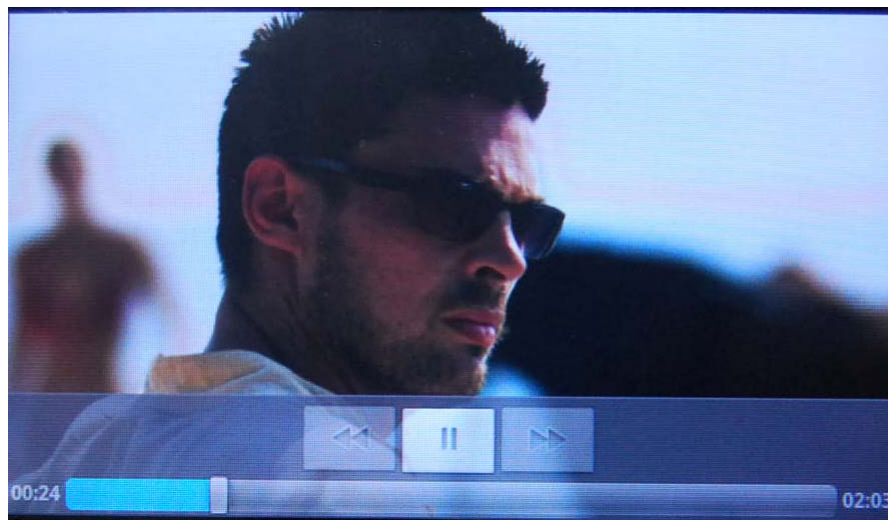 


Photo Browse:

 Click the "Photo Browser", there will list all the picture files . As shown below:

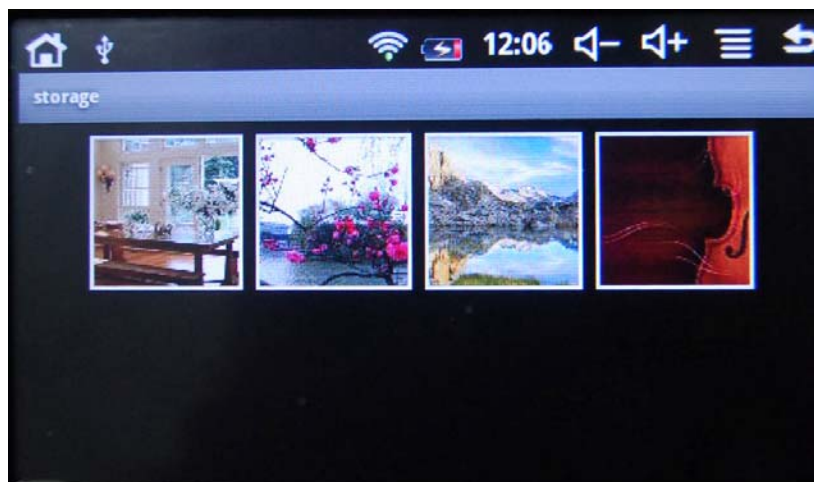


Select a picture file, enter the picture playback interface, as shown below. Can select "Zoom", "narrow" "set" and "delete" etc operation.

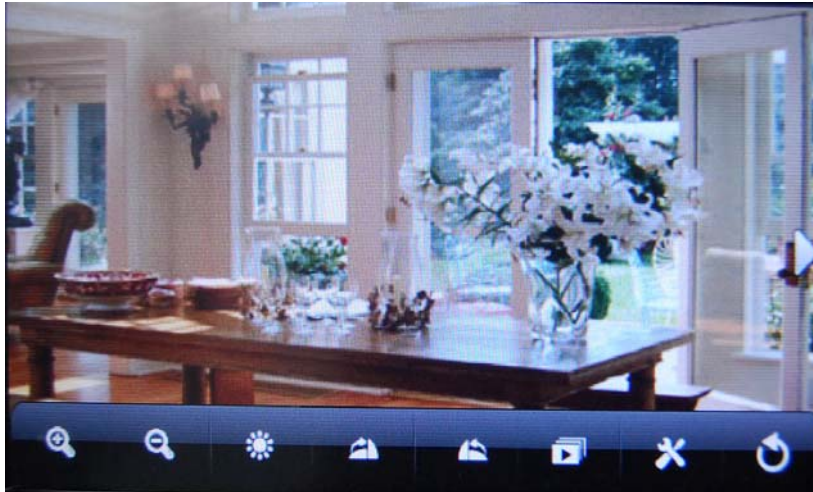 


Market:

 Click the main menu in the "Market" icon into the "Market" the main interface. As shown below:

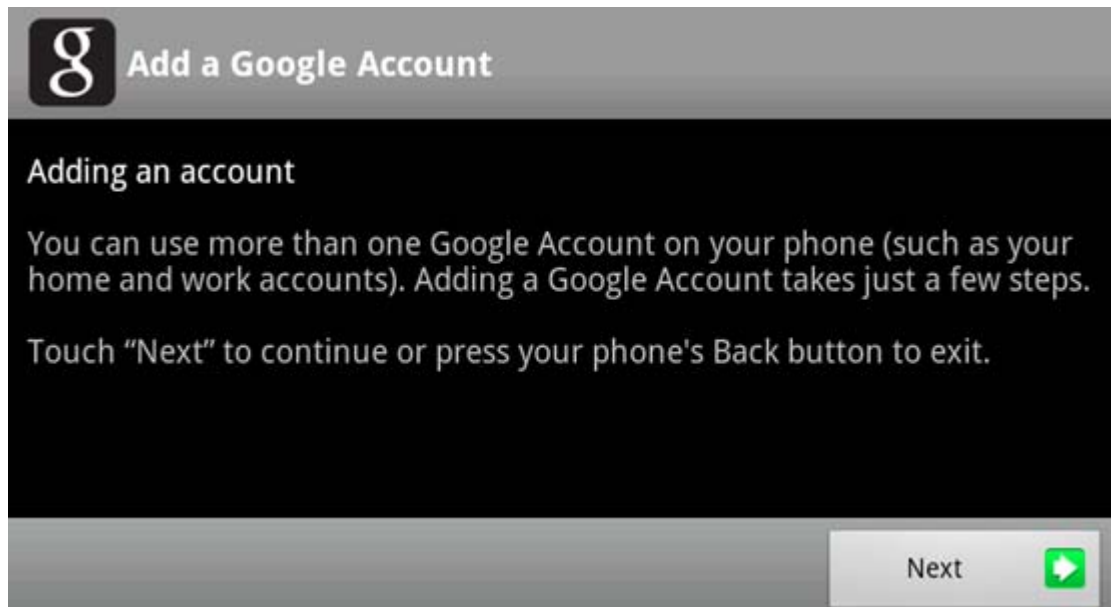


Select "Next", as shown below:

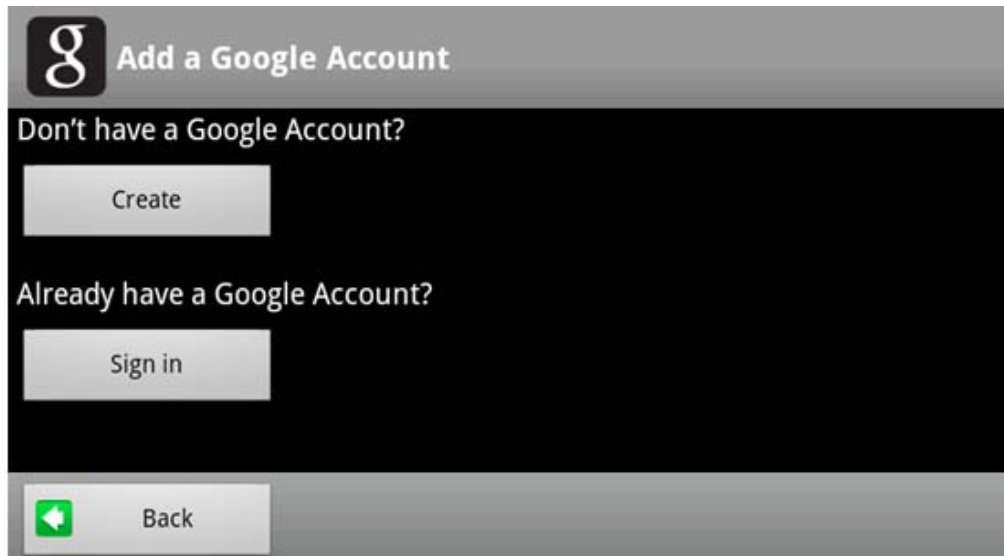 

The screenshot shows the 'Add a Google Account' interface. At the top, there is a header with the Google 'g' logo and the text 'Add a Google Account'. Below this, the text 'Don't have a Google Account?' is displayed, followed by a 'Create' button. Underneath, the text 'Already have a Google Account?' is shown, followed by a 'Sign in' button. At the bottom left, there is a 'Back' button with a green left-pointing arrow icon.

 If have no Gmail account, should create a Gmail account, as shown below:

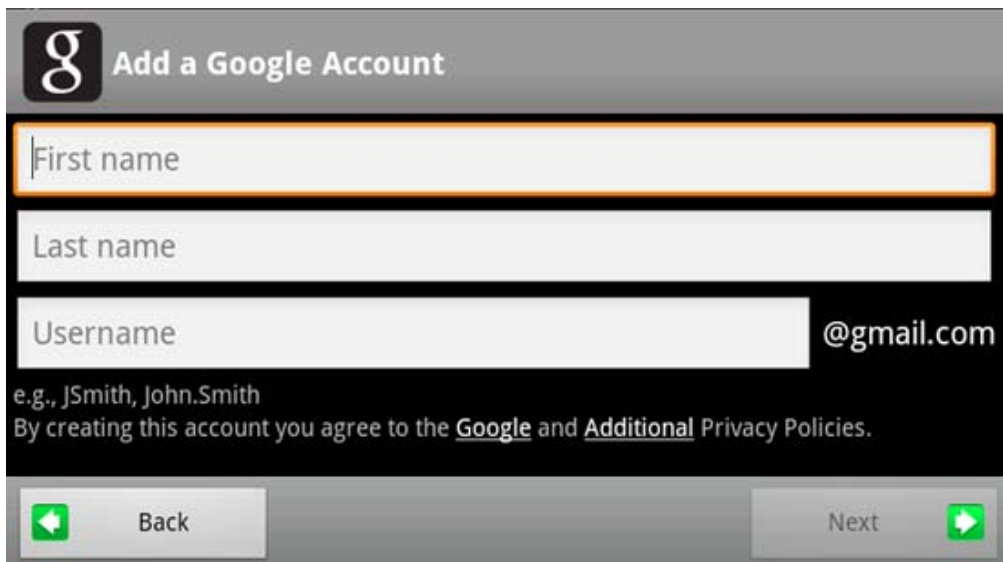

This screenshot shows the account creation form. It features three input fields: 'First name', 'Last name', and 'Username'. The 'Username' field is followed by the text '@gmail.com'. Below the input fields, there is a line of text: 'e.g., JSmith, John.Smith' and another line: 'By creating this account you agree to the [Google](#) and [Additional](#) Privacy Policies.' At the bottom, there are two buttons: 'Back' with a green left-pointing arrow icon on the left, and 'Next' with a green right-pointing arrow icon on the right.

Set a "Google account" account, as shown below:

g Add a Google Account

Qiyanhua

Qi

qyhwhhp @gmail.com

e.g., JSmith, John.Smith

By creating this account you agree to the [Google](#) and [Additional](#) Privacy Policies.

Back Next

Select "Next", as shown below:

g Add a Google Account

Type a password

(8 characters minimum)

Password strength Too short

Confirm password

Back Next

Set password for the above account, then select "Next", as shown below:

g Add a Google Account

Type a password


(8 characters minimum)

Password strength strong


Confirm password

Back Next

The final picture as shown below:

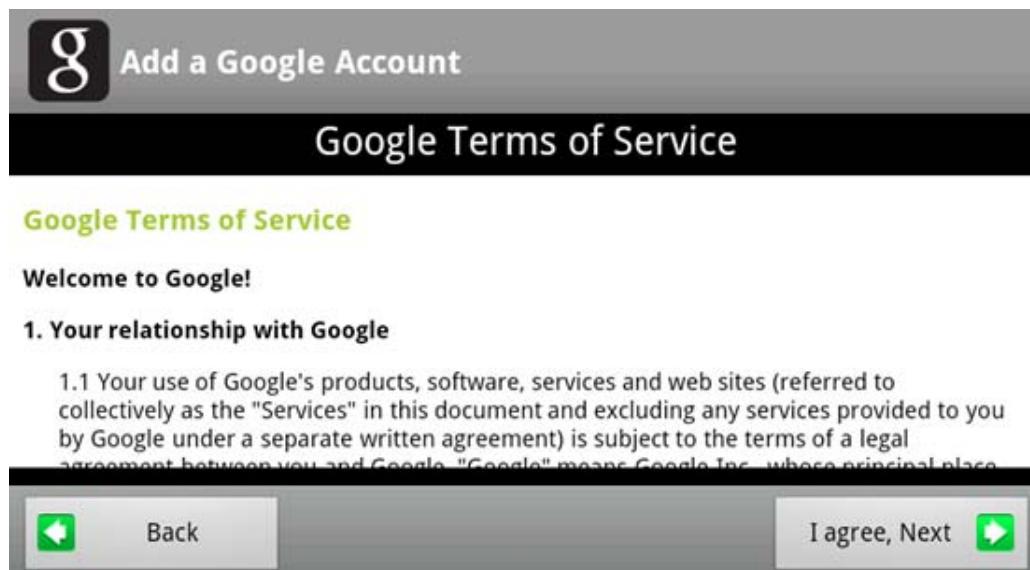 

Select "I agree, Next", as shown below:

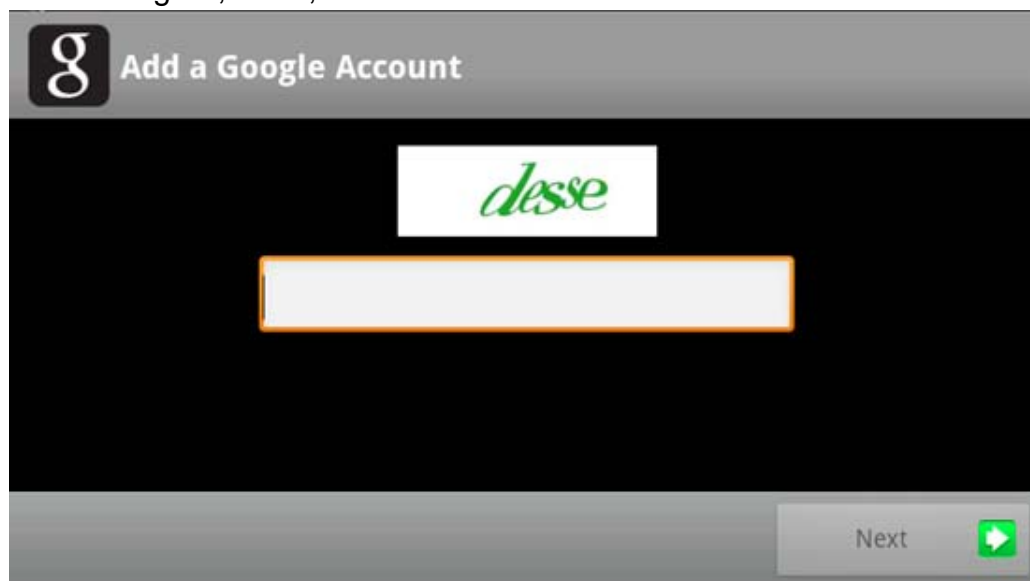 


Fill in Security Code, select "Next" to enter market.

E-mail client:

In the main menu, click "Email" icon to enter the e-mail client. The first entry will ask to configure the account information. As shown below:

 ]

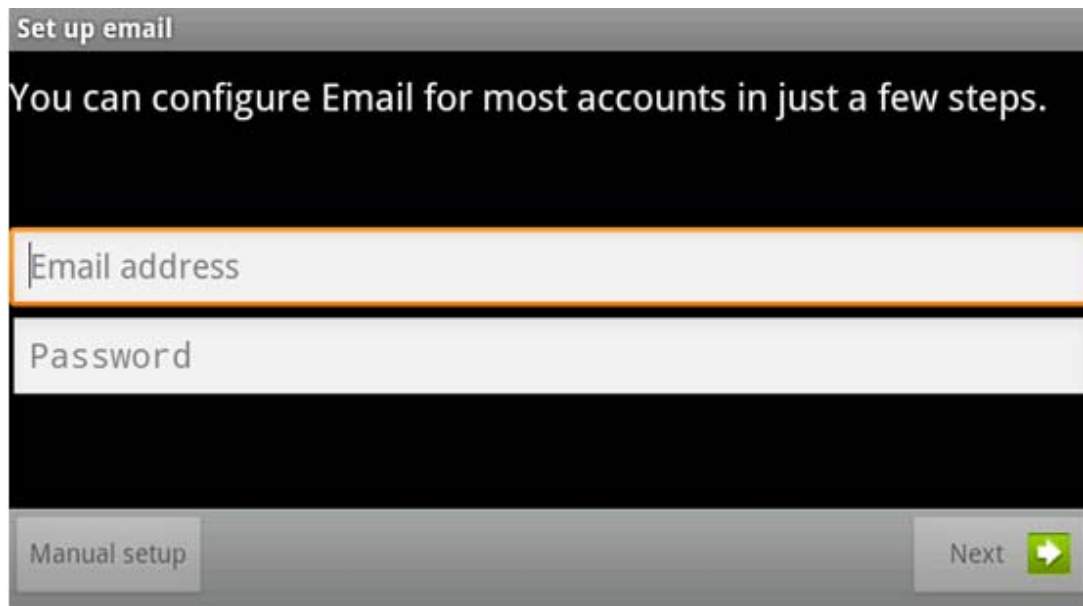

Set up email

You can configure Email for most accounts in just a few steps.

Email address

Password

Manual setup Next

 
E-mail require network support, please email links to ensure normal.

Here we qiyanhua7637@163.com Case:

qiyanhua7637@163.com (Enter the email address bar inside your valid e-mail address: qiyanhua7637@163.com).

In the Password field enter your valid password: *****.

You can then select the "Next", select the account type interface appears as shown below:

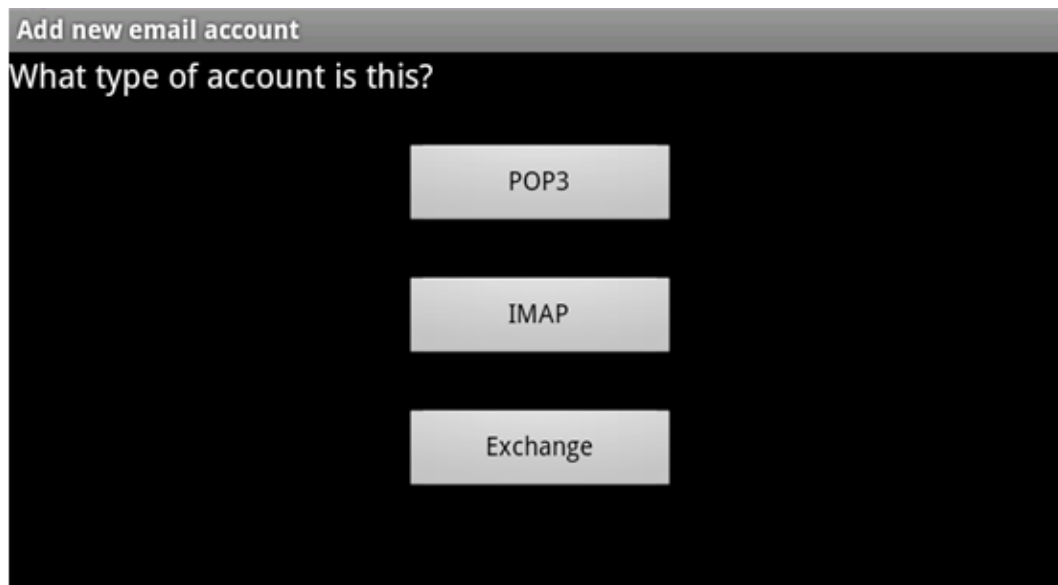

Add new email account

What type of account is this?

POP3

IMAP

Exchange

Here we are using a POP3 account type. Appears to accept the server after setting the interface as follows:

Incoming server settings	
Username	qiyanhua7637
Password
POP3 server	pop.163.com
Port	110
Security type	

Please e-mail providers, each based on the information, set different parameters, such as:

POP3 server: The system default is "163.com", should be amended to "pop.163.com"

Port number "110"

Then select "Next", will enter the "Check to accept the server settings", if set correctly, there will be "outgoing server settings" interface as follows:

Outgoing server settings	
SMTP server	smtp.163.com
Port	25
Security type	None
<input checked="" type="checkbox"/> Require sign-in.	
Username	qiyanhua7637

sed SMIP server "163.com" as "smtp.163.com"

Modify the port number "587" to "25"

Drag the scroll bar, select "Next" and enter "Check outgoing server settings" interface. If the settings are correct, will enter the following interface:

Account options

Inbox checking frequency

Every 15 minutes

☐ Send email from this account by default.

☒ Notify me when email arrives.

Next

Select "Next", you can enter the account information to customize the interface:

Set up email

Your account is set up, and email is on its way!

Give this account a name (optional)

Your name (displayed on outgoing messages)

Done

 
In the "Your Name" enter the bar you want to show the name of outgoing mail, enter here: Rocky

Then click "Finish" button to enter the mail interface. It will automatically load the e-mail, Select a column can view the messages, you can view the column inside a "reply", "delete", "Open attachment" and other operations.

External devices:

*USB connection:

MID using the USB connection and PC, the default connection method is the synchronous mode. Can drag the status bar pulled down, there are interface:

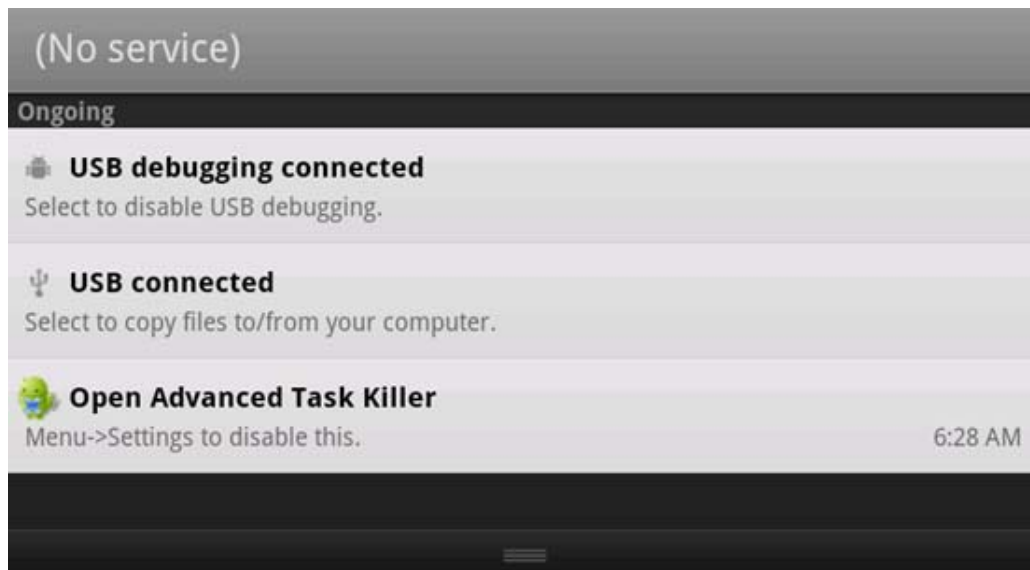

"USB is connected": said external memory (SD card).

Loading is complete, you can see in the PC end of the corresponding letter.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.