

Tablet PC

Android 5.1

User Manual

Tablet of Contents

Specifications.....
What's inside the box.....
Tablet Parts.....
Getting started.....
How to use TF card
How to connect to PC
Connection to Internet.....
Camera.....
Trouble Shooting.....
Warnings.....

Specifications

Internal Storage 8GB
Expansion Memory: Micro SD card up to 32GB (not supplied)
Display: 7 inch TN 1024X600 Capacitive multi-touch screen
CPU: A33 Quad Core, A7 1.3GHz
RAM: 1GB DDR III
GPU Mali-400 MP2
Built-In Wireless (b/g/n)
Front camera 0,3 Mpixels
Built-in microphone and speaker

Micro USB input (USB cable supplied)
 Micro SD slot
 USB OTG function (HOST cable supplied)
 Earphones jack 3,5mm
 Operating System: Android 5.1KitKat
 Rechargeable battery Lipo 3,7V (2200mAh)
 AC Adapter: 100/240V – 50/60Hz DC 5V-1.5A
 Weight: 254g
 Instruction manual - 1pc
 Warranty card 1p


Name	function
Reset	Reset the system in case of stuck and reboot
Volume -	Press to decrease the volume
Micro SD input	Insert a micro SD card (up to 32GB)
Volume +	Press to increase the volume
Microphone	Built-in mic
USB OTG Port/micro USB slot	PC connection/peripheral connection through OTG cable (for example keyboard, USB device)
Earphone jack	Connect earphone to this standard 3.5mm jack
Power	Keep pressed to turn on/off the tablet; shortly press to activate standby
Speaker	Built-in speaker

Getting Started

Battery Charging

The tablet has a built-in rechargeable Li-polymer battery.

1. To charge connect the AC power adapter to the micro USB jack on the top side of the tablet.
2. The battery icon shows the battery status and charging status

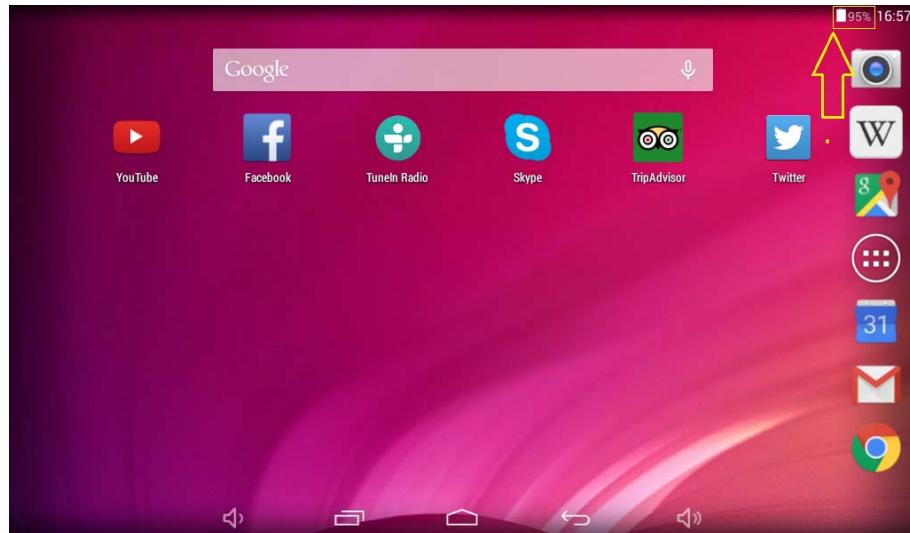

3. The tablet can be used even if the battery is being charged.
4. no replacement of battery without authorization, or the explosion hazard might happen.
5. Recharge it for at least half hour if it has been idle for long time and fails to start itself.
6. Regularly recharge it at least one time monthly
7. 35° —5° is the optimum temperature for the battery recharging or the battery performance might deteriorate slightly

Disposal

the battery might contain the polluting material, please give it to the official

recycling-station before disposing the tablet pc, and don't litter.

Power ON/OFF

ON:

press the  button for continuous 5 seconds until the tablet turns "ON".

OFF:

1. Press the  button for continuous 5 seconds and it will appear
2. Select OK to power off the tablet

 
Screen Lock

This feature locks the screen, at the same time turn OFF the screen's backlight after a few seconds.

Screen locks when:

1. System is idle.
2. Manually activated by pressing the Power button once.

Screen unlock :



Home screen

The Home screen will look similar to the picture below. It is actually five screens, each of which can have a different layout of icons. To switch between screens, simply slide your finger left or right across the display.

The status bar and navigation buttons are always visible, no matter which Home screen you can currently viewing.

5



The Desktop contains shortcuts to your most-used applications and widgets
Touch the screen icon to quickly search the World Wide Web using Google.



The  icon will launch the Application menu.

The status bar displays system information, such as current time, wireless connectivity and battery.

Touch to Expand the status bar for more detailed information.

The  button moves back one step to the previous menu/page.

The  buttons returns immediately to the Android desktop.

The  button display a menu of recently opened applications.

Settings Menu

The settings menu allows you to adjust Tablet system configuration.

To change settings:



1. Touch the "Settings"  menu icon on the Application menu. The Settings menu will open.

6

2. Guide your finger up or down the left side of the screen to scroll through the list of available categories.

3. Touch a category title to view further options on the right side of the screen.

Wi-Fi - Connect to /disconnect from wireless networks, view connection status

Data usage - view current usage for each application

Sound - Change volume, touch sound, screen lock sounds etc

Display - Change brightness, wallpaper, sleep settings, font size etc

Storage - Manage NAND and Micro SD card, view available capacity etc

Battery - See battery status and powered-on time

Apps - Manage applications, running services etc

Location services - approximate location detection

Security - Change screen lock type, encryption, password, credential storage etc

Language & input Select language, add to the dictionary, edit on-screen keyboard settings, vocal search, etc

Backup & reset - Backup & restore data, perform factory reset, etc

Date & time - Set date, time zone, time, clock format etc
Accessibility - Set up large text, auto-rotate screen, speak password etc
Print – online printing services manager (ex. Google Cloud Print)
About tablet - Information about your Android device

How to Use TF card

1. Insert the TF card into the TF card slot. Gently push TF card into slot until it clicks into place.
2. A prompt will be seen on the screen saying “ Preparing SD card “


Removing TF card

1. Close all applications and documents which have been opened from the TF card.
3. Select “Setting” and find “ Storage” then click “Unmount SD card”.
4. A prompt will be seen on the screen saying “ SD card safe to remove”
5. Gently press the TF card to remove and pull out the TF card.

Note: Insert the TF card in correct position, otherwise it will damage the card and the slot.

Software Keyboard

The tablet has a software keyboard which automatically show up when you tap the place on screen where text or number are to be entered.

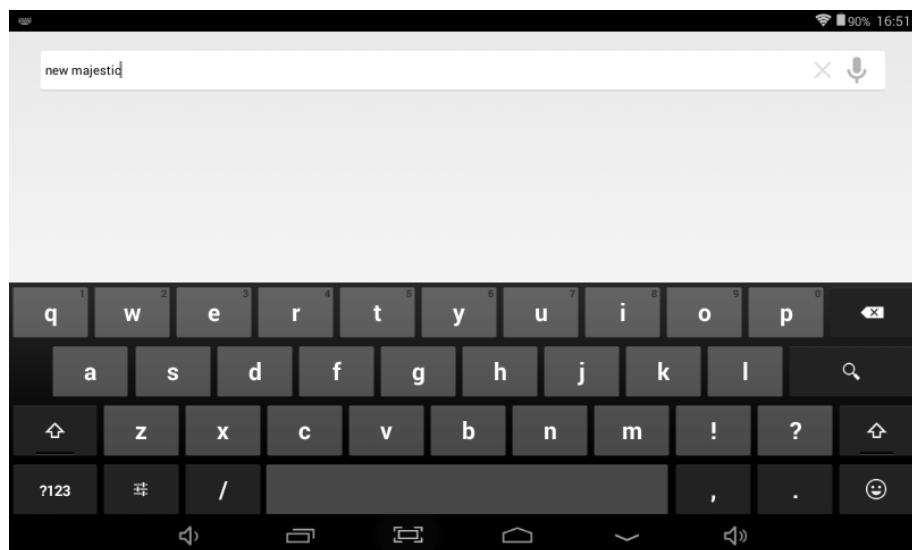

Touch Screen

The touch screen responds to finger touch.

Note: don't place any object on the touch screen for it may damage or crush the screen.

Single Click: single click one icon to choose the icon or option you want.

Long Press: press and hold one icon to make appear a menu related to the executed function (if available).

Drag: drag on the screen and you can move between magic cube sides or drag the application icons into the shortcut bar.

How to connect with computer

Note: Turn on your Tablet before connect the Tablet to PC by USB cable.

- 1 Use USB cable to connect MID with computer. System will notice USB connected on bottom of screen.
- 2 The computer will detect an external disc named "rk3026"; this is the internal memory of the tablet.
3. Then the USB connection has been successfully.

Connection to Internet

Wireless:

- 1 Select "Settings"
- 2 Select "Wi-Fi" and slide OFF to ON status.



- 3 All detected wireless networks in the area will be listed, Click to select desired wireless connection.
- 4 Enter WEP key or network key if necessary.
- 5 Once connected to a wireless network, settings will be saved
- 6 Wireless icon will appear on the taskbar when connected successfully.

Note: when the tablet detects the same wireless network in the future, the device will connect to the network automatically with same password record.

Camera



Touch the icon to enter camera mode and the interface is shown as follows:



1. Touch the icon in the middle to take photo



2. Move the icon and you can switch camera mode to camera recording mode.

3. touch the icon  to start video recording.

11


Trouble Shooting

Close Application

All running applications take up system memory and will slow down system response. Please shut down all **idle applications** to release memory and get the system speed back to normal.



To close the application, click the icon  on the shortcut bar to enter the system configuration interface. Select the **Application** → **Running services** and the interface is shown as follows:

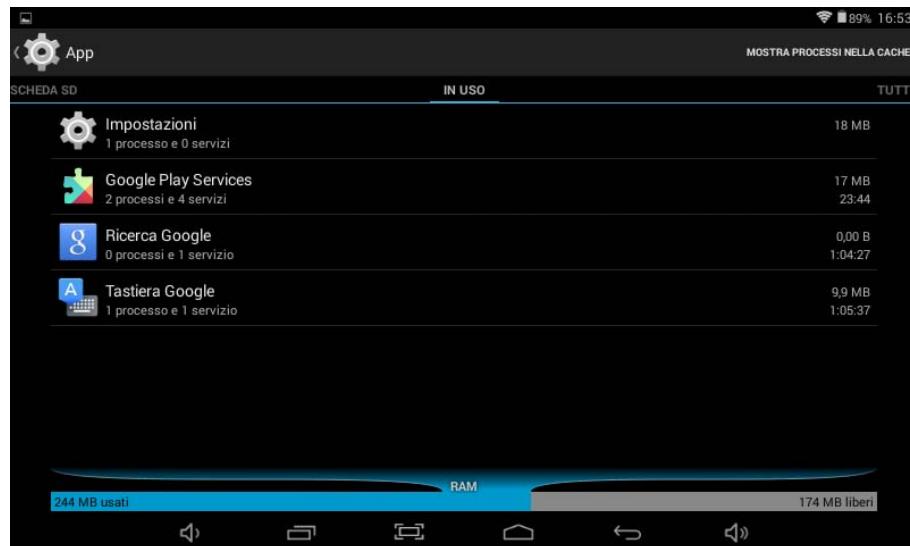

Tap the application you want to close. A pop-up window will be displayed.
Tap “Stop” to close that application.

12

Mandatory Power off

1. Press and hold the power button for 5 seconds and the device will be powered off.
2. Press the reset button on the back and the device will be forced to be powered off.

Restore Default Setting

If you want to reset the factory setting and erase all materials, please press **Settings** → **Privacy** → **Factory data reset**.

***** Warning: Factory data reset setting will delete your data and configuration of system and applications from downloading.***

****Please use this function carefully.**

13

WARNINGS

- Do not upgrade the operating system with new or different versions, the device could be damaged.
- The guide to applications use, if available, will be directly inserted in the application by the developers. New Majestic doesn't take charge of possible errors found in the online guides.
- All brands and copyright are property of the related owners.
- New Majestic Spa is not responsible for the problems of incompatibility found during the use of software developed by third party. New Majestic Spa declines all responsibilities on the breach of copyright from the user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.