


1:64 SCALE RADIO CONTROL

START


1. Press the release buttons on each side of the base and pull up on the clear cover to remove. (see Fig. 1)
2. Slide the car forward to remove from pedestal. (see Fig. 2)
3. Slide the antenna forward to remove from antenna holder. (see Fig. 3)
4. Press the charger release button to eject the charger from the base. (see Fig. 3)
5. Unscrew and remove the battery cover located on the charger. (see Fig. 4)
6. Insert two "AA" (1.5V) alkaline batteries into the battery compartment as indicated.
7. Replace the battery cover and tighten screw securely.

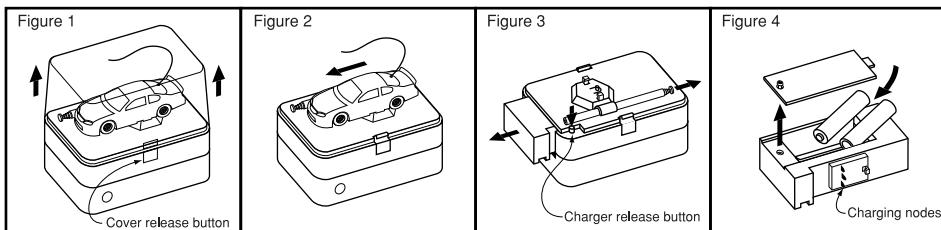

CHARGE


NOTE: Do not attempt to charge the car on the pedestal (see Fig. 2 & 3 for pedestal location). Car can ONLY be charged by the charger/battery pack (see instructions below).

1. Place car on charger by lining up the charging contacts on the bottom of the car with the charging nodes on the charger. Push down and back on the car to lock in place and begin charging. (see Fig. 4, 5, & 6)
2. The charging indicator light on the side of the charger will light up for approximately 60 seconds, indicating charging is in progress.
3. When charging is complete, pull up and forward on the car to release it from the charger. (see Fig. 7)
4. Replace the charger into the base/controller properly.

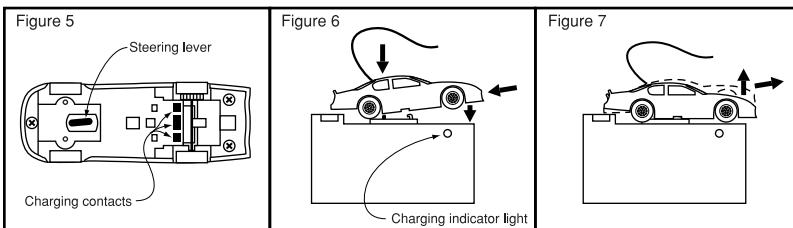

RACE

1. Insert antenna into hole on the top of the charger and turn clockwise to screw into place. DO NOT OVER TIGHTEN. (see Fig. 8)
2. Place car on smooth, flat surface and extend antenna fully.
3. For maximum performance, hold the controller upright so the antenna points up (do not point the antenna at the car- this will reduce the signal range).
4. Press the forward and reverse buttons to make the car move forward or backward. Press the left turn and right turn buttons to make the car turn left or right. NOTE: The car will only turn while moving forward or backward. (see Fig. 8)
5. Adjust the steering lever located on the bottom of the car if the car does not go straight when pushing the forward button. (see Fig. 5)
6. Simply re-charge the car as soon as you experience a reduction in speed and/or control.

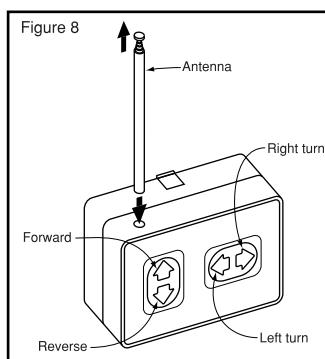

TROUBLESHOOTING

- Make sure the racer is fully charged.
- Make sure the charger is completely inserted into the controller.
- Make sure the batteries are inserted properly into the charger.
- Replace old batteries with new alkaline batteries.

NOTES

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAFETY

Do not operate during thunderstorms.

Avoid water, sand, and snow when operating your racer. In addition, do not submerge your racer or controller in water.

Always select a safe place to play. Never drive your racer on populated streets.

Keep fingers, hair, and loose clothing away from the tires, gears, and motor while the racer is running.
This product contains small parts- not suitable for children under 3 years of age.

BATTERY PRECAUTIONS

Batteries should be inserted with the correct polarity.

Do not short circuit battery contacts.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

When not in use for an extended time, remove batteries to prevent possible leakage.

Exhausted batteries should be removed from the charger.

Do not dispose batteries in a fire - batteries may leak or explode.

Only batteries of the same or equivalent type as recommended are to be used.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are only to be charged under adult supervision.

Please keep this instruction sheet for future reference as it contains important information.

Questions or problems? DO NOT RETURN TO STORE- call our toll free help line at 1-800-728-7940 for information and assistance.

Manufactured under license by:
TEAM UP INTERNATIONAL, INC.
4545 Enka Highway
Morristown, TN 37813
423-585-5300

Made and printed in China