

WALKIE-TALKIES

**Important: Please save this instruction sheet.
It contains valuable product information.**

Battery Safety Information:

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Connect battery terminals to battery clip correctly. Do not force into place.
- Do not place anything across the battery terminals.
- Only use the batteries specified above.
- We recommend you use alkaline batteries. Rechargeable batteries may affect performance.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.
- Do not use rechargeable batteries.
- Only the batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.

Attention Adults—To Replace Batteries

Requires two 9-volt batteries, one for each Walkie-Talkie (not included).

- Use a small Phillips head screwdriver to loosen the screw in the **battery compartment door** on the back of each Walkie-Talkie (Figure A). Unclip the door.
- Snap the **battery clip** on the battery and place inside compartment (Figure B).
- Replace the battery compartment door and tighten screw.

To Operate Walkie-Talkies

- Turn the **On/Off switch** to **ON**.

NOTE: BOTH WALKIE-TALKIES MUST BE SWITCHED ON TO TALK.

- To **talk**, press and hold the **talk button**. Release the **talk button** to **listen**.
- To **call**, hold press the **call button** while holding down the talk button.
- Slide the On/Off switch to **OFF** after use.

Notes

- Be careful not to talk at the same time as your friend.** Two people talking at once will affect the Walkie-Talkie performance.
- Remember to switch the Walkie-Talkie OFF after use to conserve battery life.**



National Geographic's net proceeds support vital exploration, conservation, research, and education programs.

Experience the new National Geographic Channel.
Call your cable or satellite provider for availability.

Visit our website: www.nationalgeographic.com/kids
©2002 National Geographic Society

Warning: Changes or modifications to this toy that are not expressly approved by National Geographic Society could void the user's authority to operate the toy.

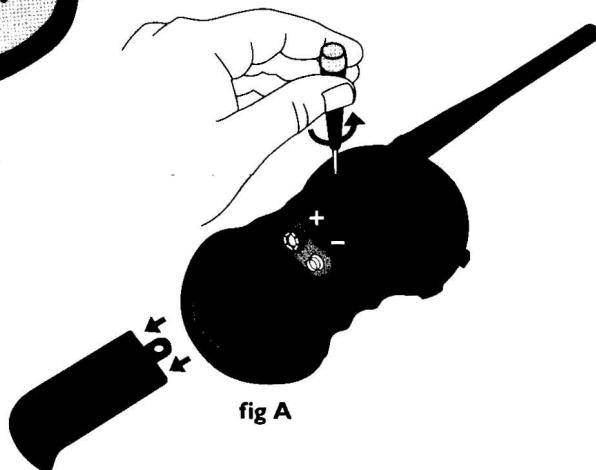
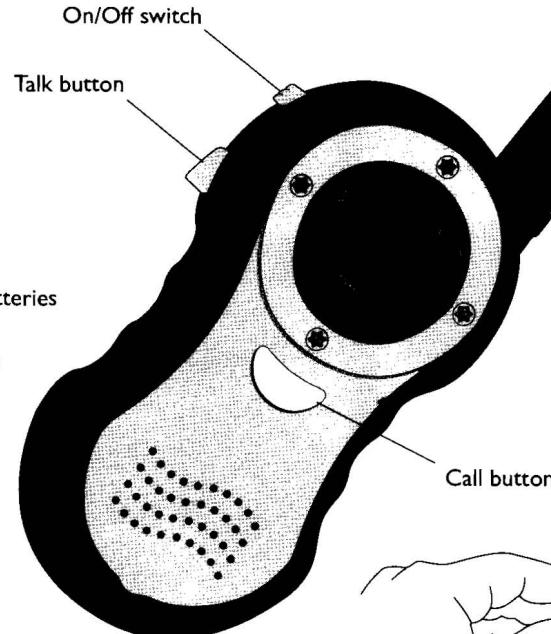


fig A

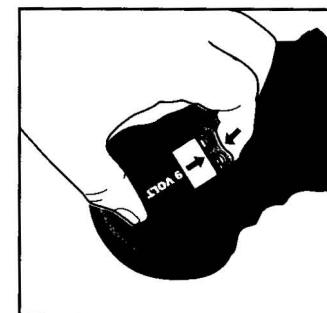


fig B

⚠ WARNING:

CHOKING HAZARD: Small Parts.
Not for Children Under 3 Years.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. -