

Instruction Sheet for CAR HANDSFREE KIT (88MHz)

Model: PG-CHF-01

1, Features

- A, The receiver will be automatically off after 45 minutes after the power was turned ON, in order to save the batteries when user forget to turn off it.
- B, The frequency is 88MHz.
- C, Talk Time for Transmitter: 15 Hours
- D, For using in the car and desk top

2, How to Install

- A, Stick the round metal piece with adhesive to the mobile phone's batteries and then place the magnetic holder at the best position in the car.
- B, Clip the Transmitter to the headphone of the mobile phone, please make sure the suction cup fully covers the headphone of the microphone in order to get the best performance and then put the phone on the magnetic holder.
- C, In car use, you can place the speaker on the top sun shade board or by using the metal clip included to hold the speaker. You can place to any surface place.
- D, In door use, you can place the speaker on the desktop, and using the stand for firmly stand.
- E, The Speaker can not face to face the microphone of the mobile phone and the Transmitter
- F, The best distance between the Speaker and Transmitter is 0.60-1.20 meters.
- G, The best distance between the driver and mobile phone is 1.00 meter.
- H, Place the Transmitter on the magnetic holder when you are not using it.

3, How to use

- A, Press down the power button on both Transmitter and Speaker, the Power LED will be on.
- B, Turn off both Transmitter and Speaker when you are not using them.
- C, When the batteries are weak, the LED light became darker.

4, Trouble Shooting

- A, The receiving distance is short or becomes shorter or the noise is louder, it might be:
 - 1) The batteries are used up, you need to change new batteries.
 - 2) There are some strong disturbance nearby, such as poor quality power supply, charger or the products with the same frequency. So please shut down these equipment.
 - 3) Please adjust the position of the Transmitter on the mobile phone
- B, screaming problem
 - 1) Adjust the volume of the Speaker
 - 2) Adjust the position of the Transmitter on the mobile phone
 - 3) Adjust the position of the Transmitter, make sure the Transmitter not face the Speaker
- C, Beeping sound

Turn down the volume of the Speaker

“Modifications not authorized by the manufacturer may void users authority to operate this device”

NOTE:

This equipment has been tested and found to comply with limits for a Class B digital device. Pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, these is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.