

DTR100 PART LISTS INDEX

770-0149/02	DTR100 TRANSCEIVER STD HMI_02
771-0263/02	DTR100 RX module 2V
771-0429/02	DTR100 sub assy. CS RX 2V
770-0177/02	DTR100 sub assy. VCO RX_RF
770-0177/04	DTR100 sub assy. VCO RX_IF
770-0196/01	DTR100 sub assy. TESTA RX
771-0264/02	DTR100 TX module 2V
771-0421/02	DTR100 sub assy. SINT_TX 2V
770-0177/03	DTR100 sub assy. VCO TX
771-0500/02	DTR100 sub assy. TX-PA 2V
770-0258/03	DTR100 sub assy. TX 3V
770-0258/02	DTR100 sub assy. PA 2V
771-0614/02	DTR100 BB module 2V
771_0613/02	DTR100 sub assy. CS BB 2V
770-0177/04	DTR100 sub assy. VCO BB
771-0952/01	Dxy100 CP_STD module
770-0144/01	DTR100 sub assy. CP_STD
771-0698/02	DTR100 CP_STD ins. Display 2
771-0536/03	DTR100 subrack assembly 3V