 
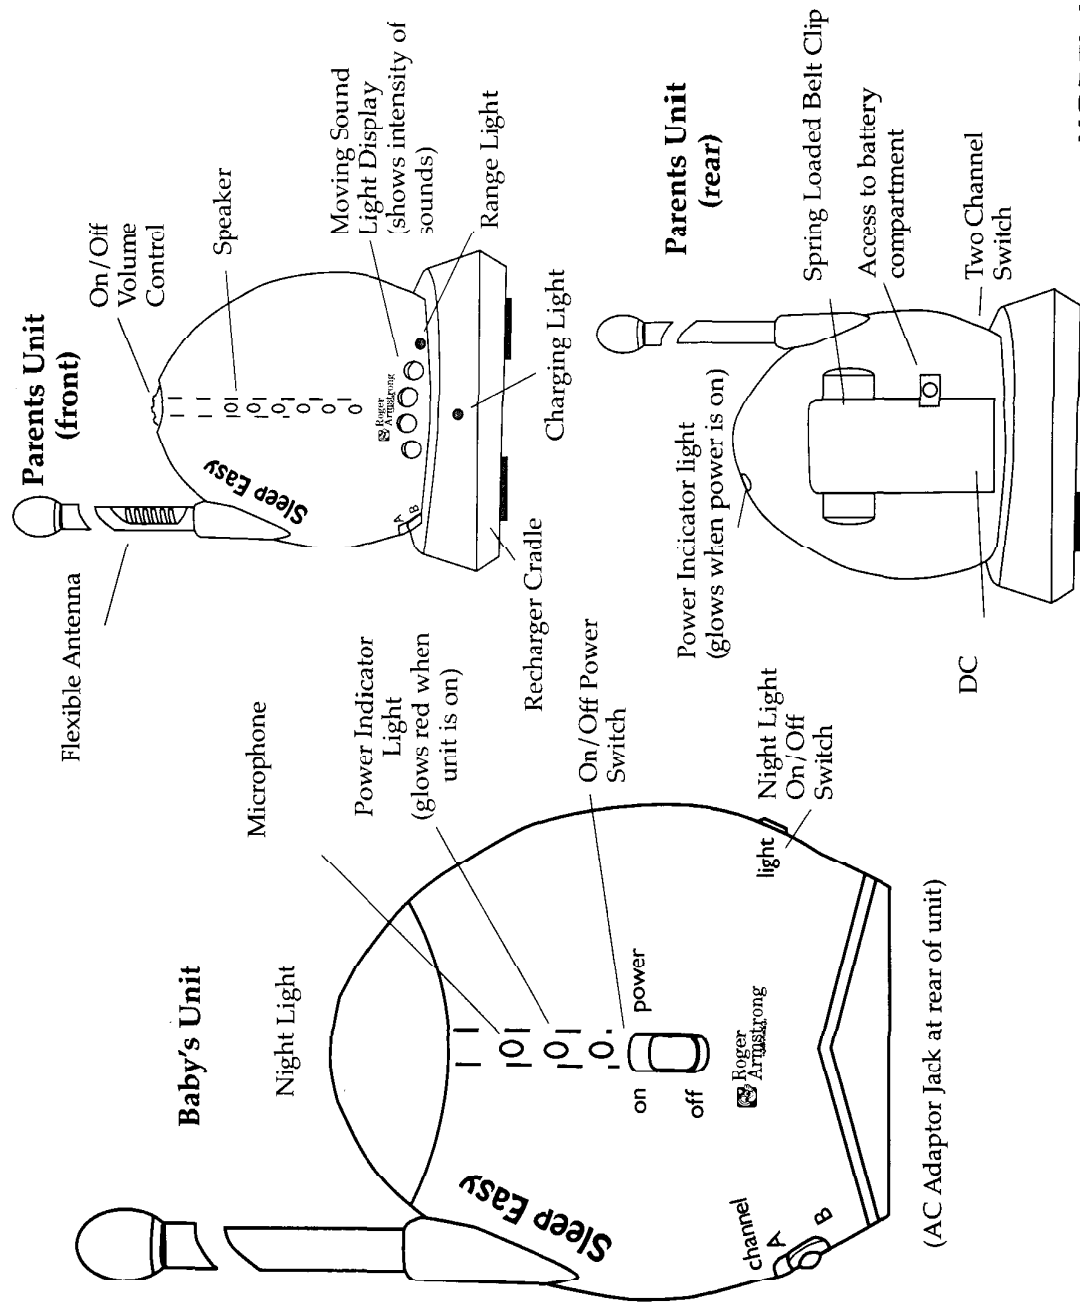 
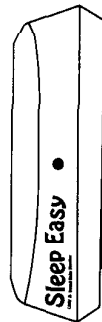 


Thank you for purchasing the
**Roger Armstrong Sleep Easy Light
& Sound Nursery Monitor.**

Understanding how your monitor works helps you obtain the highest performance levels. Before setting up and using your Roger Armstrong monitor, please read this Owners Handbook. It provides helpful tips to ensure the best operating circumstances for your child.

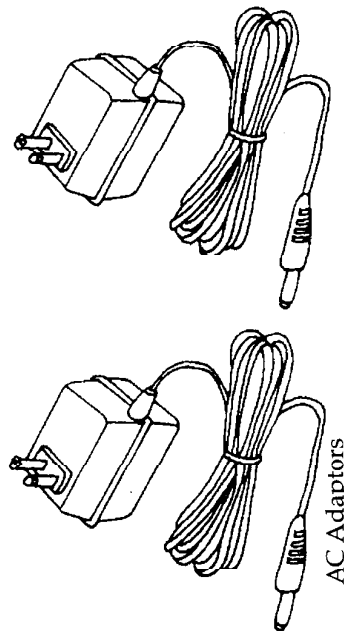


Important: This monitor should not be used as an alternative for adult supervision of young children.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.

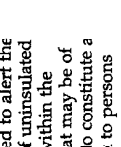

WARNING!



- **RISK OF ELECTRIC SHOCK.**
- **DO NOT OPEN.**
- **MAY CAUSE SERIOUS INJURY, FIRE OR DEATH.**
- **DO NOT USE NEAR WATER.**
- **DO NOT PLACE FURNITURE ON CORD**
- **NO USER SERVICABLE PARTS INSIDE.**

Important Safety Instructions




1. Read your owner's handbook completely. All the safety and operating instructions should be read before you begin using your monitor. Follow the instructions and pay special attention to the information marked "WARNING!" and "IMPORTANT". They have to do with your child's safety. Keep this handbook nearby for quick and easy reference.

	2. WARNING! Do NOT place the Baby's Unit or its cord in the crib or within your baby's reach.
--	---

	3. WARNING! Avoid placement near water and moisture. Do not use your monitor near a bathtub, shower, wash basin, kitchen sink, laundry tub, swimming pool or in a wet basement.
--	---

4. Allow for proper ventilation. Do not place your monitor on a bed, sofa, rug or similar surface that would block its ventilation opening. Do not place it in a built in installation such as a bookcase or stereo cabinet. These may impede the flow of air through the ventilation openings.

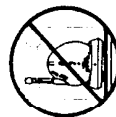


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"Modifications not authorized by the manufacturer may void users authority to operate this device."

5. Avoid placement near heat sources. Do not use your monitor near a radiator, stove or other appliance (including amplifiers and TV s) that produce heat. Heat can damage case or components.

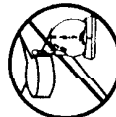

6. Operate on 110 - 120 volts AC only. Connect only to household outlet power supplies of this description




7. Protect power cord and AC adaptor cord. Place cords so that they are not walked on or pinched by items placed upon them.



WARNING!
Do not immerse any component in water. Clean the unit with a dry cloth.



9. Do not use near fluorescent lights, cordless phones, appliances with motors, televisions, fans or other machinery. These items may interfere with the quality of your units' transmission or reception.

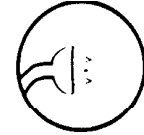

10. Unplug the unit when not in use for long periods of time.
11. Do not use your monitor if:
 - The Baby's Unit power cord or plug has been damaged.
 - The AC adaptor cord or plug has been damaged.
 - Objects have fallen or liquid has been spilled into any of its components.
 - It has been exposed to rain.
 - It has been dropped or something inside gets damaged.

12. Refer to the Troubleshooting Chart in this handbook before returning your monitor for servicing. You may be able to solve the problem on your own in very little time.

If service is required due to a possible defect, and the monitor is still under warranty, see Limited Warranty for instructions.

WARNING!

This Nursery Monitor is designed only to monitor the sounds of your child. You should check your child regularly as this device will not alert you to their silent activities. This product is not designed or intended for use as a medical monitor. Always be sure that both the Baby's and Parent's Units are properly functioning and in reception range of one another.

Before you set up your monitor, read "Important Safety Instructions" carefully and completely.

Setting Up Your Nursery Monitor


Components: a Baby's Unit (transmitter) Parent's Unit (receiver), and two AC adaptors and cradle.

1. Place the Baby's unit 1.5 to 3 metres from your baby.

WARNING!

Do not place the Baby's Unit or its cord in the crib or within you baby's reach.

2. Aim the front of the Baby's Unit toward your baby. Be sure that there aren't any large objects blocking the path between the Baby's Unit and your baby.

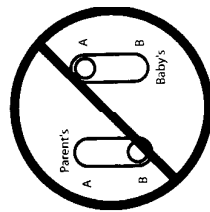

3. Your monitor can broadcast over one of two factory preset frequency channels (A or B). The frequency setting is located on the left side of each unit. **Be sure both Baby's and Parent's units are on the same channel.**


4. If interference is present, change the channel setting on BOTH units.

IMPORTANT: This Nursery Monitor operates over public airwaves. Transmission from your Baby's unit may be picked up by another product that uses radio frequencies transmitting on the same frequency. Your Parent's unit may also pick up transmissions from another product that is on the same frequency. If interference occurs, change BOTH your Baby's & Parent's unit to the alternate frequency channel.

Using Your Monitor

The Baby's Unit

1. Plug the unit into your household current, using the AC adaptor supplied.

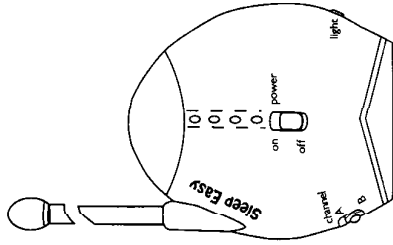


2. Turn the unit on using the ON/OFF switch, located in the centre. The red LED power light should glow.
3. Check to see if the channel is set to A or B. Be sure both the Baby's and Parent's Units are set on the same channel.
4. The night light can be turned on and off by depressing the "light" switch on right side of the unit.

The Parent's Unit

1. Move into another room away from Baby's Unit. Plug in the recharger cradle.

IMPORTANT: When using the AC adaptor, do not place it near your child, under a window or in any other place where a child is likely to use it as a step.

2. Check the channel switch. Be sure both the Baby's and Parent's Units are set on the same frequency channel.
3. Using the ON/OFF volume switch located on the top of the unit, turn it on. The red LED power light should glow.
4. The ON/OFF switch also controls the volume. Adjust the volume to your liking.

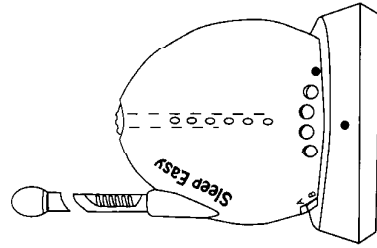

5. The moving sound light display is automatically activated when you turn the unit on. The four round sound lights react to the intensity of your child's sounds. The lights glow red from left to right along the display as sounds grow louder. The small green light indicates you are out of range.

6. The Parent's Unit comes with a built-in rechargeable battery which may be recharged by placing the Parent's Unit onto the Charger. A "smart" charging scheme is used meaning that the charging current is adjusted automatically depending on the residual voltage on the battery. Specifically, on one hand, an almost flat battery will be fully charged very rapidly within 4 hours and yet on the other hand, the Parent's Unit may be left in the charger indefinitely with no worry of the battery being over charged. The red LED on the Charger turns on when the charger is charging a battery and the brightness of the LED is a measure of the charging current.

The battery packs have a "memory" meaning that the batteries should not be recharged before they are discharged to the point that they need to be charged up again.

7. You're now ready to monitor your child.
8. Have an adult speak into the Baby's unit to verify sound transmission.

Useful Tips

It is best to use your low voltage AC plug in adaptor (that comes with the unit) and recharging cradle when you are in the same place over a long period of time. For example

- From your bedroom at night.
- From a kitchen counter top during the day.

IMPORTANT: the AC adaptor for the Parent's Unit should not be used with other equipment under any circumstances. Likewise, no other products adaptor should be used with this monitor.

Your monitor's typical transmission/ reception range is approximately 80 metres. However, the range varies depending on rechargeable battery power and possible obstructions (i.e. walls) that radio waves can encounter. The methods and materials used in your home's construction, terrain and other factors may also affect transmission.

TROUBLE SHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
ON/OFF light signal isn't working	- Unit isn't getting power - Rechargeable battery may be weak	- Make sure unit is properly plugged into the wall and the outlet is switched on. - Recharge battery
Reception is poor due to static buzzing or interference.	- Baby's Unit and Parent's Unit are on different channels. - Other household appliances, cordless-phones fluorescent lights or motors may be disrupting the signal. - Parent's Unit is out of effective range. - Rechargeable battery may be weak - Baby's Unit may not be plugged into a working outlet or may not be turned on.	- Make sure that both units are on the same channel. - Turn off, unplug or move the device that is causing the problem. - Move the Parent's Unit closer to the Baby's Unit. - Fully extend antenna on Parent's Unit - Recharge battery
Parent's Unit continues to buzz when turned on.	- Rechargeable battery may be weak - Baby's Unit may not be plugged into a working outlet or may not be turned on.	- Check the AC outlet to be sure it is working. - Check the Baby's Unit to be sure it is on and tuned into the same frequency channel as the Parent's Unit.
Parent's Unit is making a loud feed back noise	- Baby's Unit is picking up sounds from Parent's unit because they are too close to each other - Volume may be set too high.	- Move the Parent's Unit at least 3 metres away from the Baby's Unit. - Lower the volume
Parent's Unit is picking up sounds or static from outside your home or apartment	A neighbour has a similar baby monitor, cordless phone or walkie-talkie that is transmitting sounds on the same channel.	Change the frequency channel that is in use. Be sure to change it on BOTH units.
Weak reception of sound	- Parent's Unit may be outside of the transmission range of the Baby's Unit. - Antenna is covered or unit is lying down - Batteries may be weak	- Check both Units are in an AC outlet . - Move Parent's Unit closer to Baby's Unit. - Make sure both units and antennas are standing upright. - Fully extend antenna on Parent's Unit. - Recharge battery

IF PROBLEMS PERSIST PLEASE CALL OUR CONSUMER HOTLINE 1800 062 484

DISTRIBUTED IN AUSTRALIA AND NEW ZEALAND BY



LIMITED WARRANTY

ROGER ARMSTRONG Warrants this product to be free from defects in material and workmanship for a period of ONE (1) year from the date of purchase by the original consumer buyer.

ROGER ARMSTRONG Will at their option, either repair or replace this product if it is proven to be defective within a 1 year period. The product should be returned, with proof of purchase, postage prepaid, to the service/warranty centre listed below.

This warranty does not apply to any product damaged due to abuse, improper maintenance, connection to an improper voltage supply, misuse, or accident.

Repair or replacement of the product, as provided under the warranty, is the sole and exclusive solution available to the consumer. ROGER ARMSTRONG shall not be liable for any incidental or consequential damages for breach of any expressed or implied warranty with respect to this product. Except to the extent prohibited by applicable law, all implied warranties are limited in time to the period of this warranty.

To obtain factory warranty service, the consumer shall carefully package the complete product and send it postage prepaid to the Service/Warranty Centre address listed below. Proof of purchase in the form of a receipt or other positive proof that the unit is within its warranty period must be enclosed.

SERVICE/ WARRANTY CENTRE

ROGER ARMSTRONG
P.O. Box 44
Black Rock
Victoria. 3193

Telephone 1800 062 484