

CT-P6200Test mode/Default setting

1. Base unit

1-1. Test mode setting

- Pres and hold the “page” key then plug in the AC adapter..

1-2. Channel selection.

- The default channel is 21th Channel,, press “page” key to increase channel..

2.Handset unit

1-1. Test mode setting

- Press the “#” key and connect the battery, the default channel is 21th channel.

1-2. Channel selection.

- Press the “#” key to increase the channel.

1-3. TX data test

- After H/S enter test mode, then press “3” key to check data deviation.

1-4. Initialization

- To reset to default setting, press”9”key.

1-5 menu default setting

1. Language---ENGLISH
2. FIRST Ring---ON
3. TIME SET---12:01AM 1/01
4. AREA CODE--- ---
5. CONTRAST---2
6. PBX NO---9
7. PBX MODE---OFF
8. PAUSE TIME---2
9. MSG WAITING---DELETE
10. AUTO ANSWER---ON
11. PRIVATE RNG---ON
12. UNAVAIL RNG---ON

1-6 Volume default setting

volume---low