


Sound Sport IPX5 True Wireless Auto Pair Earbuds

Instruction Manual
7197-38

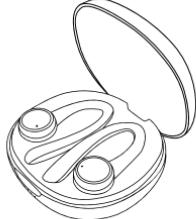

| 01


Hello! This is your instruction manual, to help create the best possible experience with this cool product.

Safety Precautions:


1. Please follow the rules described in this manual closely to ensure your safety.
2. Before using the earbuds, we would strongly encourage you read this manual.
3. Do not modify, repair or dismantle the earbuds or power bank.
4. Do not use any liquids to clean the products.
5. Do not use the earbuds near water, or intense temperatures.

| 02

 Included Contents:



Features:

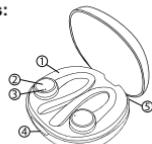

1. Charging Case
2. Multi-function button
3. Microphone/Earbud LED
4. Charging case LED (Earbud charging)
5. Type-C input

| 03

Charging:

1. Charging the earbuds
 - Place the earbuds into the power case.
 - Make sure the earbuds are securely placed into the case.
 - Earbuds will automatically begin to charge.
 - The LED on the earbuds will turn Red.
 - The LED on the Earbuds and Case will turn off when the earbuds are fully charged.
 - You'll hear a beep prompt when the earbuds need charged. The Earbuds will play audio at max volume for 4.5hrs.
2. Charging the power case
 - Use the provided Type-C Charging Cable to connect to an adapter or computer to charge the power case.
 - When charging the power case 4 WHITE LED lights will indicate the level of charge.

| 04

- The case can also be charged through wireless charging. Place the case onto a wireless charging pad to begin the charge. LED Lights appear when the charge has started

Number of LEDs	0000	0000	0000
Capacity Remaining	about 100%	about 50%	about 25%

Pairing Both Earbuds:

1. Pairing: First time

- Remove both earbuds from the power case, you'll hear a voice prompt saying "Power On".
- Once you both earbuds say "connected" they are synced to each other.
- If done successfully the one earbud LED with quickly flash Red and Blue.

| 05

2. Connecting to Bluetooth

- Go into your Bluetooth options and select the pairing name "Sound Sport".
- If done successfully you will hear the voice prompt "Connected".
- You can now enjoy your favorite Audio.
- Previously connected earbuds will connect automatically after they're powered ON.
- If you don't connect to the earbuds within 3 minutes the earbuds will automatically power OFF.

3. Power ON

- Take out your earbuds from the charging case or press and hold the multi-function button for 3 seconds. You'll hear the voice prompt "Power On".

4. Power OFF

- To turn off your earbuds place them both back into the power case.

| 06

- You can also power off your earbuds by holding the multi-function button on both earbuds until you hear the voice prompt "Power Off".

5. Calling

- **Answering/End Call:**
Press the multifunction button once to answer an incoming call, and again to end the call.
- **Reject a Call:**
Press and hold the multifunction button to reject an incoming call.

6. Playing Audio

- **Play/Pause**
Press the Multi-function button on the Right or Left Earbud to play/pause your audio.
- **Next / Previous Song:**
Next song: Double press the multi-function button on the RIGHT earbud.
Previous song: Triple press the Multi-function button on the RIGHT earbud.

| 07

Volume Controls:

- **Turn UP volume:** Double press the multi-function button on the LEFT earbud.
- **Turn DOWN volume:** Triple press the multi-function button on the LEFT earbud.

7. Activate Voice Assistant

- Long press the Right or Left Earbud multifunction button and you will hear a beep prompt to indicate that your voice Assistant/Siri is "Activated" and waiting your commands.

Resetting your earbuds:

- If you're having trouble pairing your earbuds please turn off your Bluetooth.
- Place both earbuds back into the charged power case.
- Now remove the earbuds and follow the instructions under "Pairing Both Earbuds".

| 08

front side

Single Earbud Usage:

1. Pairing for the first time
 - Take out the earbud from the charging case. You will hear a voice prompt "Power On" and the earbud will flash Red/Blue.
 - Open your Bluetooth options, Turn on Bluetooth, and select the pairing name "Sound Sport".
 - If done successfully you will hear the voice prompt "Connected".
 - If you would like to sync the earbuds together, simply remove the other earbud from the case. The earbuds will automatically pair together.
2. Power ON/OFF
 - Power ON: Take out your earbud from the charging case. You'll hear the voice prompt "Power On".
 - Power OFF: Place your earbud back into

| 09

the charging case or press and hold the multifunction button for 3 seconds.

3. Once the earbud is successfully connected with your device, you can listen to audio.
4. Answer/End calls: Press the multifunction button once to answer an incoming call, and again to end.
5. Reject a call: Press and hold the multifunction button to reject an incoming call.
6. Audio Controls
 - Short Press: Play/Pause Audio
 - Double Press the multifunction button to change the song.
7. Voice Assistant
 - Long Press the multifunction button until you hear a beep prompt. Following the beep your Siri/Hey Google will be activated.

| 10

Earbud Tech Specifications

Function	Specifications
Charging time	1.5 hrs (from 0-100)
Play time	4.5 hrs
Bluetooth Range	10m
Waterproof Rating	IPX5

Power Case Tech Specifications

Function	Specifications
Charging time	3 hrs (from 0-100)

The Power Case can charge the earbuds 5x (from 0-100).

Mobile devices cannot connect with the earbuds if the earbuds are not in pairing mode.

If the earbuds don't connect to Bluetooth within 3 minutes, the earbuds will power off.

Troubleshooting

Issue	Reason	Solution
Start-up failure	low battery	charge earbuds and power case
No sound when paired	wrong pairing	re-pairing
No indication during charging	Earbuds aren't securely inserted and try again	check earbuds, during charging
Shut down automatically	low battery	charge earbuds and power case
Noise during calls	mobile device is too far away	bring mobile device closer
Low volume	earbuds are turned down low	adjust earbuds to comfort & sound
Signal interrupted	environment disturbance, distance to far from mobile device	bring the mobile device closer to the earbuds

| 12

Safety Precautions

WARNING—When using this product, basic precautions should always be followed, including the following:

1. Fully read the instructions before using the product.
2. The unit will only achieve full performance after 2 or 3 completed charge and discharge cycles.
3. Do not overcharge your case. The unit may become hot under excessive use. Remove your case once it is fully charged. Never charge your case for more than 7 hours at a time.
4. To reduce the risk of injury, close supervision is required when the product is used near children.
5. Do not expose the device to moisture.
6. Do not use the device in excess of its output rating. Overload outputs above the rating may result in a risk of fire or injury.
7. Do not use the device if damaged or modified.
8. Damaged or modified batteries may exhibit

unpredictable behaviour resulting in fire, explosion or risk of injury.

9. Do not disassemble the device. Take the device to a qualified technician if service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
10. Do not expose the device to fire or excessive temperatures. Exposure to fire or temperatures above 212°F/100°C may cause explosion.
11. Have servicing performed by a qualified repair person using only identical replacement parts.
12. This will ensure that the safety of the product is maintained.

FCC ID: RMZ-A26

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


MADE IN CHINA

| 13

| 14

| 15

| 16

| 17

back side