

THE
SHARPER
IMAGE®

“Bright As Day!”®
Power-Port Desk Lamp

SI561 Instructions

Read and save these instructions.



Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

Our goal is that you will be completely satisfied with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

Since 1977, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver outstanding customer service that exceeds your expectations.

Enjoy your purchase!

*Call 1-800-344-4444 for ordering and customer service, or visit
www.sharperimage.com, our award-winning Website.*

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed.

READ ALL INSTRUCTIONS BEFORE USING.

Lighted lamp is **HOT**.

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, EXPOSURE TO EXCESSIVE UV, RADIATION OR INJURY TO PERSONS:

1. Before replacing the bulb, turn off/unplug and allow the lamp to cool.
2. Lamp becomes **HOT** quickly! Only touch the switch/plug when turning on the lamp.
3. Do not touch hot lamp-containment barrier.
4. Do not remain in direct light from the lamp if skin feels warm.
5. Do not look directly at lighted lamp.
6. Keep lamp away from materials that may burn.
7. Use only with a 27-watt lamp/bulb.



IMPORTANT SAFETY INSTRUCTIONS

8. Do not operate the lamp with a missing or damaged guard or lamp-containment barrier.
9. When connecting an AC appliance to the built-in AC outlets on the base, refer to the power rating of the connected appliance and do not exceed 5A total power load on one or both outlets combined.
10. Warning: To maintain a good balance and to prevent the lamp from tipping over, keep the lowest section of the adjustable arms at or above a 72-degree angle from horizontal.

SAVE THESE INSTRUCTIONS

Power Outlet Instructions

To reduce the risk of electric shock, this lamp has a grounding type plug that has a third (grounding) pin. This plug will only fit into a grounding type power outlet. If the plug does not fit into the outlet, contact a qualified electrician to install the proper outlet. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug in any way.





Precautions

RISK OF FIRE: Failure to read and follow these precautions could result in risk of fire.

1. Do not use with power supply voltage other than 120V AC.
2. Do not use outdoors or in locations with high humidity, such as bathrooms.
3. Do not install above sources of high heat, such as a stove or heater.
4. Do not touch the lamp while it is lit or immediately after turning off the lamp.


Maintenance

Caution: If any malfunction occurs, do not try to repair the unit yourself. Return it to an authorized facility or to the manufacturer. The appliance has no user-serviceable parts.



General Instructions

Parts Diagram

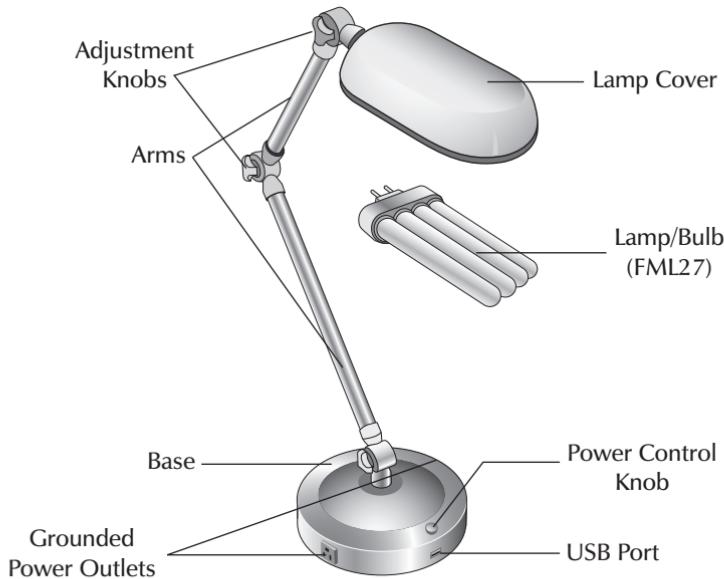

Assembly

1. Remove the plastic packing materials from the light fixture.
2. Remove the foam shipping guard from behind the pre-installed lamp.

Note: The lamp socket (containment barrier) pivots out. Be certain to push the lamp and socket back into the fixture. (See Figure A below.)

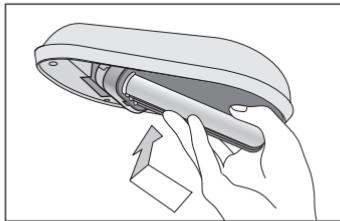



Figure A

3. To adjust the lamp height and angle, loosen the knobs on the fixture arms and move the arms to the desired height and angle, then tighten the knobs to secure the new positions.



Operation

1. Plug the lamp into a 110-120V three-prong power outlet.
2. Turn the **POWER CONTROL KNOB** to turn the light on or off.

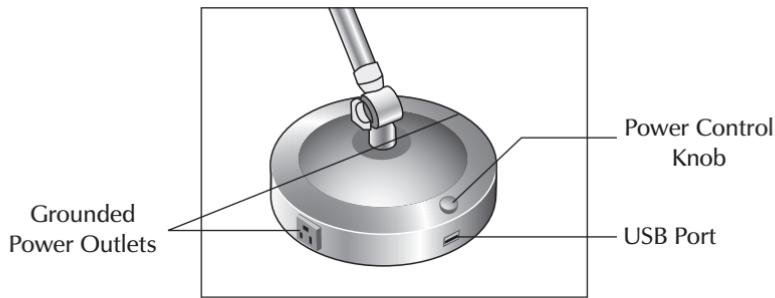

The built-in AC power outlets can be used to connect up to two separate chargers or other AC appliances. Do not exceed 5A total power load on one or both outlets combined.

The built-in USB power port can be used to connect, power and charge compatible USB products.


Note: Not all products that have a USB cable can be charged by a USB port. Consult your USB product manual if it isn't obtaining correct power.



Lamp Replacement


1. The lamp and socket pivot out for easy replacement. Gently pull the lamp out and slide the lamp out of the fixture socket. (See Figure B below.)

Figure B

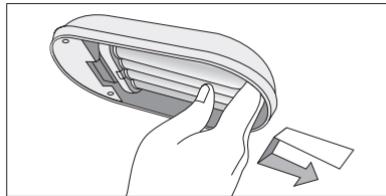

2. Replace with a new lamp. Replacement lamps are available from The Sharper Image (Item No. SI928). Do not use any other lamp with this product.
3. Gently push the lamp and socket back into place. (See Figure C below.)

Figure C

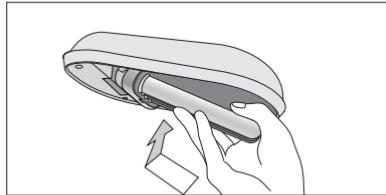



Statement of FCC Compliance — Model SI561

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:





Statement of FCC Compliance — Model SI561

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

NOTE: This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30 MHz.





One-Year Warranty

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for one year from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image warrants this product against defects in materials and workmanship. When repair is not practical, The Sharper Image will have the option to replace the defective product with a fully warranted, factory-reconditioned product that is the same or has similar functionality.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@web.sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

© 2005, 2006 Sharper Image Corporation

Sharper Image Corporation
350 The Embarcadero, Sixth Floor
San Francisco, CA 94105-1218

Shop online: **www.sharperimage.com**

Actual product may differ slightly from the product described herein.

V2 11/06

