

Directions

Meanings of icons:



Forbidding: forbid improper operations to avoid damaging the tablet PC.



Caution: cautions for operators to avoid potential damages.
Please note and remember.



Importance: important information, common notes, definitions, general knowledge and references, etc.

Other trademarks and trade name may be used in this manual to refer to either the entities claiming the marks and names or their products. The manufacture disclaims any proprietary interest in trademarks and trade names other than its own.

Information in this manual is subject to change without notice.

Reproduction in any manner whatsoever without the written permission from the manufacture is strictly forbidden.

Product images in this manual are for your reference only.

Contents

 
Directions	1
Safety Precautions	3
1 Knowing Your Tablet PC	4
2 Caring the Tablet PC	5
2-1 Touch screen	5
2-2 Other accessories	5
2-3 If the water comes into the tablet PC	6
2-4 Other Notes.....	6
3 Traveling with the Tablet PC	7
Attention	7
4 Getting Started	8
4-1 Connecting the Power Adapter	8
4-2 Turning on the tablet PC	8
5 Get to know your system	9
5-1 Add screen shortcuts/widgets	9
5-3 APPS Menu	11
5-4 On-screen Keyboard	12
6 System Settings	12
6-1 WIRELESS & NETWORKS	12
6-2 DEVICE.....	13
6-3 PERSONAL	14
6-4 SYSTEM	14
7 Communication	15
7-1 Browser.....	15
7-2 People.....	15
7-3 Email	16
8 Fun	18
8-1 Camera	18
8-2 Gallery.....	19
8-3 Music.....	20
9 System Connection	21
9-1 Inserting Micro SD Card.....	21
9-2 Connecting External Monitor.....	21
9-3 Connecting PC.....	21
10 Appendix	22
10-1 Troubleshooting	22
10-2 Specifications.....	23

Safety Precautions

1. DO NOT press the touch screen excessively. DO NOT place the Tablet PC with small items, they may scratch touch screen or enter the Tablet PC.
2. DO NOT expose the Tablet PC to dirty or dusty environment. Keep the environment clean and dry.
3. DO NOT place the Tablet PC on uneven or unstable work surface.
4. DO NOT place or drop objects on the top of the Tablet PC. DO NOT shove any foreign objects into the Tablet PC.
5. DO NOT expose the Tablet PC to strong magnetic or electrical fields.
6. DO NOT leave the Tablet PC facing the sun for long time to avoid damaging the touch screen, especially in the car.
7. SAFE TEMP: This Tablet PC should only be used in environments with ambient temperatures between 5°C (41°F) and 35°C (95°F).
8. DO NOT expose the Tablet PC to or use near liquids, rain, or moisture.
9. DO NOT throw the Tablet PC in municipal waste. Check local regulations for disposal of electronic products.
10. The Tablet PC and the Adapter may occur some heat during operating or charging.
11. INPUT RATING: Refer to the rating label on the Tablet PC and be sure that the Power Adapter complies with the rating. Only use attachments or accessories specified by the manufacturer.
12. Checking the connections between the main unit and attachments before turning on the Tablet PC.
13. DO NOT use the Tablet PC during eating food avoid dirtying the Tablet PC.
14. DO NOT insert anything into the Tablet PC that may result in short circuit or damage the circuit.
15. Powering off the Tablet PC, if you want install or remove some external devices, which are not support hot-plug.
16. DO NOT disassemble the Tablet PC, only a certified service technician should perform repairs on your computer. Otherwise, problem may result and the manufacturer should not hold responsibility for the damage.
17. The socket-outlet shall be installed near the equipment and shall be easily accessible.


1 Knowing Your Tablet PC

Front and Side panels

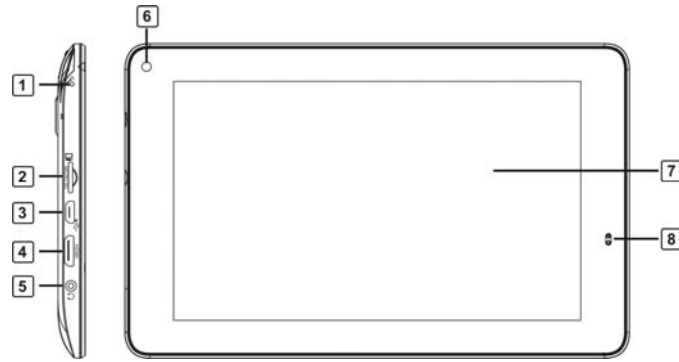

- | | |
|-----------------------|-------------------|
| 1. Microphone | 5. Headphone Jack |
| 2. Micro SD Card Port | 6. Front Camera |
| 3. Micro USB Port | 7. Touch Screen |
| 4. Mini HDMI Port | 8. Light Sensor |

 Back Panel

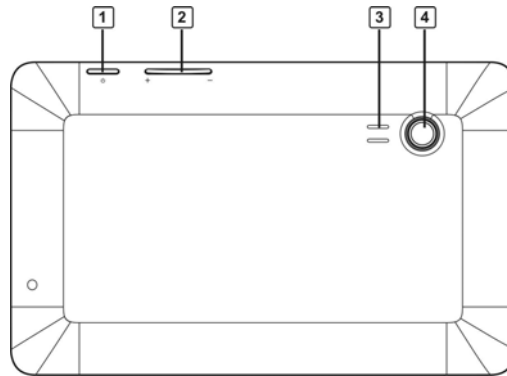

- | | |
|-------------------|----------------|
| 1. Power Button | 3. Speaker |
| 2. VOL +/- button | 4. Back Camera |

2 Caring the Tablet PC

The tablet PC is a precision device; the error operation may damage the device.

2-1 Touch screen

Touch screen is the most delicate component of the tablet PC and comprised of thin glass. It may be broken up by external abrupt force.

- ✧ Place the tablet PC in carrying case to protect it from dirt, water, shock and scratches before traveling.
- ✧ DO NOT drop or place heavy objects on the touch screen.
- ✧ DO NOT scratch the touch screen with your fingernails or any hard objects.
- ✧ DO NOT clean the touch screen with chemical cleaners.
- ✧ The touch screen DOES NOT come into contact with hard objects (e.g. cloth button and watchband).
- ✧ Use a soft and lint-free dry cloth to wipe the watchband smoothly. DO NOT use your hand to wipe the touch screen directly.
- ✧ DO NOT spill liquid into the tablet PC as it can damage the components of the tablet PC.
- ✧ Cover the touch screen smoothly in order to avoid moving the hinges and flashing the touch screen.

2-2 Other accessories

Following the below steps before cleaning your tablet PC and the accessories.

1. Turn off the tablet PC. Disconnect your tablet PC and all external devices from their electrical outlets.
2. Use the little dust collector to pump the dust from the slot of plug.
3. Moisten a soft, lint-free cloth with water and wipe the surface of the tablet PC smoothly. DO NOT seep liquid into the tablet PC in order to avoid shorting of circuit and the damage of the tablet PC.
4. Turn on the tablet PC after drying it.

2-3 If the water comes into the tablet PC

- ✧ DO NOT turn on the tablet PC immediately.
- ✧ Disconnect the outlet cable to turn off the tablet PC, instead of pressing the power button to turn off it. Disconnect all external devices.
- ✧ Spill out the water from the tablet PC. Use a soft and waterish paper or cloth to wipe the surface of the tablet PC lightly.
- ✧ Use the fanner to dry the tablet PC and the accessories, and then send it to the service center for advice.
- ✧ DO NOT use hair drier to dry the tablet PC, or the high temperature may distort it.
- ✧ DO NOT place the tablet PC into the dirty carrying case again.

2-4 Other Notes

- ✧ DO NOT expose the tablet PC in hot environment for a long time, especially in the car. Or the parts of the tablet PC will be metamorphic.
- ✧ Keep the data for future possible use termly.
- ✧ Renew the hardware or software termly in order to keep the tablet PC compatible and steady.
- ✧ To prolong the chargeable battery's life, do charge the tablet PC every three months when it doesn't use for long.

3 Traveling with the Tablet PC

Turn off the tablet PC and disconnect all lines before moving it. Following the below steps, if you want to travel with your tablet PC.

Attention

1. Turn off the tablet PC and disconnect from the wall outlets.
2. Disconnect the AC lines.
3. Disconnect all lines.
4. Place the tablet PC in carrying case to protect it from dirt, water, shock and scratches before traveling.
5. Check that you have taken the AC Adapter, power lines, manual and warranty card. DO NOT forget the passwords of the tablet PC if you set-up.
6. Find out the voltage type in the countries you will visit. Your tablet PC comes with a universal AC-DC adapter, so you only need to buy the different power cords to connect the different outlets or the hotel may provide universal outlets to support your power cord as well as voltages.



If you drive your car with the tablet PC, DO NOT leave the tablet PC facing the sun. Place it in the shady and cool area.



The connection between Internet and your tablet PC will be interrupted when the system enter the hibernation mode.


4 Getting Started

4-1 Connecting the Power Adapter

The tablet PC comes with a universal AC-DC adapter and the allowable input voltage of adapter is from 100V to 240V.

Following the below steps to connect the adapter:


1. Plug one end of the USB line into the **micro USB** port of the tablet PC.
2. Plug the other end of the USB line into the adapter.
3. Insert the AC end of the adapter to the wall outlet
4. Check the connections above correctly before turning on the tablet PC.

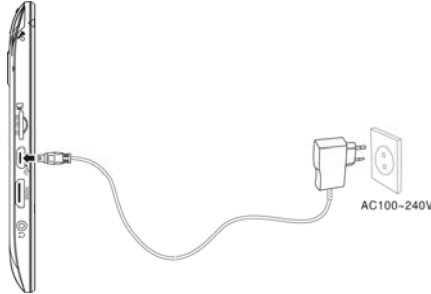

Your tablet PC and the accessories may differ from the pictures shown.

4-2 Turning on the tablet PC

Press the power button for seconds to turn on the tablet PC.

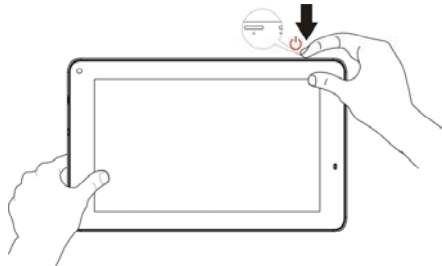


Press the power button once to access standby mode and press again to wake it up; press and hold the power button until the pop-up menu appears, and touch **OK** to turn off the tablet PC.



When the system halts, press the power button for about **8 seconds** to turn it off forcibly.

5 Get to know your system

Press the power button for seconds to turn on the tablet PC. If it's your first time to use the tablet PC, the system will access setup guide menus. After finishing setup menu according to the indications, it will enter the home screen as shown below:

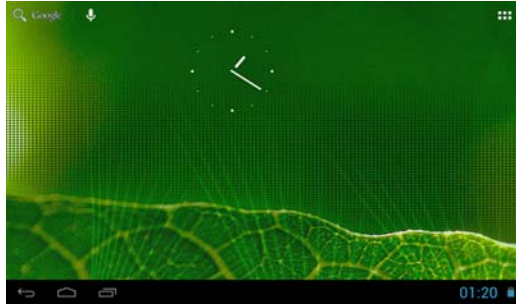



5-1 Add screen shortcuts/widgets

There are five screens of the system. Slip left/right or touch the screen edges to see more. On a screen, touch and hold the blank area to popup menu to change wallpaper;


touch  to access APPS menu as shown below:



Touch APPS or WIDGETS to switch page. Touch and hold an APPS icon or a widget to add to the current screen.

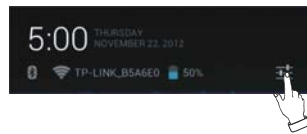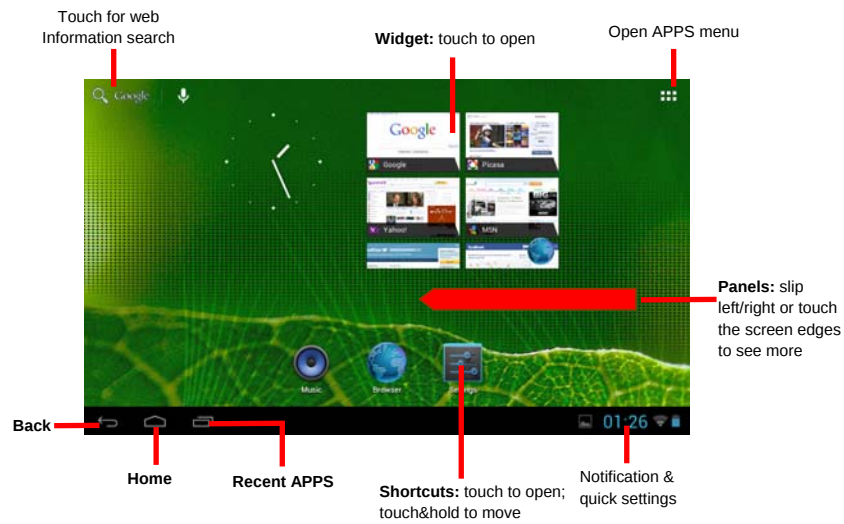

Touch the notification bar to see details and touch  to see quick settings.

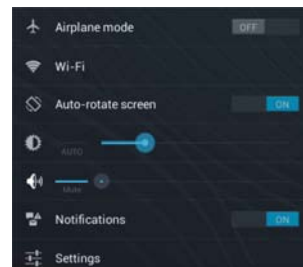

Delete screen shortcuts/widgets

Touch and hold the shortcut or widget to be deleted until the remove icon appears. Drag the shortcuts to the remove icon to delete.



5-3 APPS Menu

Touch  on home screen to access APPS menu below:



ApkInstaller: Used to install and manage APK applications.

Browser: Surf the Internet for information and entertainment;

Calculator: Perform basic calculation;

Calendar: examine date and add/manage calendar events;

Camera: Capture photos and video with ease;

Clock: Set the alarm function and the alarm time;

Downloads: store download files.

Email: Keep in touch via email from this easy-to-use email client;

Gallery: View and manage your photos and video files;

Movie Studio: edit media files.

Music: Enjoy the music files and entertainment;

People: Arrange your contacts for easily reference;


Search: Access the fast search.

Settings: Have settings for system.

Sound Recorder: Record sounds.

Video: play video files.

5-4 On-screen Keyboard

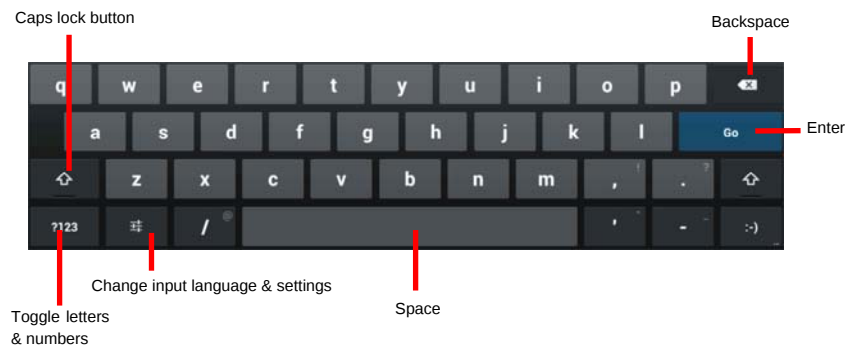

Just touch a text field to open the on-screen keyboard and touch  on the tool bar to close it.

6 System Settings

6-1 WIRELESS & NETWORKS

6-1-1 Wi-Fi

Touch the Wi-Fi switch behind the Wi-Fi item to turn on the Wi-Fi function and then the system will auto-scan the available networks to display on the right as shown below:



Select one network and input password if necessary to connect. Touch  to perform advanced Wi-Fi settings.

6-1-2 More...

The system supplies users more networks settings.

6-2 DEVICE

6-2-1 Sound

Touch to open sound settings, including sounds of music, video, games, notifications, alarms, system and so on.



6-2-2 Display

Touch to open display settings, including brightness, wallpaper, auto-rotate screen, sleep time, font size and so on.



6-2-3 HDMI

Touch to do some settings about HDMI.

6-2-4 Storage

Touch to check the usage of internal storage and possible SD card.

6-2-5 Battery

Touch to check the battery information.

6-2-6 APPS

Touch to check the current APPS information.

6-3 PERSONAL

6-3-1 Location services

Open or close location services.

6-3-2 Security

Security information of system settings.

6-3-3 Language & input

Select the local region and the corresponding language displays on screen; select input method for the on-screen keyboard and so on.

6-3-4 Backup & reset

Reset the system to the factory states.

6-4 SYSTEM

6-4-1 Date & time

Option is about the current system date & time setting.

6-4-2 Accessibility

Look at what other accessibility in the system or add some.

6-4-3 Developer options

Some options for developer.

6-4-4 About tablet


The detailed information about the unit, including model number, software version and so on.

7 Communication

7-1 Browser

Open:  >  Browser

After the network connection completed, touch **Browser** icon to access the network browsing; or touch  **Bookmarks icon** to enter the desired website browsing directly.

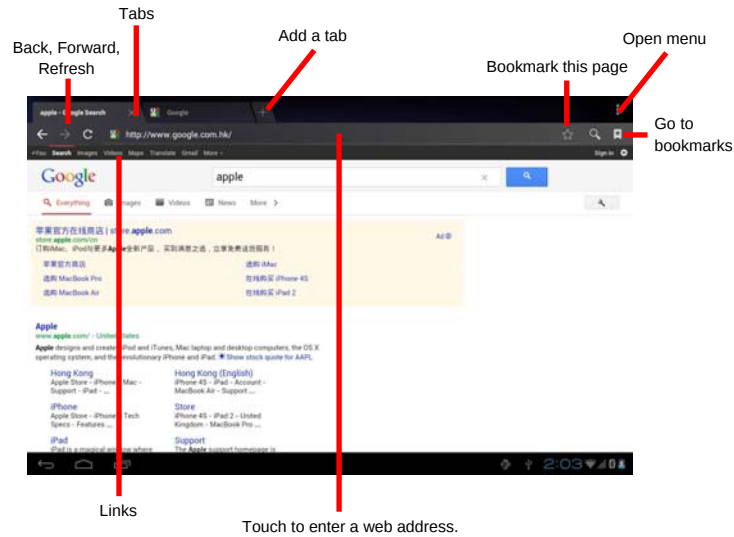

Designing web may slow the speed to browse the web page.

7-2 People

Open:  >  People




Sign in to an account: configure an exchange account.

Import/export contacts: import/export vCard file from the SD card.

Create a new contact

Touch to open new contact creating page right:

After information inputting, touch **Done** to save.

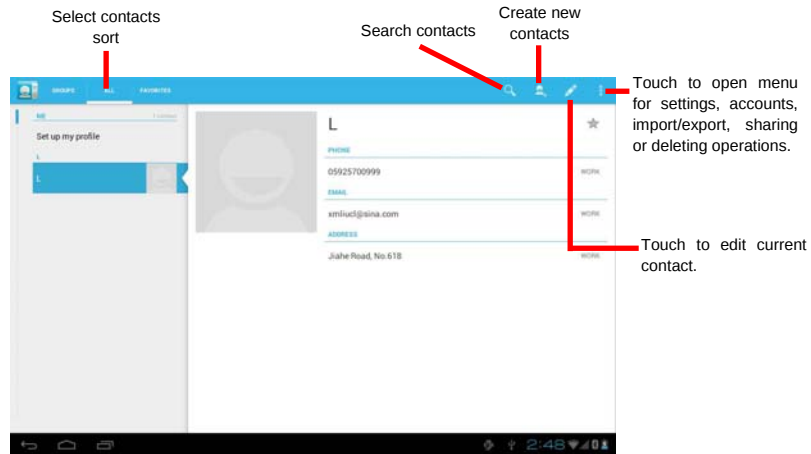


7-3 Email


Open:  >  Email

Setup an account

1. Using the on-screen keyboard to type the available email address and email password and touch **Next**:

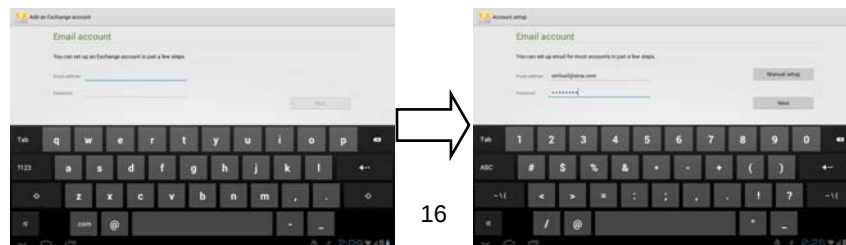


2. Select the incoming server type, e.g. POP3 to go to outgoing server settings menu below.

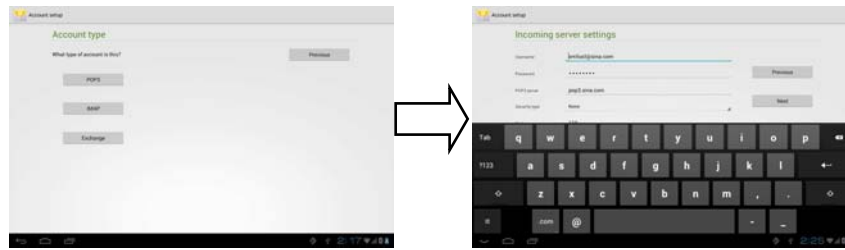


Ensure that you have input the correct incoming and outgoing server name.

3. Check the account information again and touch **Next** to do account settings. Then touch **Next** to access account setup page below:

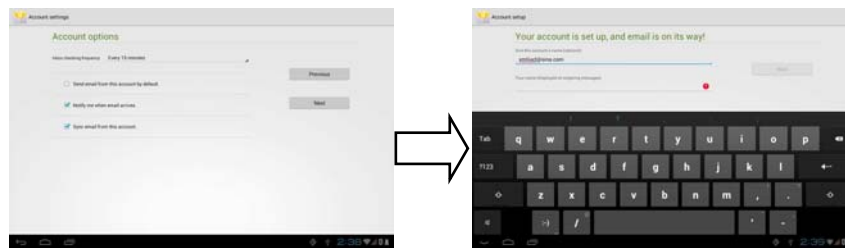

4. After inputting names, touch Next to access your mail below:

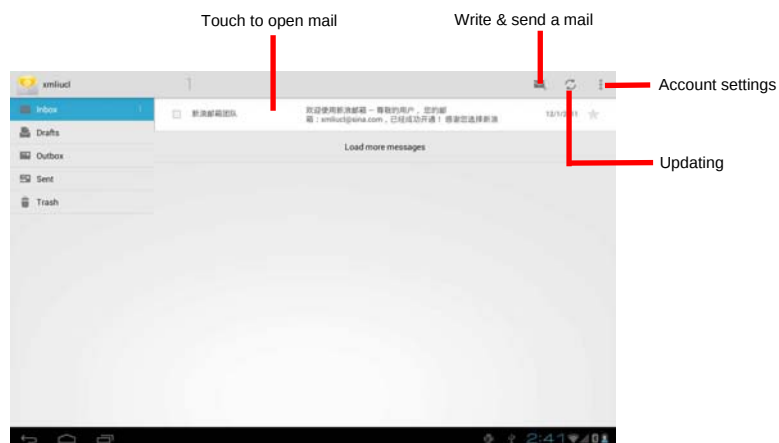


8 Fun

8-1 Camera

Open:  >  Camera

Taking a photo

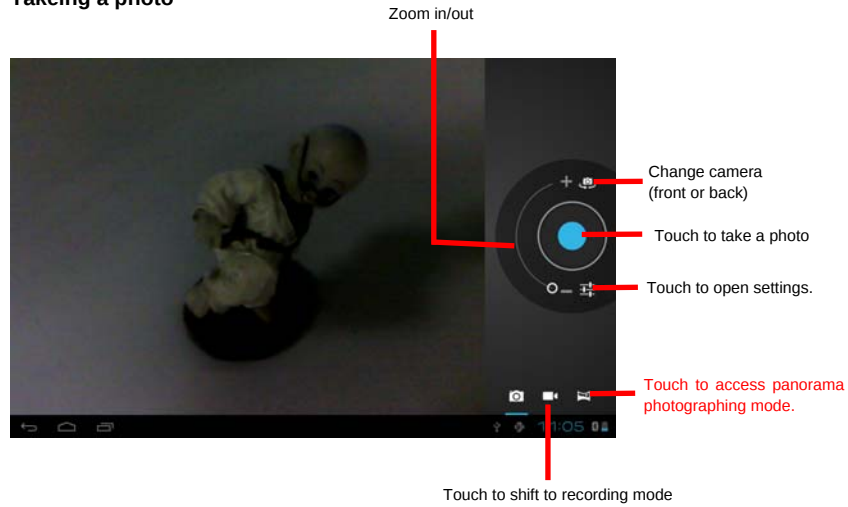

White balance: Auto, Incandescent, Daylight, Fluorescent or Cloudy.



Exposure: setup exposure value.



Scene mode: Choose your environment.



Camera settings: other settings like picture quality.

Recording



White balance: Auto, Incandescent,

Daylight, Fluorescent or Cloudy.



Time lapse interval: Select time lapse interval or turn off.



Camera settings: other camera settings.



8-2 Gallery

Open:  >  Gallery

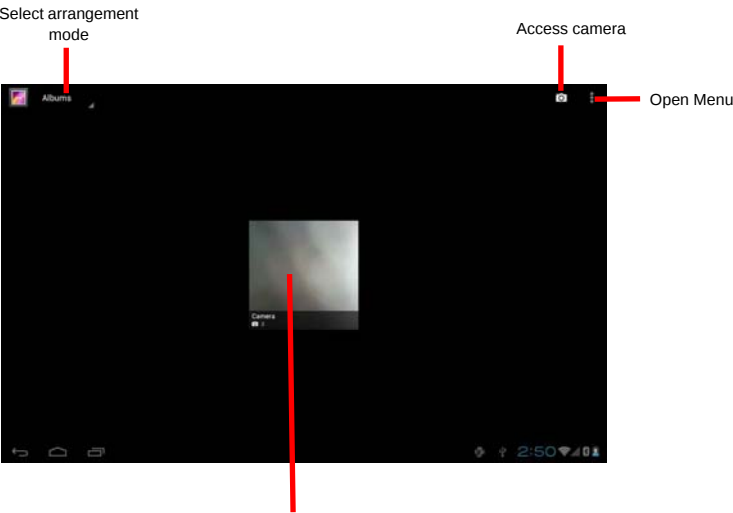


Image playback

- : Touch to start slideshow.
- : Touch to share the current image.
- : Touch to delete the current image.
- : Touch to open menu to see details, rotate, crop, etc.



The touch panel supports multi-finger gestures, which can be applied to customized functions, like Zoom In/Out, Flicking by multi-touch.


Illustration	Gesture	Function	Illustration	Gesture	Function
	Expand	Zoom Out Object		Flick Right	Forward
	Narrow	Zoom In Object		Flick Left	Backward

8-3 Music


Open:  >  Music

Touch to play music;
touch&hold to open window
to add to playlist, etc.

Touch to change view

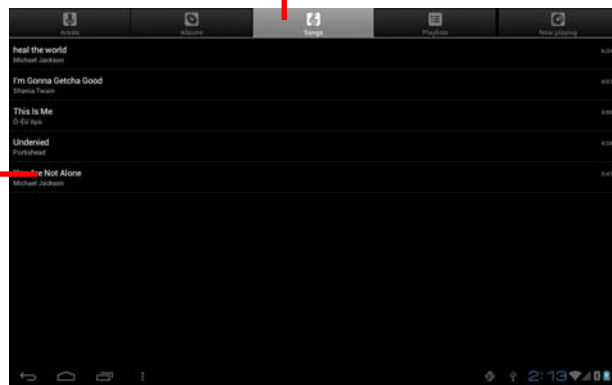

Choose any song you like to start playback. During music playback, touch  to pause and touch  to resume playback; touch  /  to play the previous/next track.

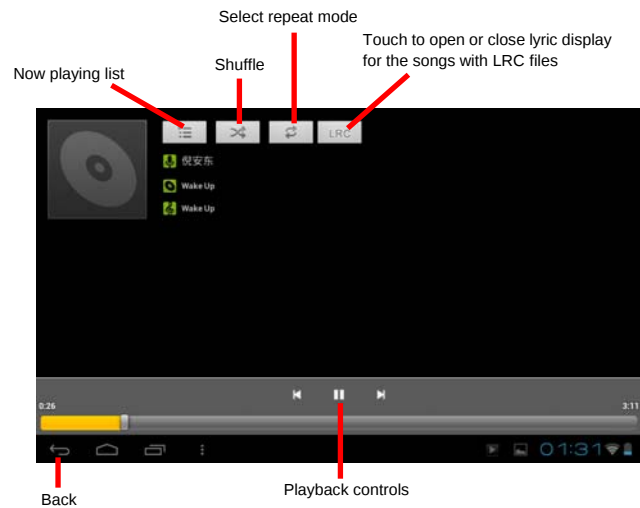

9 System Connection

9-1 Inserting Micro SD Card

The unit is designed with Micro SD card port which allows you to insert the micro SD into the unit as shown right:




To remove the micro SD card, press it to eject it from the port.



Make sure the power is off during inserting and removing the micro SD card to avoid damages.

9-2 Connecting External Monitor

Connect one end of the HDMI cable to the HDMI port of the unit and the other end to the HDMI port of the external monitor as shown right:

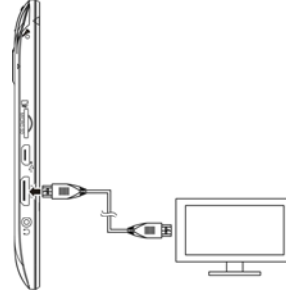

Before connecting, switch the digital device display to HDMI mode.

9-3 Connecting PC

The **micro** USB port allows you to connect the unit to a PC. See the figure below for details:



MTP drivers need to be installed into the PC with WindowsXP OS for connecting.

10 Appendix

10-1 Troubleshooting

Q1: How to turn off the tablet PC when the halted system occurs?

A: Press the power button for about **8 seconds** to turn it off forcibly.

Q2: How to check the tablet PC if the tablet PC cannot be turned on?

A:

1. If the power is low, connect to the electric outlets.
2. Make sure the indicator of the adapter turns on and the adapter works well.
3. Remove the external device.

Q3: If the water come into the tablet PC

A:

1. DO NOT turn on the tablet PC.
2. Disconnect the outlet cable in order to turn off the tablet PC, instead of pressing the power button to turn off it. Disconnect all external devices, and then send to the service center for advice.
3. DO NOT place the tablet PC into the dirty carrying case to again.

Q4: How to recover the factory status?

A: Touch **Settings---Backup & reset---Factory data reset** to recover the system to the default status on APPS Menu.

Q5: How to prolong the usage time of the Battery?

A:

1. Adjust the brightness of the LCD Screen to proper level on **Settings---Display---Brightness** menu.
2. Turn down the volume.
3. Set the time amount to proper level on **Settings---Display---Sleep** menu.

Q6: The image isn't clear.

A: Check that the lens is clear or not, if not, clean with the soft cloth.

Q7: How to do if the Micro SD card can't be read?

A: Please turn off the unit and re-insert the card .

Q8: How to do while the light-sensor is malfunction?

A: To turn on **Automatic brightness**. Please refer to the detailed operation: turn on **Settings--- Display---Brightness**, tick **Automatic brightness**.

10-2 Specifications

Main Feature	
Processor	RK3066
Memory (#)	1GB
Memory Type	DDRIII
Operate System	Android 4.1
Storage	
Mass Memory (#)	8GB
Display	
Size	7"
Display Technology	TFT LCD
Resolution	1024X600
Touch Panel	
Type	5-point Capacitive Touch Panel
Camera	
Descriptions	Front: 0.3M pixel Back: 2M pixel
Wi-Fi	
WLAN	802.11 b/g/n
Video/Audio Feature	
Audio	Single Speaker; Stereo Headphone
Video	HD Output(Supports 1080P Max)
Condition	

Operating Temperature	5-35℃
Operating Humidity	35%-85%
Storage Temperature	-20-55℃
Storage Humidity	20%-93%
Power	
Adapter	AC 100~240V; DC 5V/2A
Output Power (maximum)	≤ 10W
Battery (Type)	Built-in Li-ion Polymer Battery
Voltage	3.7V
Port Standard	
Audio Port	Headphone Port, Speaker, Built-in Microphone
USB Port	Micro USB Port
HDMI Port	HDMI Output
SD Card Port	Support Micro SD Card
Physical Features	
Weight	About 0.35Kg
Dimension	192mm x119mm x10.5mm



Design and specifications are subject to change without notice. The # symbol means that the item is optional.

The unit is equipped with mini HDMI function.



FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.