



Operational Description

USING METHOD

WINDOWS 98/98SE

Please install Windows98 driver in the CD and, boot again.

WINDOWS Me / 2000 / XP

When SELFDISK is inserted to PC at first, initializing time (15~30sec) is required.

Please do not separate SELFDISK from PC during initializing.

After that, it is not required initializing procedure anymore so, you can use it within a few seconds from inserting.

MAC OS

Once inserted to PC, HDD or FDD icon is displayed on desktop screen. After this recognition, it shall be used as a portable storage device easily.

LINUX

File system and mount shall be set as follows.

```
mkdir /mnt/mydisk  
mount -t vfat /dev/sda1 /mnt/mydisk
```

If you want to format, please do unmount and, input followings.

```
mkfs -t msdos /dev/sda1
```

For LINUX, FDD-mode cannot be available so, please use independent LINUX utility for FDD function.

SEPARATING SELFDISK FROM PC.

WINDOWS 98/98SE

Please do not separate SELFDISK from PC while LED is flickering.

If SELFDISK is separated during flickering, data in it can have some damage.

WINDOWS Me / 2000 / XP

While LED is not flickering, please select the icon “Unplug or Eject Hardware” and operate it before separating SELFDISK from PC.

Mac OS

Please move the Icon to Recycle Bin to separate SELFDISK from PC.

LINUX

Please do unmount as follows to separate SELFDISK from PC.

```
umount /dev/sda1
```