



#### **4.1.6 EUT OPERATING CONDITIONS**

- a. Turn the power of all equipment.
- b. EUT sent/received messages to/from Notebook PC (kept in a remote area) via LAN transmission.