




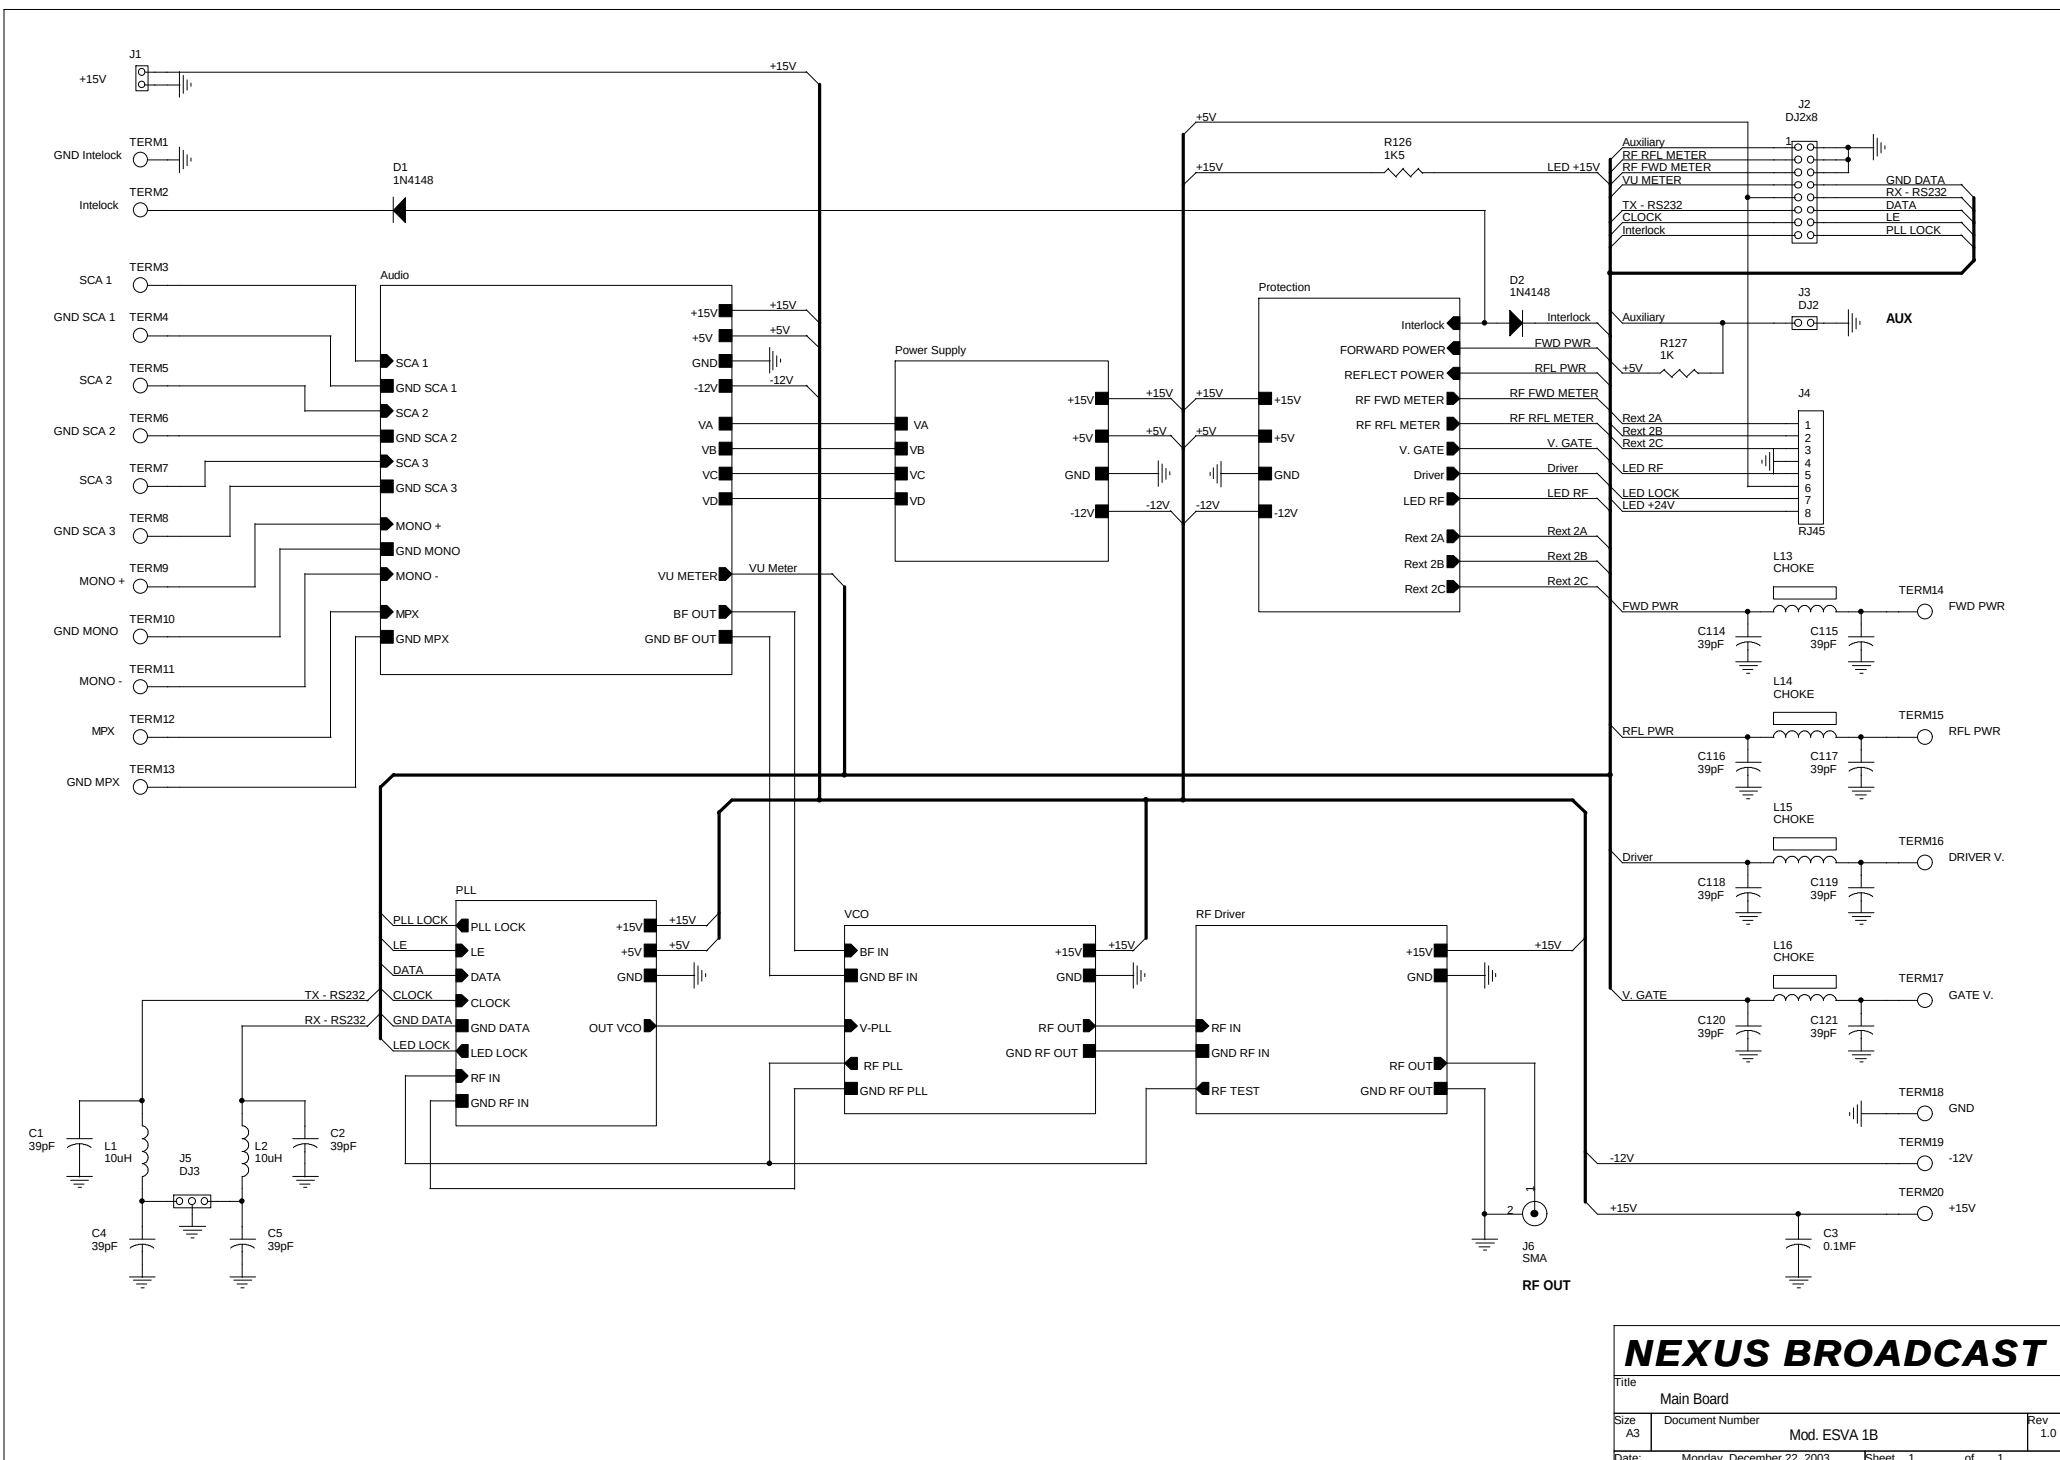


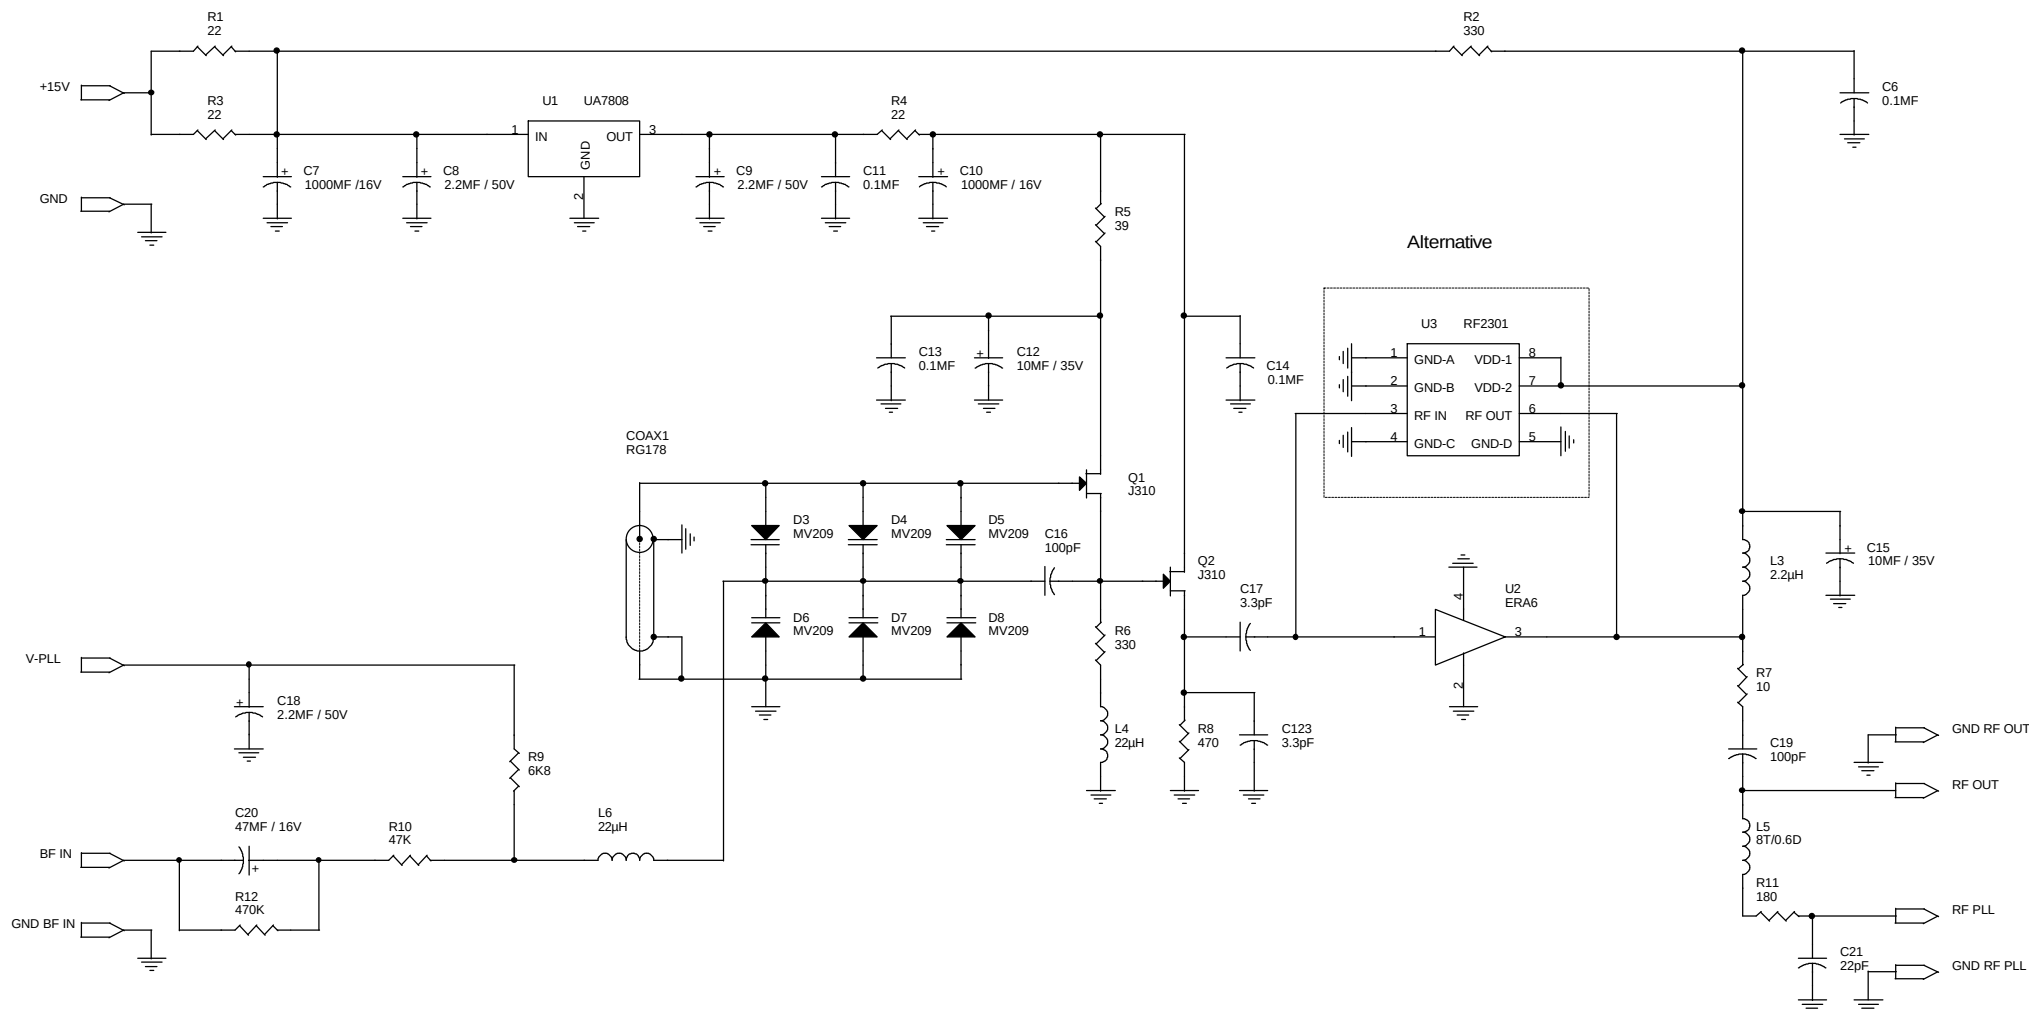

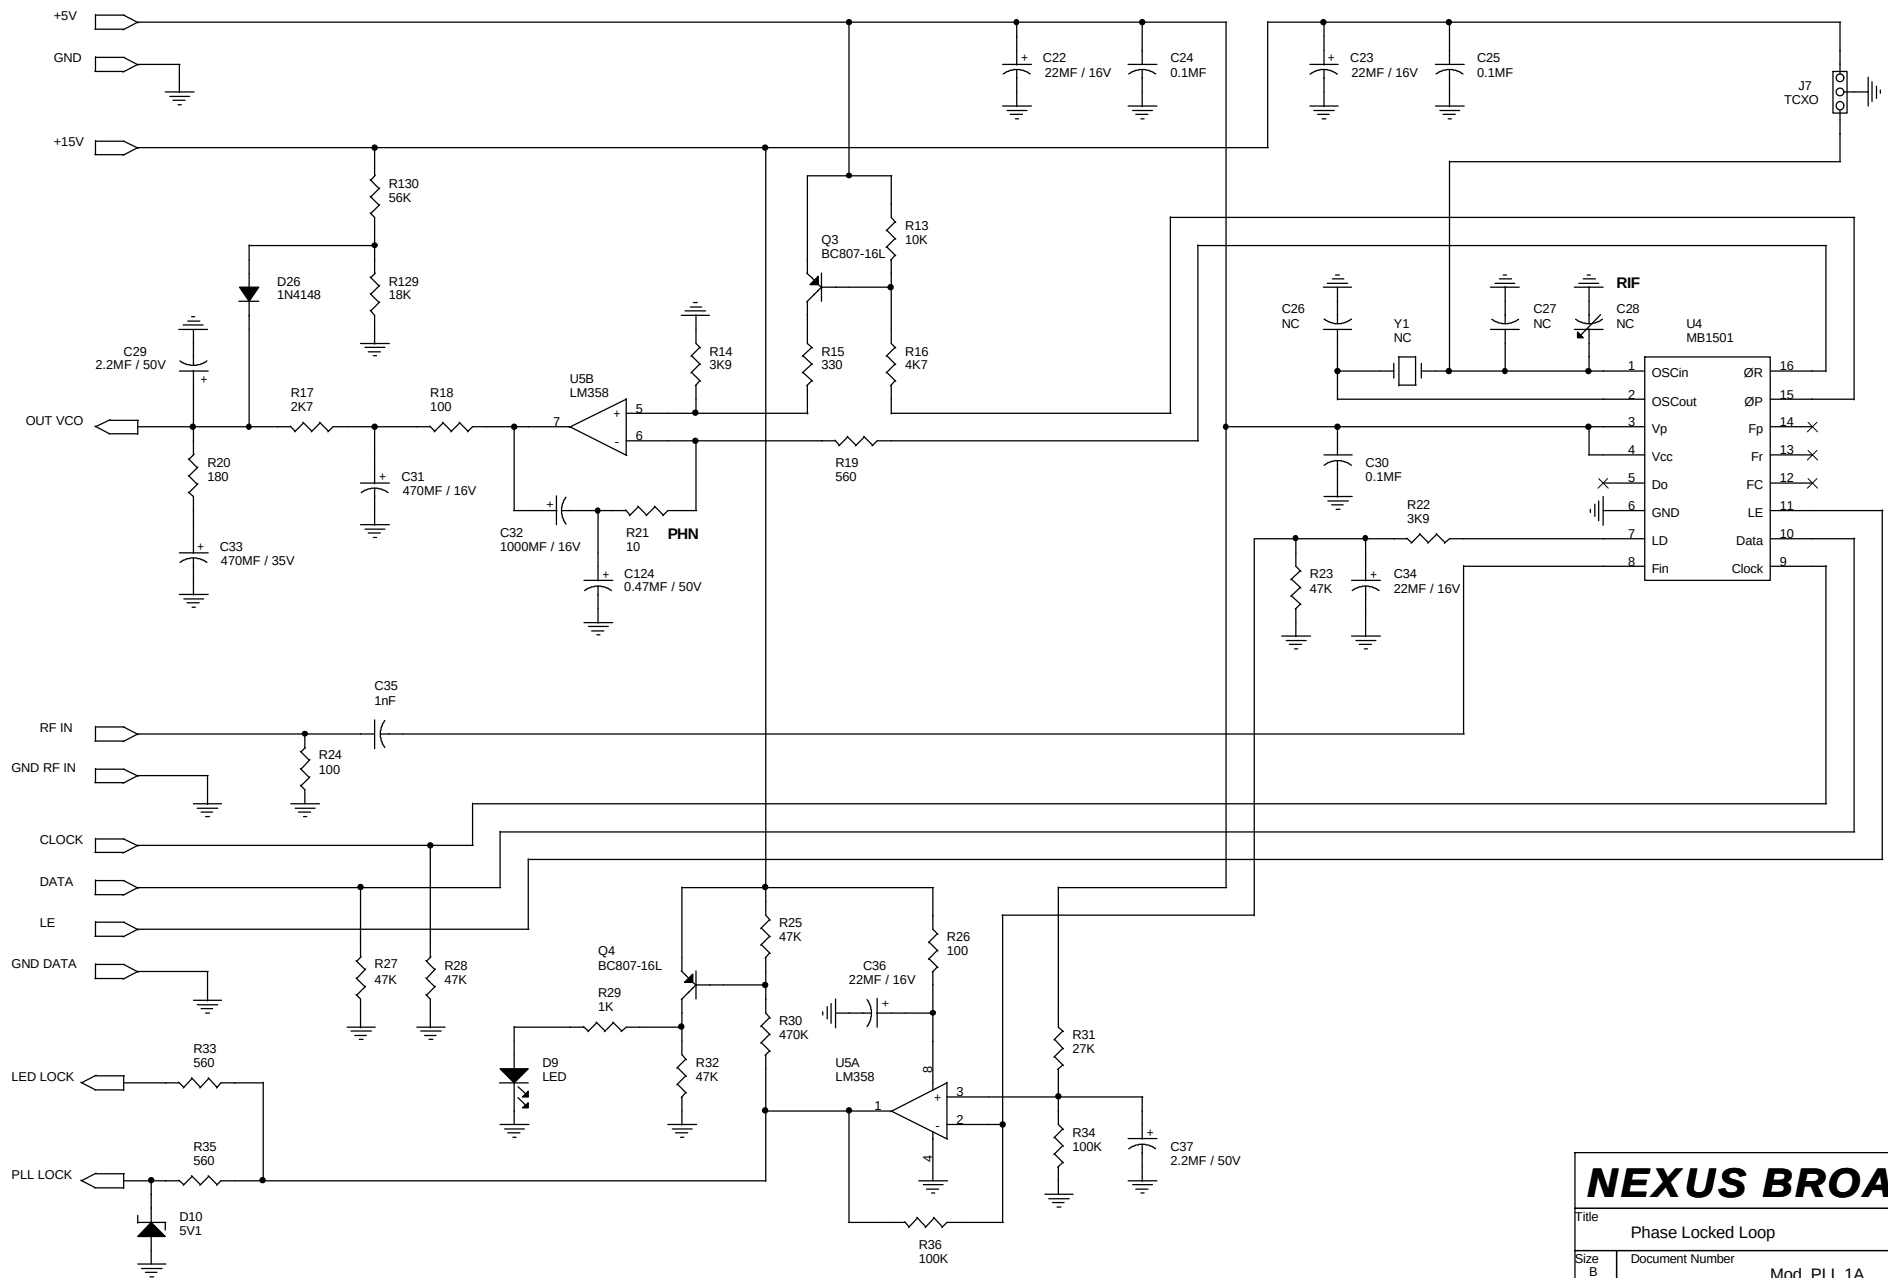


# NEXUS BROADCAST


|                   |                           |              |
|-------------------|---------------------------|--------------|
| Title             |                           |              |
| Phase Locked Loop |                           |              |
| Size              | Document Number           | Rev          |
| B                 | Mod. PLL 1A               | 1.0          |
| Date:             | Monday, December 22, 2003 | Sheet 1 of 1 |

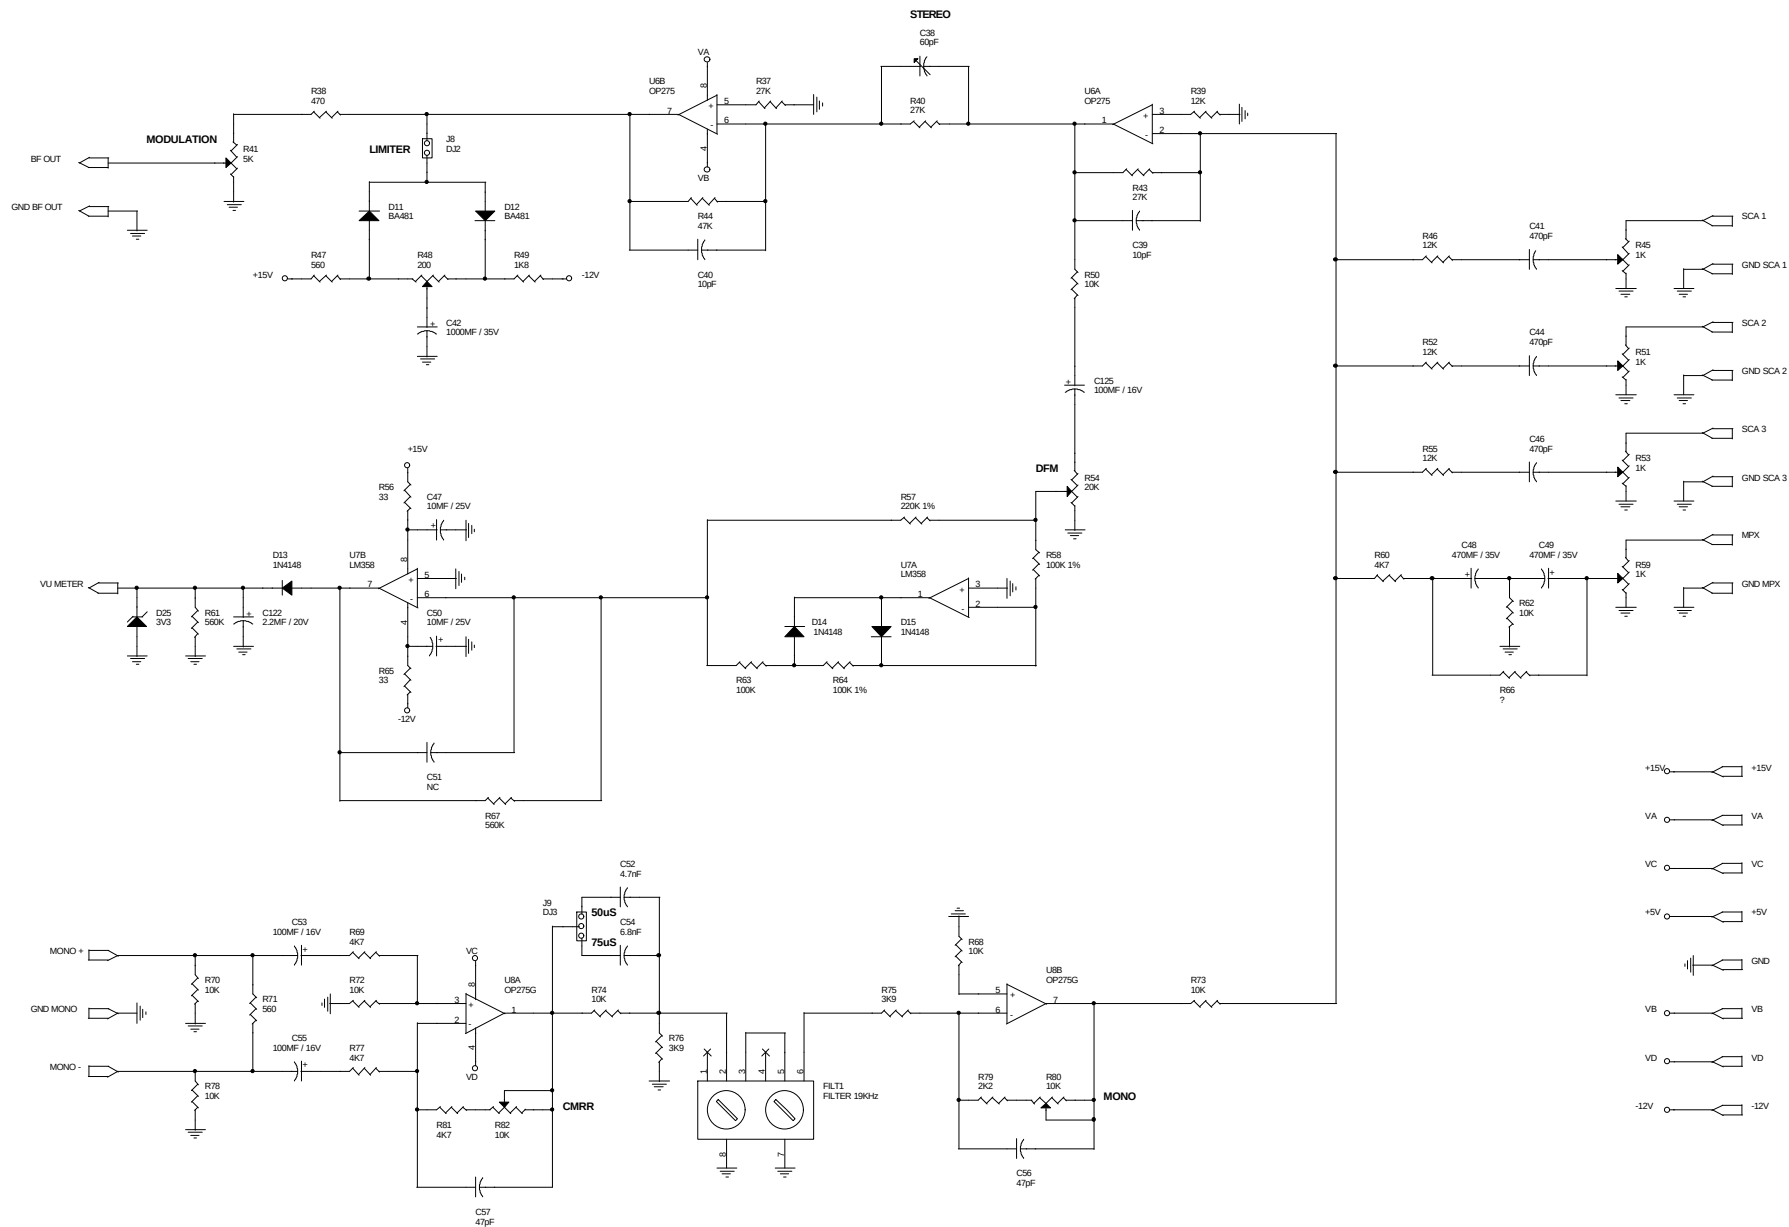


## NEXUS BROADCAST

|       |                           |               |         |
|-------|---------------------------|---------------|---------|
| File  | Audio Input Interface     |               |         |
| Size  | Document Number           | Mod. AUDIO 1A | Rev 1.0 |
| Date: | Monday, December 22, 2003 | Sheet 1       | of 1    |

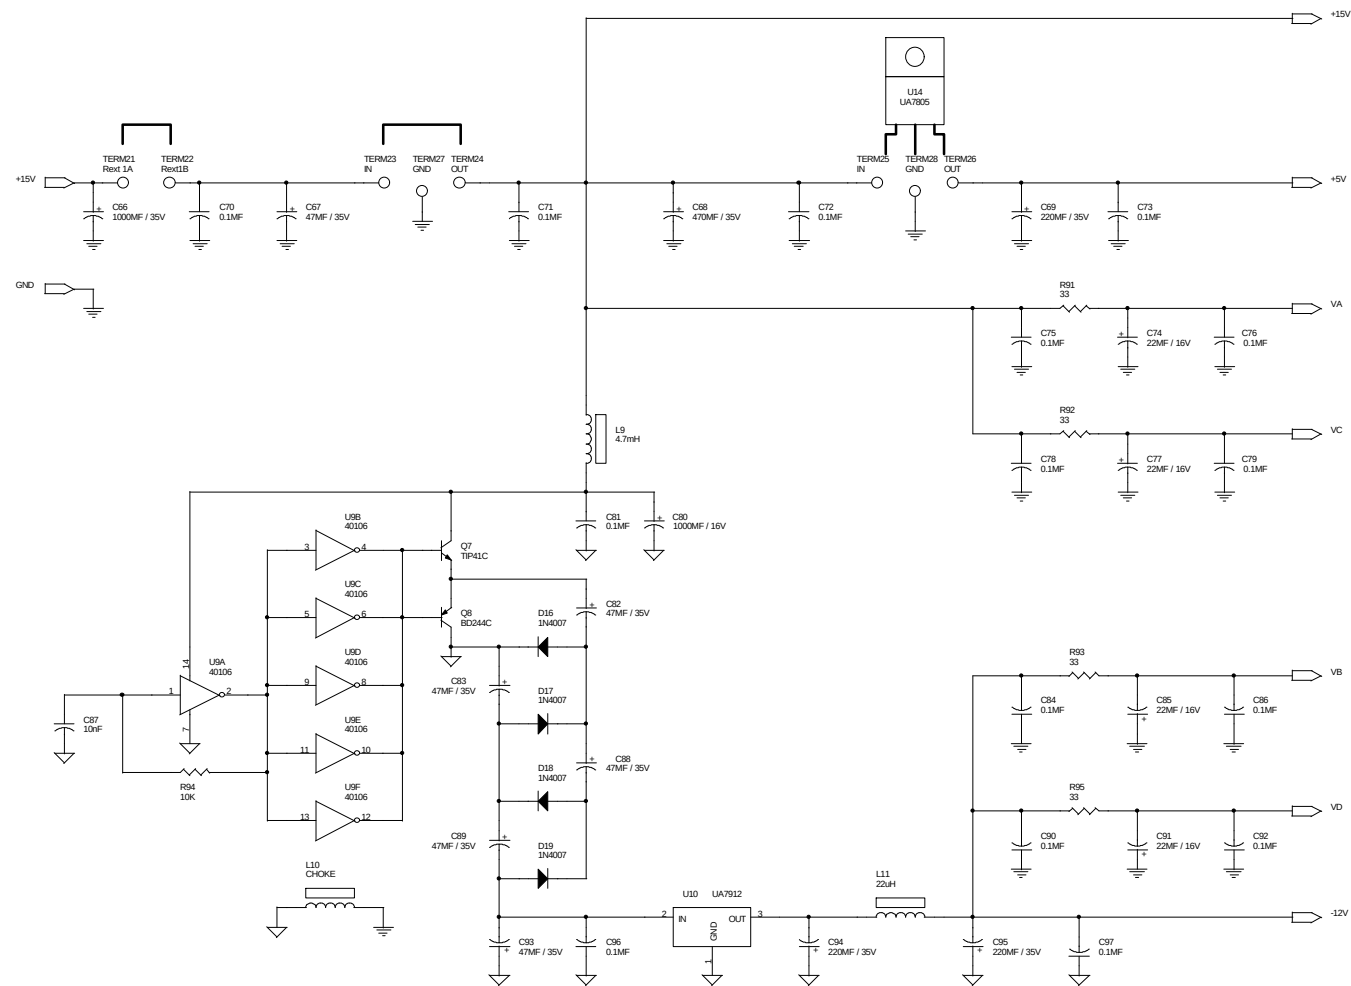

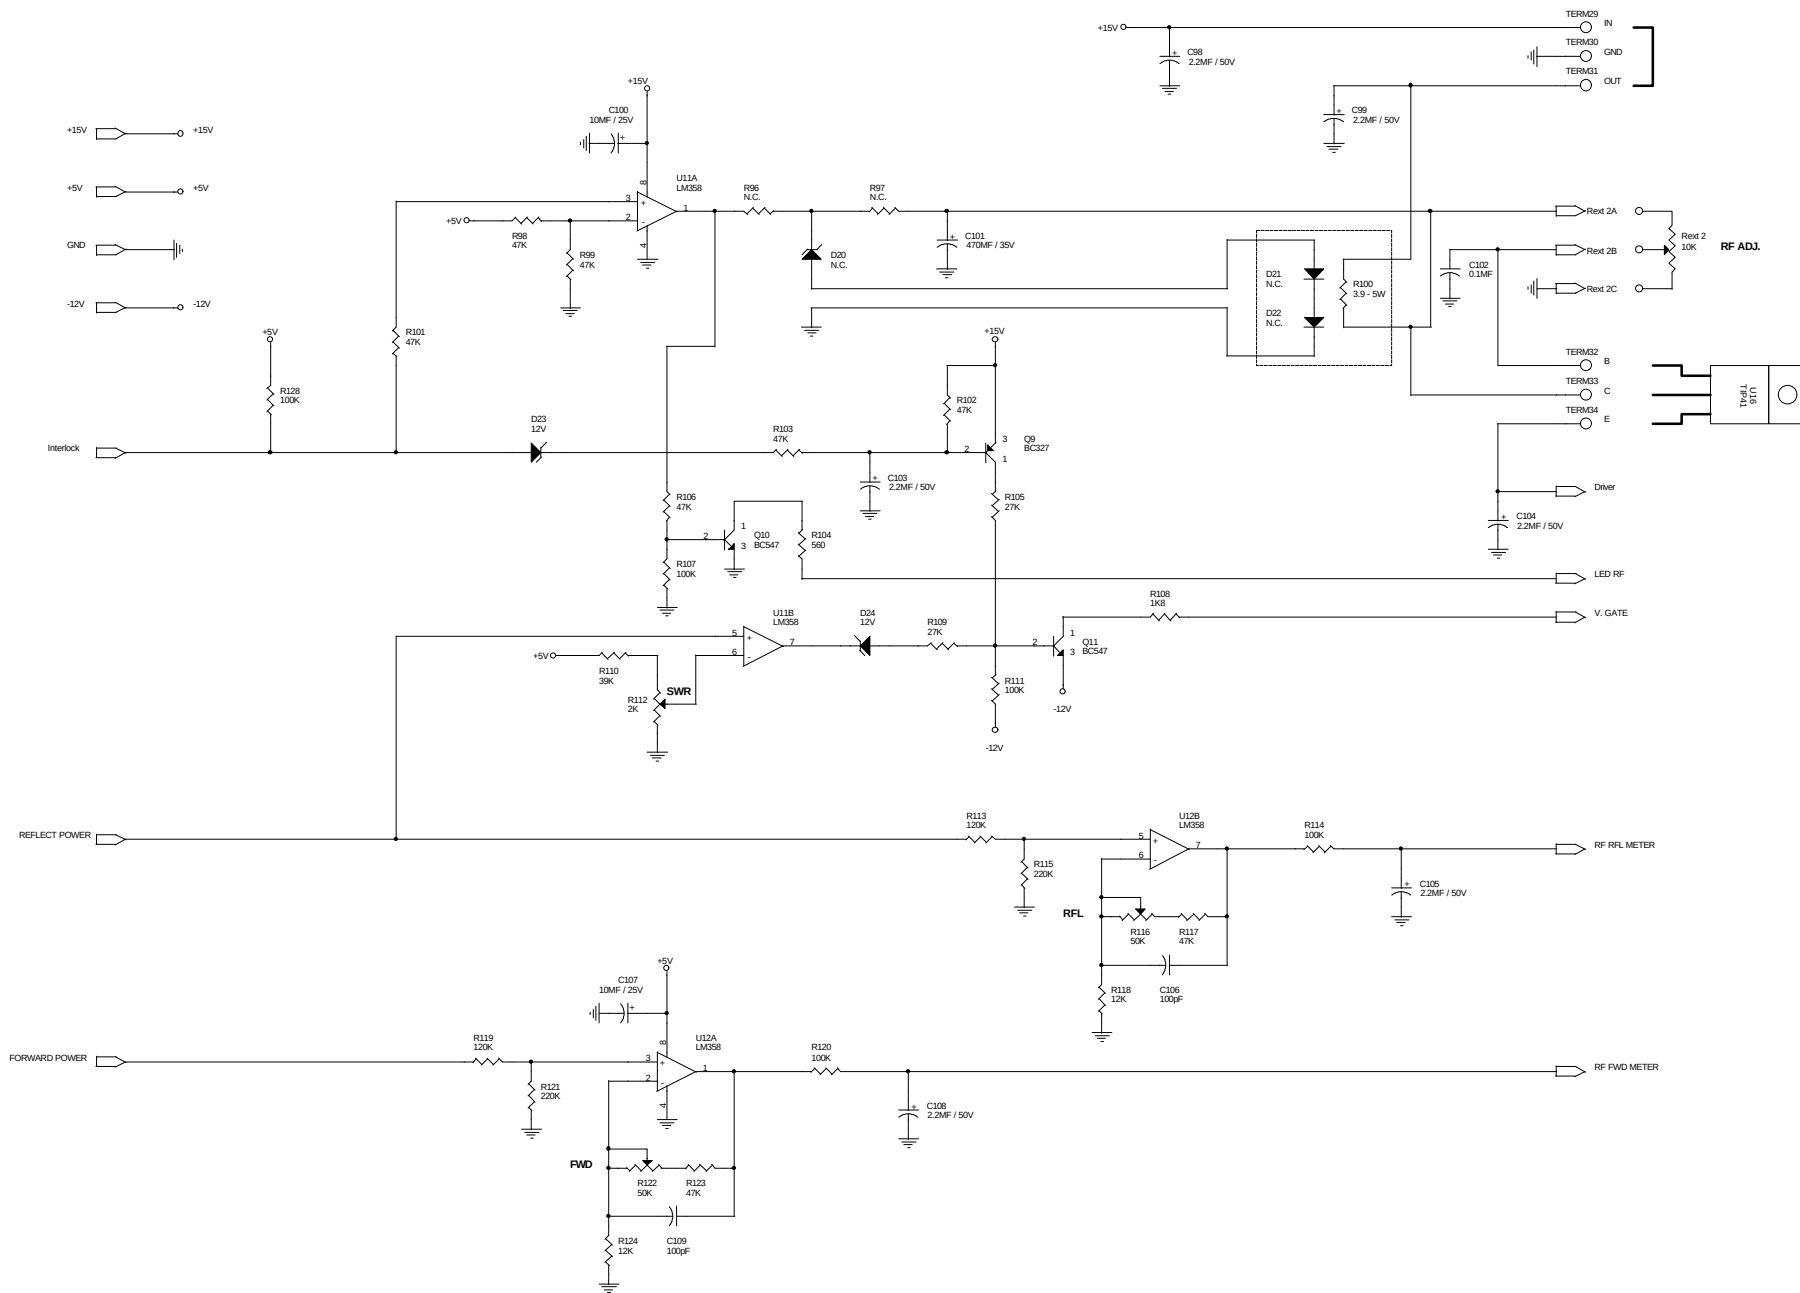

| NEXUS BROADCAST |                           |              |         |
|-----------------|---------------------------|--------------|---------|
| File            | Protection & Meter        |              |         |
| Size            | Document Number           | Mod. PROT 1A | Rev 1.0 |
| Date:           | Monday, December 22, 2003 | Sheet 1      | of 1    |

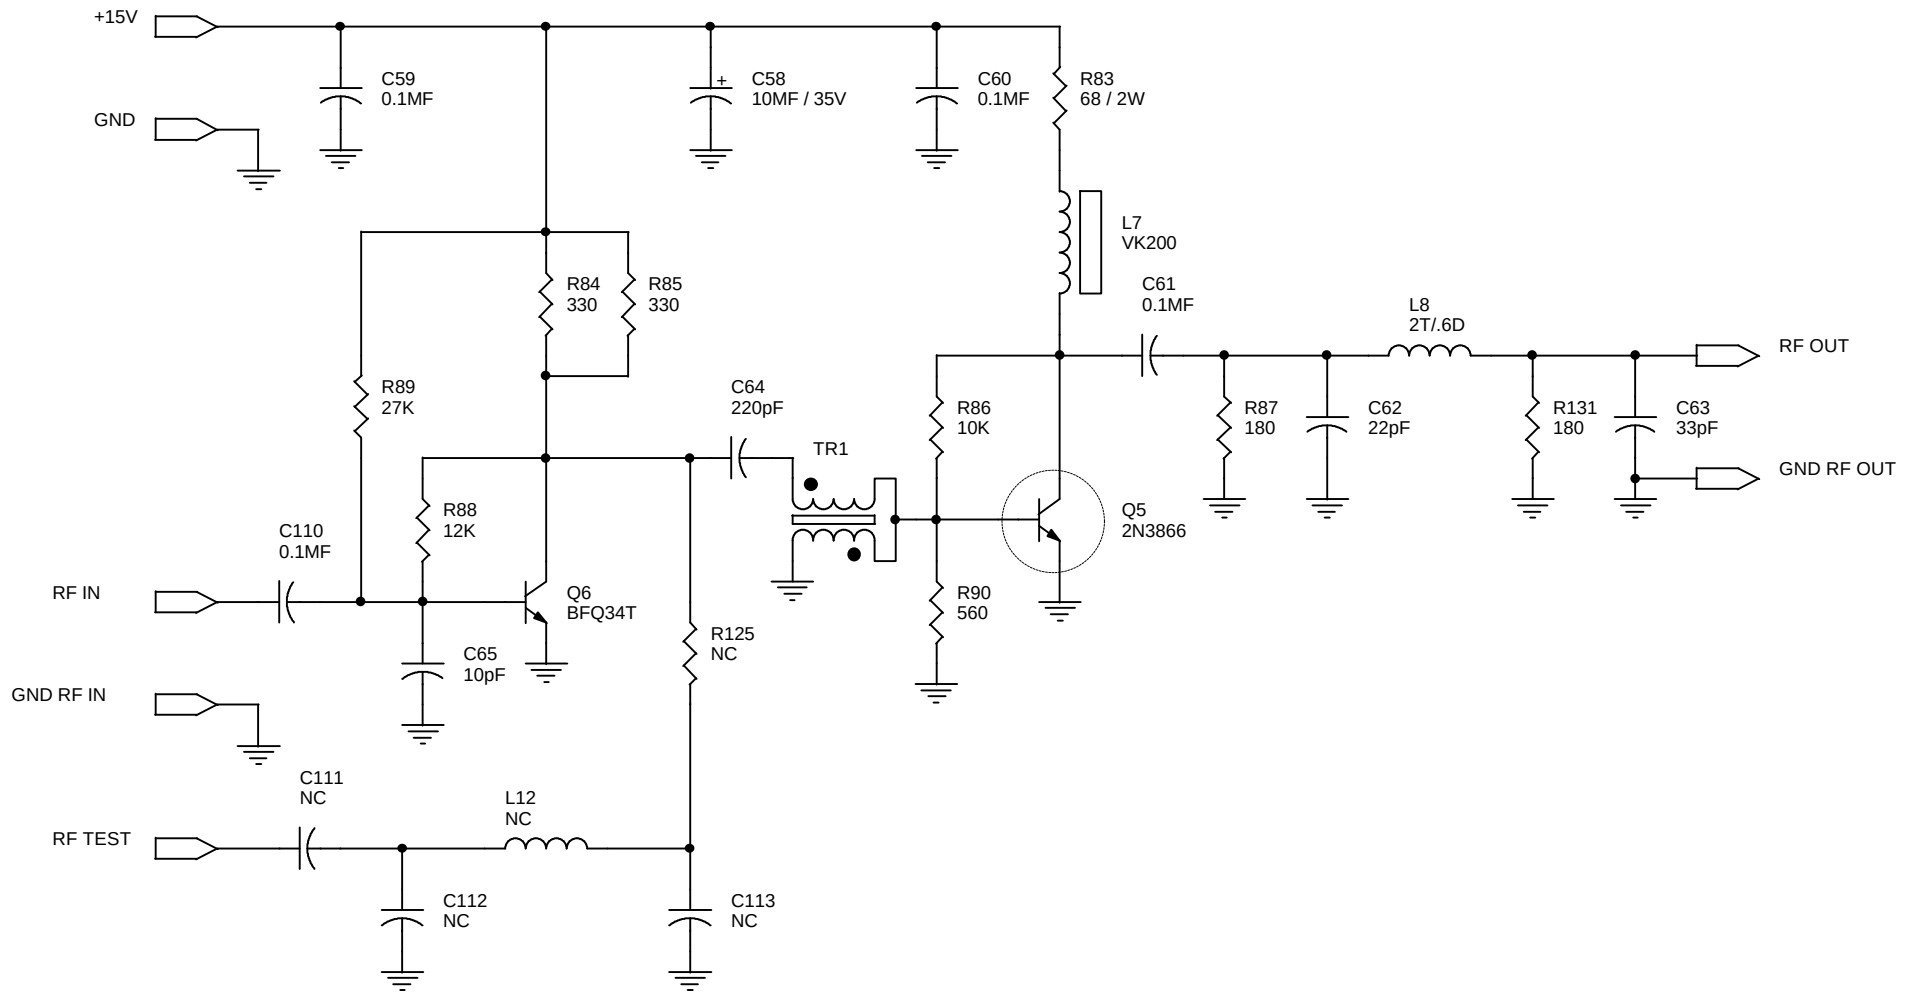

# NEXUS BROADCAST

|           |                           |              |
|-----------|---------------------------|--------------|
| Title     |                           |              |
| RF Driver |                           |              |
| Size      | Document Number           | Rev          |
| A         | Mod. DRIVER 2A            | 1.0          |
| Date:     | Monday, December 22, 2003 | Sheet 1 of 1 |