

TUNE UP PROCEDURE NBESTL10

The NBE Fm exciter series utilizes state of the art technology, therefore there is nothing for the end user to “tune” and setup is a breeze.

Please consult the users manual for setting the frequency via the front panel controls.

Power is adjusted by a small potentiometer located on the front of the unit. Power may be varied from zero to **ten** watts. Power level as well as reflected power is indicated on the LCD display on the front of the unit.

Modulation adjust is adjusted in the same manner by a potentiometer on the back of the unit. Modulation for the main channel, SCA, etc are adjusted with a small jewelers tip screwdriver. Modulation levels for the composite input can be monitored on the front Panel LCD display.

The unit will operate on 90 – 220 VAX 60 or 50 HZ. This is automatically adjusted in the units power supply. No user intervention is required.