



CONNECT TO THE APP FOR MOTION GAME PLAY

1. Download and launch the Lightsaber Academy app
2. Ensure Bluetooth is enabled in your device's settings
3. Follow the onscreen instructions to connect your lightsaber. Once connected, your lightsaber acts as a game controller. Follow the onscreen instructions and use your lightsaber's buttons to navigate and make menu selections within the Lightsaber Academy app.

 
TIPS

1. Maintain a clear and safe space during motion play.
2. Lightsaber can be used without the app. To shut off phrases, press RED button down and hold for 3 seconds.
3. If the lightsaber is not connecting to the app, press the LSA button.
4. If the app crashes and you are unable to disconnect from the app, press and hold LSA button for 5 seconds to manually disconnect.




TO EXTEND

Flick wrist.

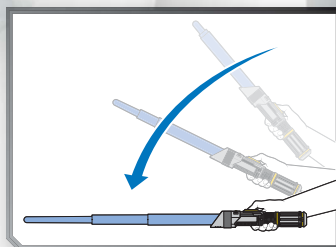

TO RETRACT

 Manually push down.



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMS-3(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1) This device may not cause interference; and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

2.4 GHz.



App available through at least 4/4/21.

Lightsaber Academy apps works with select Android and iPhone, iPad, iPod touch. App not guaranteed to be compatible with any future operating systems or devices. See www.habro.com for app availability and compatibility with supported devices and operating systems. Website and app not available in all languages/countries. Ask a parent first. Note: Hasbro is only responsible for Hasbro-generated content.

Apple, the Apple logo, iPhone, and iPad are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Android, Google Play, and the Google Play logo are trademarks of Google LLC. Note: Hasbro is only responsible for Hasbro-generated content. Please refer to third party terms and conditions for further information.

PARENTS

STARWARS.HASBRO.COM STARWARS.COM

The Star Wars word mark and logo are registered trademarks owned by Lucasfilm Ltd. and are used under license by Hasbro. Other trademarks and trade names are those of their respective owners. © 2019 Hasbro. All Rights Reserved. TM & ® denote U.S. trademarks.

US/CANADA TEL: 1-800-255-5516

E3026 PN00045124



STAR WARS

LIGHTSABER ACADEMY

INTERACTIVE BATTLING SYSTEM

SOME ASSEMBLY REQUIRED

MASTER TRAINING

AGES 6+

CAUTION

Do not poke or jab at people or objects. Avoid swinging lightsaber near breakable objects including smart device.

 
IMPORTANT: BATTERY INFORMATION

CAUTION:
1. As with all small batteries, the batteries used with this product should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.

2. TO AVOID BATTERY LEAKAGE
- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - c. Remove exhausted or dead batteries from the product.
 - d. Remove batteries if product is not to be played with for a long time.
 - e. Do not short-circuit the supply terminals.
 - f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.


3. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

TO INSERT BATTERIES

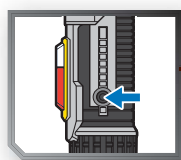


Press button to unlock 1

 Slide chamber open 2

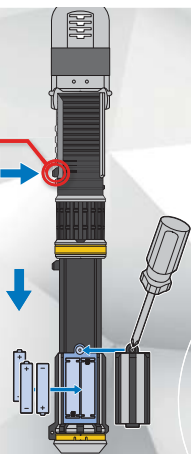


3X 1.5V AAA ALKALINE BATTERIES REQUIRED.
BATTERIES NOT INCLUDED.
Use a Phillips/cross head screwdriver (not included).

 
TO ATTACH

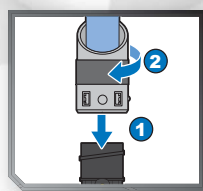

TO RELEASE

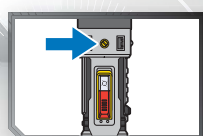 

TO BEGIN

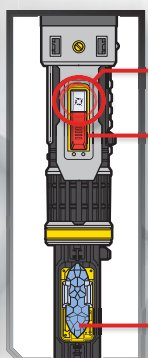 

Connects to Lightsaber Academy app. See app section for details.



Note: Buttons also control navigation and selection in Lightsaber Academy app. See app section for details.



PRESS CRYSTAL TO SELECT YOUR MASTER
Note: Close the crystal chamber before playing with the product