

Installing the Batteries

Wireless Keyboard and mouse use two AAA alkaline batteries,

Installing Batteries in the Mouse

- Step1. Open the battery compartment.
- Step2. Insert the batteries as shown inside the battery compartment.
- Step3. Replace the cover.




Install the batteries in the keyboard

- Step1. Remove the battery compartment cover on the bottom of the keyboard by squeezing the cover in from the tab to release it.
- Step2. Insert the batteries as shown inside the battery compartment.
- Step3. Replace the cover.



Connecting the Nano Receiver

- Step1. Switch on your computer and connect the nano receiver to a free USB port.
- Step2. Windows detects the USB receiver and installs it for use with the operating system.
- Step3 Smart-Link technology means that the mouse can be used immediately.

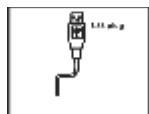

Receiver

DPI Switching

Simultaneously press and hold the left and right mouse buttons for 5 seconds in order to switch the sensitivity between 800 and 1600dpi

The higher the DPI number, the more precise the scanning is and the quicker the cursor will move in response to the same mouse movement.

Power Saving Mode

The mouse automatically switches to power-saving mode when it is not moved for 13 minutes. Press the left or right to reactivate the mouse.

Storing the Nano Receiver

If necessary, the receiver can also be conveniently stored in the storage slot on the bottom of mouse.

Functionality Problems

If the mouse or keyboard do not function as expected, ensure that you have carefully checked the following 1. The batteries are new and have been inserted correctly
2. The receiver is correctly connected to the computer
3. The receiver and the devices are within their communication range (max. 8m, depending on local conditions)

Hotkeys on the keyboard

The keyboard have 5 hotkeys located on the top of the keyboard and 3D scroll wheel.

Multimedia hotkeys

Play/Pause

This multimedia hotkey are programmable.

Mute volume up volume down

This volume control keys are by volume scroll controller

www stop

Charge the Battery in Mouse or Keyboard.

Your mouse and keyboard use Two AAA size Ni-MH rechargeable Battery. Before you use the mouse or keyboard, you need to place the mouse or keyboard on the stand to charge the Battery for 10 hours. This is very important to battery life. Please make sure the charge indicator is light ON when you charge the mouse.

When you feel your wireless mouse or keyboard is not working smoothly, that means that the batteries need to be recharged. Please put the mouse or keyboard on the stand for charging. Normally it will take 8 hours to get the Battery fully charged.

Place the mouse on the stand and make sure the charging indicator is light ON.

CAUTION: Some computer will turn off the power of USB port when entering sleep mode. In this case, the battery inside the mouse or keyboard can not be charged. So you are requested to keep your computer always ON when you charge the mouse or keyboard

Warning

1: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

2. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Keyboard & Optical Mouse



CAUTION: To use this device properly, please read the user's guide before installation.