

USER MANUAL

BMW Z4 Model: 8329

Scale: 1:12

1. SPECIAL FEATURES:

- 1) Seven functions with turbo speed;
- 2) Differential gear system;
- 3) Independent full suspension system;
- 4) Steering alignment knob on car;
- 5) With headlight;
- 6) Front doors can be opened.

2. INSTALLING THE BATTERIES

- 1) Turn power switch on bottom of the car to “off” position. Place the battery box(with 8x1.5-volt batteries in it) or 1x9.6-volt Ni-Cd power pack in the car. Join the connections accurately. Next, place 1x9.6-volt battery in the transmitter. Make sure to place batteries as marked(+)(-).
- 2) Only use new 1.5V “AA” R6 batteries or Ni-Cd storage batteries of appropriate size.

3. OPERATING INSTRUCTIONS

- 1) Extend the telescopic antenna to full length;
- 2) Turn power switch on bottom of the car to “on” position;
- 3) The transmitter is turned “on” automatically when you push the control stick backward or forward. When both control sticks are in the stop and straight positions, the power automatically turns off. You can enjoy Turbo Speed when pushing the control stick lightly towards the right and forward simultaneously.

4. OPERATING SAFETY RULES

Select a **SAFE** place to operate your vehicle. Do not drive in the street. Avoid driving on **SAND** or through puddles of **WATER**. These hazards can impair performance. Check the surface ahead of you and watch for obstacles. The radio receiver in your vehicle and transmitter are sensitive instruments.

Do not **STORE** vehicle and transmitter near sources of **HEAT** or under

DIRECT SUNLIGHT for long periods of time. Avoid leaving vehicle or transmitter **OUTSIDE OVERNIGHT: NIGHT DAMPNESS IS HARMFUL** to **INTERNAL MECHANISM**. While thundering or any indication of thunder, avoid playing outside. Any CB transmitters in the same band may interfere controlling the car, under such conditions, change locations or wait till CB interference ceases. Be sure to operate the car out in the open to obtain best range results.

5. ATTENTION

- 1) Not be used for children under 3 years old;**
- 2) Keep this packaging, it contains important information;**
- 3) Non-rechargeable batteries are not to be recharged;**
- 4) Rechargeable batteries are to be removed from the toy before being charged;**
- 5) Rechargeable batteries are only to be charged under adult supervision;**
- 6) Different types of batteries or new and used batteries are not to be mixed;**
- 7) Only batteries of the same or equivalent type as recommended are to be used;**
- 8) Batteries are to be inserted with the correct polarity;**
- 9) The supply terminals are not to be short-circuited;**
- 10) Remove batteries if the toy is not used for long periods of time;**
- 11) Exhausted batteries should be removed from the battery compartment;**
- 12) Do not insert the antenna into socket outlets.**

FCC STATEMENT:

“Modifications not authorized by the manufacturer may void users authority to operate this devices”

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to

radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.