

N810 User Manual

Touching Your Future

Welcome to the user guide for the N810 mobile phone.



With a whole suite of powerful business functions and entertainment programs, the N810 provides a fresh and exciting level of enjoyment.

By using the GPS (Global Positioning System), the N810 will provide you a variety of the best routes and real-time voice service according to your

different needs. You can easily locate your current position and the correct direction.

The N810 can take photos or record video clips with the built-in 2 million pixel CMOS camera, which lets you memories every wonderful moment.

Connect to the Internet with Internet Explorer;

synchronize your phone and PC with ActiveSync. Wherever you go, whatever you do, keep the N810 close and never skip a beat.

Special features

Supports GPS (page 88)

Built-in 2 mega pixel CMOS camera (page 80)

Built-in ActiveSync to synchronize with PC (page 65)

Touch Screen and Manual Input Identification (page 25)

Supports Windows Mobile 6.0

Supports Micro-SD card (page 87)

Internet sharing (page 75)

Supports Outlook email (page 48)

65 K , 2.8 inches Screen

Windows Media (page 77)

Declaration

Copyright: 2007 Amoi Electronic Co. Ltd reserves all rights.

The content of this guide is protected by Copyright Law. It is forbidden to copy, distribute, publish or cite the content of this user guide, in whatever form, without the authorisation of Amoi Electronic Co. Ltd.

JAVA is the registered trademark of Sun Microsystems, Inc.

“**AMOI**” and “**AMOI**  ” are registered trade marks and belong to Amoi. They are protected by law. The other products or company names referred to in this guide are registered trademarks, trademarks, or registered names belonging to their owners.

Amoi has carefully and closely reviewed the content of this user guide. Nevertheless, it is possible that there are mistakes and omissions.

Amoi reserves the right to update and improve any products described in this guide, as well as the content of this guide. Amendments will be made without prior notification.

This is the user guide for the Amoi mobile phone only and does not include an introduction to this product's software and hardware configuration. The product and spare parts vary according to region. For more details, please contact an Amoi customer service centre.

Some functions referred to in this guide also need the support of a network operator or service provider. If you are unable to confirm whether you will be able to use certain functions or services with this phone, please consult your network operator or service provider.

The phone may include some commodities, technology or software that is controlled by export law, Chinese regulations and regulations governed by other countries or areas.

In order to ensure your safety, please read the “Safety Notice” and “Safety Precaution”.

Typographic conventions used in this user guide include:

<>: shows function key;

“”: shows important information on the phone interface;

[]: shows the phone menus.

Content

Safety notice	VII	Reminder	14
1. Getting to know your phone	1	Start	14
Your phone	1	Programs	14
Front view of your phone	1	Device locked	15
Side view of your phone	1	Device Lock	15
Rear view of your phone	2	Locking the phone	15
The Today Screen	2	Locking SIM Card	15
Status Icon	3	3. Call Functions	17
2. Getting Started	6	Entering the phone screen	17
Installing SIM card and battery	6	Enter PIN code	17
Installing Micro SD card	7	Making a call	18
Battery charging	8	To make a call from the Phone Screen	18
Battery power display	9	To make a call from Contacts	18
Power on/ off	9	To make a call from Call History	18
Switching the phone on	9	To make a call from Speed Dial	18
Switching the phone off	10	Creating a speed dial number from Contacts	19
Turning the phone function on/off	11	Editing or canceling a speed dial number ...	19
Turning on the phone function	11	To make an emergency call	20
Turning off the phone function	11	To make an international call	20
Using shortcut keys	12	Caller ID	20
Using Stylus	12	Checking Voice Mail	20
Instruction for the first used	13	To adjust the volume	20
Touch screen and Calibration	13	Answering or rejecting a call	21
Align screen	13	Answering or rejecting an incoming call	21
Text Size	13		

Ending a call	21	Sounds & Notifications	30
In-call options	22	More sounds.....	30
Call Holding (requires network support).....	22	Buttons	31
Switching between two calls (requires network support)	22	Phone ring and Security	31
Making a conference call (requires network support).....	22	Call Barring.....	31
Viewing notes while on a call	22	Caller ID	31
Mute while on a call	23	Call Forwarding	32
4.Call History	24	Call Waiting	32
Call list.....	24	Voice Mail and Text Messages	32
Viewing detailed call history	24	Fixed Dialing.....	32
Save contacts from Call History	24	Network	33
Call Timers	24	Menus	33
5.Input Modes	25	Input	33
Enter Screen.....	25	Lock.....	34
Switch the input modes.....	25	System Settings	34
Block Recognizer.....	25	About.....	34
Keyboard	26	Backlight.....	35
Letter Recognizer	26	Certificates	35
Transcriber.....	27	Clock & Alarms	35
Drawing on the screen	27	Customer Feedback	36
Editing the drawing	28	Encryption	36
6.Settings	29	Error Reporting.....	36
Personal Settings.....	29	External GPS.....	36
Owner Information	29	Memory	37
Today	29	Power	37
		Regional Settings	37
		Remove Programs	37
		Screen.....	38

Windows Update	38	Editing appointments	46
Connections Setting	38	Sending meeting notification.....	46
Beam.....	38	Search	47
Connections	38	Calculator	47
Network Cards	38	Help	47
USB to PC.....	39	8.Messaging	48
7.Personal Manager.....	40	Outlook E-mail.....	48
Contacts	40	New E-mail account.....	48
Creating new contact on the phone.....	40	Switching accounts	52
Creating new contact on SIM card	41	Deleting accounts	52
Viewing contacts	41	Editing e-mails	53
Searching contacts.....	41	Receiving e-mails	53
Speed Dial.....	42	MMS	54
Changing list viewing mode.....	42	Configuring MMS settings.....	54
Changing display type of Contacts	42	Editing a MMS	55
Editing contacts' information.....	43	SMS	57
Deleting contacts.....	43	Editing a Text Message.....	57
Tasks.....	43	MSN Messenger.....	58
Creating a new task	43	Functions of Messenger	58
Notes	44	Setting account.....	58
Createing notes.....	44	Log in and Log on.....	59
Methods for recording	44	9.Office Mobile	60
Adjusting the voice recording format	45	Word Mobile	60
Rename or move notes	45	Creating documents.....	60
Select note template	45	Transferring documents	60
Send notes via e-mail.....	45	Excel Mobile	61
Calendar	45		
Creating a new appointment	46		

Using skills of Excel Mobile.....	62	Internet Sharing.....	75
Transferring sheets	62	Creating Internet Sharing connection	76
PowerPoint Mobile.....	63	Remote Desktop	76
Functions PowerPoint Mobile doesn't support:	63	12. Entertainment	77
Showing slides.....	63	Windows Media.....	77
Stopping slide show	63	Add music files	77
Viewing different slides	63	Pictures and Videos	78
10.ActiveSync.....	65	Pictures	78
Setting up	65	Searching and displaying pictures list	78
Synchronizing with PC.....	65	Viewing pictures	78
Synchronizing with server	67	Picture listing sequence	79
Synchronization Information	68	Deleting pictures.....	79
Synchronizing Outlook.....	69	Editing pictures.....	79
Synchronizing Favourites.....	69	Setting pictures as Today Background	79
Synchronizing Documents	69	Setting slide show format	80
Synchronizing Music, Video and Picture.....	69	Camera	80
Installing software on the phone	70	Capturing photos.....	80
Stopping Synchronization	71	Setting the capturing effect	81
ActiveSync Error Information	72	Saving settings	82
11.Wireless Network	73	Capturing videos	82
Creating Internet connection.....	73	Video time settings	82
Disconnect GPRS connection	73	Browsing and deleting videos.....	83
Creating WAP connection.....	74	Games	83
Internet Explorer	75	Bubble Breaker.....	84
		Solitaire	84
		Java	84
		13.File Explorer.....	86

14. Micro SD Card	87	The call volume is too low	98
Using Micro SD card	87	The person you are calling cannot hear your	
Installation steps	87	voice	98
15. GPS	88	The incoming call doesn't ring	98
Introduction of GPS	88	The battery can't be charged	99
GPS	88	Can't display network	100
16. Maintaining your Pocket PC	89	The stylus can't tap accurately	100
Creating or deleting programs	89	The phone does not recognize the storage card	
Installing new programs by ActiveSync	89		100
Installing new programs directly from the		ActiveSync can't connect with the PC	101
Internet	90	ActiveSync has connected with the PC, but	
Removing programs	90	cannot sync files	101
Managing the storage	90	Browser can't connect to Internet normally...	102
Checking the assignment and usability of the		Lack of space	102
storage	91	19. Safety Precaution	103
Checking the free memory	91	Usage environment	103
Saving new documents on Micro SD card ..	91	Medical devices	103
Deleting unnecessary documents	92	Pacemaker	103
Backup	92	Hearing aids	104
17. Phone Maintenance	93	Emergency calls	104
18. Troubleshooting	95	Making an emergency call	104
The phone can't be switched on	95	Password access	105
The phone is switched off automatically ..	95	PIN code	105
PIN/ PUK code lock	96	PIN2 code	105
Bad call quality	96	PUK code	106
Can't answer a call	97	PUK2 code	106
Can't make a call	97	Notes about charging the battery	106
		Battery information and care	107

Note about using spare parts..... 108
Other safety information 109

Safety notice

Before using the phone, please read and follow the rules below carefully. For the detailed information, please refer to the "Safety Precaution" section on page 103.



If you dial or answer a call while driving, please use the hands-free device (e.g. earphone, vehicle hands-free system, phone hands-free system) or use your phone after parking the vehicle.



The phone may interfere with the communication network of aeroplanes, so please make sure your phone is switched off during the flight.



All phones can be subject to interference, which could affect its performance.



Please switch off your phone where you see signs forbidding phone use. Such signs can be found in medical centres or establishments containing medical equipment.



In order to ensure high performance and to avoid damage the phone, please use the original accessories and battery. Avoid using products which are not compatible.



To avoid the risk of any explosion, please switch off the phone at petrol stations and places which are near fuel, chemical solvent or other dangerous substances.



Please switch off your phone in areas where there could be a risk of explosion and in areas where you are asked to switch off bidirectional radios. Pay attention and adhere to any rules and regulations concerning mobile phone use.



Please neither burn the phone battery nor use it as ordinary rubbish, as this could endanger life and damage to the environment. Please obey the environmental policy of the local government and dispose of and recycle them in time.



If you need to connect your phone to other devices, please read the user guide carefully to ensure the procedure is carried

out safety.



Keep small parts (e.g. SIM card) out of the reach of children to prevent batteries from being swallowed or causing other dangers.



Please back up the important information of phone and be sure to have a second copy in case data is lost from your phone.



Make sure the phone is switched on and has service coverage before inputting the emergency number. Press the call key for your position to be located. Please don't end call unless told to do so.

Cautions:

Any unapproved changes or modifications by the party responsible for compliance might infringe the user's authority to operate this mobile phone.

This mobile phone may generate radio frequency energy, which, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this mobile phone does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of measures listed below to clear the interference:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

Attention: 1. Please send used li-ion batteries to appropriate disposal locations or return them to our company. Do not dispose of the batteries in the dustbin.

2. For body worn operation this phone has been tested and meets FCC RF exposure guidelines

when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines


Statement: *This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


1. Getting to know your phone

● Your phone

Front view of your phone

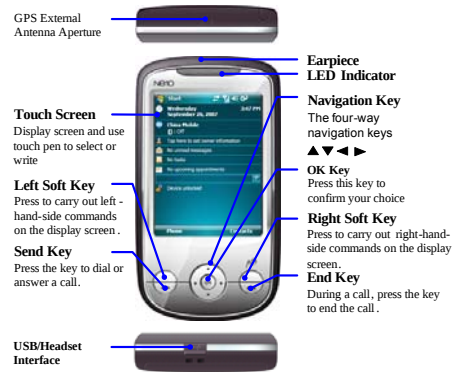


Side view of your phone

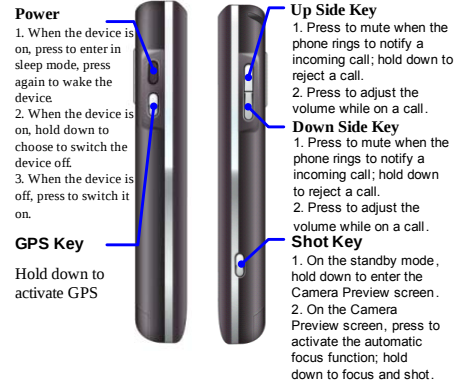

Rear view of your phone



its icon on the today screen.

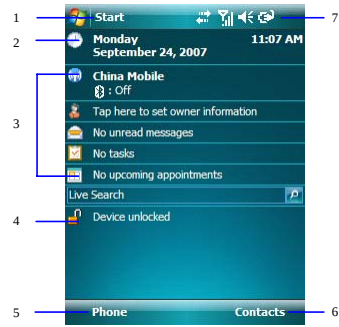

● The Today Screen

Select [Start→Today] to enter the Today screen which displays important messages like upcoming appointments and all status icons. Enter the corresponding program by selecting

NO.	Program	Function
1	Start	Click [Start] to open the main menu
2	Time and	Click to adjust the date,

	Date	time and clock settings
3	Program Menu	Click to open the corresponding programs
4	Device Locked	Click to lock the keypad and the touch screen to avoid error operation. As for the unlocked operation, please see Page14 'Lock the Phone'
5	Phone	Click to make a phone call
6	Contacts	Click to enter the contacts list
7	Status Bar	Shows the phone's status; click to see the information

Status icons locate on the top right side of the today screen. Below are some common status icons. If you are not sure about the meaning of a given icon, using your stylus to select this icon, the screen will display a dialog box to indicate its function; you can also change the icon settings.

● Status Icon

Icon	Function description
	Signal Strength: Represents the current network signal. Click it, and select [Wireless Manager] , then choose to turn on/off the phone function
	Searching for the signal

	No service
	Low Battery : Displays when there is little battery power
	Volume on
	Volume off
	Vibrate
	Receiving beam request
	Reminder
	Missed call
	Dial emergency call without SIM card
	Call Holding
	New messages or message sent successfully

	successfully
	Receive multimedia messages
	Downloading multimedia message
	Fail to download multimedia message
	Receive messages from MSN
	Several reminders
	No connection
	Synchronizing in progress
	Active Sync connected
	GPRS available
	Connecting GPRS

	NO SIM card inserted
	Phone is charging. Click to check the charging status
	Full Battery: Click to check information about the battery
	Low Battery
	No Power

2. Getting Started

Before using the phone, please insert a SIM card supplied by a network service provider. The SIM card (Subscriber Identification Module) includes phone number and detailed information of service items, and can be used to store phone number and user information.

 Caution:


SIM card and its contacts can be easily damaged by scratching or bending, so be very careful when inserting or removing the card. Please follow the instructions of SIM card user guide provided by the manufacturer and keep SIM card out of the reach of children

● Installing SIM card and battery

Before inserting the SIM card, please make sure the phone is switched off, and then

remove the battery.

- (1) Press and hold  for several seconds to switch off the phone.
- (2) As shown in the following diagram, slide the battery cover in the direction of the bottom of the phone and then remove it and the battery.

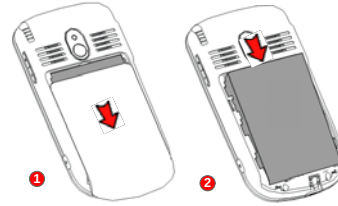

- (3) Slide the SIM card into the SIM card slot. Press the card downwards while inserting and make sure the card is facing the correct way, as shown below (with the contact point facing down).



- (4) Make sure the battery contacts are facing into the phone, and then push the other side of the battery gently until it fixes itself in the battery slot.



- (5) Make sure the battery has been installed correctly, and then slide the battery cover

in the direction of the top of the phone until it is covered, as shown below:



Warning:

Don't insert or remove the SIM card when the phone is switched on or getting charged, or this may damage the SIM card.

● Installing Micro SD card

A Micro SD card is a removable storage card that can be used to increase phone memory, or to backup files and data.

- (1) When installing the card, make sure the side with the golden contacts is facing down and insert the narrower end of the card. Then push the card gently until it is fixed in the battery slot. See the image below for additional information:



- (2) To remove the Micro SD card, gently push it toward the phone, and the card will automatically eject from the card slot.

 Caution:

Don't forcefully remove the Micro SD card from the card slot.

 Warning:

During the process of reading and writing to the Micro SD card, do not remove or insert the card. Amoi will take no responsibility for the following situations including, but not limited to, lost data or damage to the card damage.

● Battery charging

Charge the N800 by the travel charger:

- (1) Install the battery in the phone.
- (2) Insert the lead of the travel charger to USB slot of phone carefully, and connect the charger to a standard wall outlet.



- (3) While charging, such icon  will be displayed. You can view the charging status by clicking it, or selecting [Start→Settings→System→Power].
- (4) When charging is finished, the icon turns to be ; and the charging process will keep in 100.
- (5) Disconnect the charger and standard power socket first, and then disconnect the phone and charger.

 Caution:

1. Please use the approved battery and charger approved by Amoi for use only, otherwise it may

cause explosion.

2. Try to avoid using USB cable to charge.

3. Generally, the charging time is 2-5 hours depending on the status of the phone (whether switched on, making a call etc.)

● Battery power display

If the battery is low, the empty battery icon  will display.

If the battery is too low, the phone will switch off automatically. If this occurs, you may lose data that has not been stored.

● Power on/ off

Switching the phone on

When the phone is off, hold down  for several seconds to switch it on. Connect with USB cable or charger will switch the phone on

as well.

Switching the phone off

While the phone is on, hold down  to choose whether to switch the phone off. While the device is locked, you shall unlock it and then turn it off.

Warning:

While in sleeping mode, the phone just consumes lower power but not turns the phone function off. For the sake of safety, do switch the phone function off and remove the battery in areas where wireless phone use is prohibited.

If no SIM card is inserted when powered on, the phone will display corresponding prompt and show the icon as .

If the PIN code is activated, the phone will remind you to enter the correct PIN code when the phone is switched on.

Caution:

If you enter the wrong PIN code three times in succession, your SIM card is locked, and you will need a PUK code supplied by the GSM operator to unlock your phone.

If the phone is out of service, it will remind you “No Service”, and display the icon . Under the circumstances, you are not allowed to make or answer a call. Only when entering the service area can you regain the network service.

Caution:

- 1. Please don't switch the phone on in areas where wireless phone use is prohibited or where it may cause interference or danger. Please click , and select [Wireless Manager] to turn the phone function off.*
- 2. The phone is equipped with an antenna. When power is on, please do not touch antenna as this*

may affect call quality and require phone to consume more power


● Turning the phone function on/off

Turning on the phone function

Correctly insert the battery and SIM card, hold down  to switch on the phone. You can activate and use the phone function in service area.

Turning off the phone function

- (1) When the phone is on, click  and select **[Wireless Manager]** to turn off the phone function, as shown below:

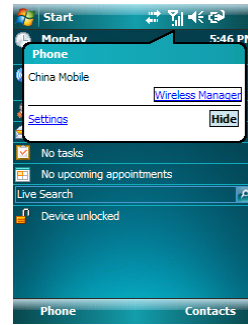

- (2) When the phone is off, click  and select **[Wireless Manager]** to turn on the phone function,

Warning:

You shall follow the instruction to turn off the phone function in areas where wireless phone use is prohibited.

● Using shortcut keys

When in standby mode, to press some keys directly provides direct access to some frequently used functions. The following table lists the operations and functions of some common shortcut key.

Key	Operation	Function
	Press briefly	Switch the phone on when the phone is power off
	Press and hold	Choose to switch the phone off or not when the phone is power on
	Press briefly	Rotate the screen orientation: Portrait, Landscape(Right-handed), and Landscape

		(Left-handed)
	Press and hold	Camera Key: Press to enter the camera state

● Using Stylus

The stylus is the device for you to operate AMOI N800 by clicking on the screen to choose programs or to enter some data.

Your stylus is extension and retractile. Pulling out of the slot, it will draw out for your convenience. Just insert it into the slot when you don't need it.

Stylus is able to do:

Click: Click on the screen by the penpoint to

open or select programs.

Drag: Click on the screen and drag to choose the programs by the penpoint.

Click and hold down: Click one program and hold it on to enter its shortcut menu. The menu will list all the available operations.

● **Instruction for the first used**

When you switch the phone on for the first time, please follow the prompts displayed on the screen to make the basic operation settings.

Touch screen and Calibration

It is necessary to calibrate the touch screen when switching the phone on for the first time. The specific method is to follow the movement of the symbol "+" and click the center of it. Such calibration can make sure the veracity when you use the stylus to choose or enter some information.

Align screen

If the phone cannot respond to your choice correctly, you need to align it:

- (1) Select [**Start** → **Settings** → **System** → **Screen**].
- (2) Click [**General** → **Align Screen**], then follow the prompts displayed on the screen to align the screen.

When you are aligning the screen, please try as much as possible to tap accurately on the center of the "+".

Text Size

If you want to improve the readability or to view more contents in programs which support adjusting text size, select [**Start** → **Settings** → **System** → **Screen** → **Text Size**]. Just move the coordinates to zoom in/out the text size.

● Reminder

When there are upcoming appointments or new text/multimedia messages, the phone will remind you in some ways. For instance, when there are upcoming appointments, tasks at term, or settled alarms, it will remind you in the below ways:

- ❖ A prompt box will appear on the inferior of the screen.
- ❖ Sound prompts
- ❖ Flash light
- ❖ Vibrate prompts

To set the system notification mode and sound, please select

[Start→Settings→Personal→Sounds & Notification]. For the details, please see "Sounds & Notifications" on page 30.

● Start

The Start menu locates on the upper part of the screen and displays the shortcut ways of those frequently-used applications.

Programs

Select the program list on the start menu to switch between several programs. To activate one, just select **[Start→Programs]**, then click the title or icon of the program.



Notice:

The procedures to access to a certain program described in the user manual may be different with your real operation procedures, because the accessing procedures differ as the setting made in [Start→Settings→Menus]. Please follow your phone settings.

● Device locked

Device Lock

Use it to avoid improper operation.

- (1) Click **<Device unlocked>** on the **[Today]** screen to lock the device.
- (2) While the phone is locked, click **<Unlock>** on the left inferior side on the today screen, and then tap **<Unlock>** button to unlock the device.



Notice:

If such item cannot be found in Today screen, select [Start→Settings→Personal→Today→Items], and put a ✓ in the box before [Device Lock], then click <ok>.

Locking the phone

Select **[Start→Settings→Personal→Lock]**,

then click **[Prompt for device unused for]** to set the time. Enter the password to lock the whole device in order to prevent others to get your personal information. After the function is activated, the phone will automatically lock when no operation occurs within a period. Under the circumstance, if you want to use your phone again, the phone will display prompt which requires you to enter the password correctly. As for the details, please see P34 "Lock".

Locking SIM Card

You can use PIN code to protect your phone so as to prevent other to use it without your permission. The original PIN code is supplied by GSM operator.

- (1) Select **[Start→Settings→Personal → Phone]**, and click **[Require PIN when phone is used]**.
- (2) Enter the original PIN code supplied by GSM operator.

(3) Click <Enter>


If you want to change PIN code at anytime,
please select [**Change PIN**].

3. Call Functions

You can use the call function to save the call log, or to record.

● Entering the phone screen

On the today screen, click <Phone> to enter the phone screen as shown below:

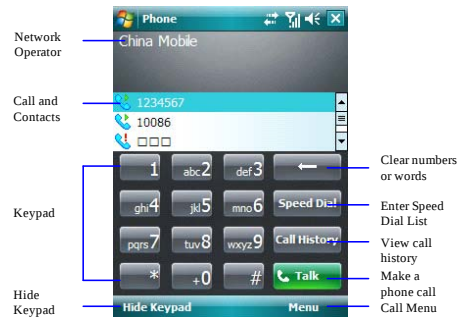

Enter PIN code

Most SIM cards have PIN code supplied by GSM operator. If the PIN function is activated, each time to switch the phone on or to make a phone call, you have to enter the code.

To activate or deactivate the PIN function, select [**Menu**→**Options**→**Phone**] from the phone screen, then click [**Require PIN when phone is used**].

- (1) Enter the original PIN code supplied by the GSM operator
- (2) Click <Enter>



Notice:

If you enter the wrong PIN code three times in succession, your SIM card is locked, and you will need a PUK code supplied by the GSM operator to unlock your phone.

● Making a call

You can make a call by the number keys, Contacts, Speed Dial, Call History and SIM Contacts.

To make a call from the Phone Screen

- (1) From the Today Screen, click <Phone> to enter the Phone Screen.
- (2) Enter the numbers on the keypad, click  or  to call.
- (3) Click  or  to end the call.

Clear numbers: If you dial a wrong number, click . Click once, clear one number; hold it down to clear all numbers.

To make a call from Contacts

You can use below methods to make a call from Contacts,

- (1) Click <Contacts> from the Today Screen

to enter the Contacts List.

- (2) Select the desired contact, enter its detailed information screen, and click <Call>.

To make a call from Call History


- (1) On the Phone Screen, click <Call History>.
- (2) You can first choose the type of the call history. If you want to check all the call history, select [Menu→Filter→All Calls].
- (3) Select the desired number, click <Call> by the stylus.

To make a call from Speed Dial

After created the speed dial, just hold down the corresponding number key to speed dial a call.

- (1) On the Phone Screen, [Speed Dial→Menu→New].
- (2) Select one contact.

- (3) Choose the available number by click the button  on [Location] box, (Number 1 is reserved for Voice Mail, which is to say, Number 1 is not available), then click <ok> to save the setting as shown below:

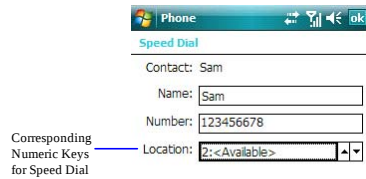

- (4) On the Phone Screen, tap the corresponding numeric key set for Speed Dial for 1 to 3 seconds, the phone will dial the phone number automatically. If the

corresponding number is double-digit, you shall enter the first digit then tap the second digit by your stylus for 1 to 3 seconds.

To replace an occupied numeric key with a new phone number, you can choose to overwrite it.

Creating a speed dial number from Contacts

- (1) To create a speed dial number from Contacts, select your desired contact from Contacts, enter its detailed screen, then select [Menu→Edit Speed Dial...].
- (2) On the [Location] box, click  to choose the available numeric key.

Editing or canceling a speed dial number

On the Phone Screen, click <Speed Dial> to enter the Speed Dial List, tap your desired Speed Dial number for a while, there will be a

check box, you can select **[Delete]** or **[Edit...]**.

To make an emergency call

On the Phone Screen, enter the emergency call numbers, and click  to call.

To make an international call

- (1) Click  and hold down till the plus “+” sign appears which is in the use of replacing 00.
- (2) Enter your desired numbers, including country code, area code (without the initial 0) and the phone number.
- (3) Click  to call.

Caller ID

AMOI N800 supports Caller ID (Caller Line Identification Service); besides, SIM Card supports Caller ID as well.

If the caller's information is saved in Contacts

(Saved at Phone or Saved at SIM Card), when it calls, the phone will display the caller's name and number. If the caller's information hasn't been saved in Contacts, when it calls, the phone will display its name, and its number (if it is a telephone number or personal handy-phone number, the city or country code the caller's number belonging to will be displayed on the name part.

Checking Voice Mail

Number 1 is reserved as **[Voice Mail]**.

On the Phone Screen, select **[Speed Dial→Voice Mail]**. On the setting screen, select **[Service→Voice Mail and Text Messages]**. Click **<Get Settings>** and enter voice mail number (supplied by network operator), then you can view the voice mails by activating the call forwarding function.

To adjust the volume

❖ Adjust the volume:

- While on a call, click  to adjust the volume.
- While on a call, press  to adjust the volume.
- ❖ Adjust the volume of ringtone or other reminders:

On non-phone screen, click . Then you can choose to tap  (to adjust the ringtone volume) or  (to adjust the phone volume, including reminders and MP3). Select [Off] to mute the volume. When you finish your settings, click the blank area beside the volume box to save your settings.

 Caution:

1. If vibrate mode is chosen, the phone will display an icon  on the Status Bar.
2. You can adjust the phone volume only in the process of a call. Besides it, to adjust the volume is to adjust volumes for ringtones, reminders and MP3.

● Answering or rejecting a call

Answering or rejecting an incoming call

- Click <Answer> to pick up the incoming call. If your phone is connected with earphone, you can press the answer key on the earphone to answer the call.
- Click <End> to reject the call. If your phone is connected with earphone, you can hold down the answer key on the earphone to reject it.

Ending a call

Press  or click  on the Phone Screen to end a call.

● In-call options

Call Holding (requires network support)

There comes a new call while on a call, your phone will remind you. Then, you can decide to reject or answer the new incoming phone. If choose to answer, you can switch between two calls or three calls.

- (1) Select the second call to answer and keep the first on hold;
- (2) To end the second call and back to the first one, click  or press .

Switching between two calls (requires network support)

Select <Hold> and click <Switch> to switch between two calls.

Making a conference call (requires network support)

- (1) Keep the first call and to dial or answer the second call.
- (2) If the conference connection succeeds, the word “**Conference**” will appear on the upper part of the Phone Screen.
- (3) To add more to your conference call, click the <Keyboard> button and enter the numbers.

Viewing notes while on a call

You can view notes when you are on a call dialed from keypad, Contacts, Call History, Speed Dial or SIM Card Contacts. When the note is finished, it will be annexed to this call and be saved at [Call History].

Creating notes:

- (1) On the Phone Screen, click <Note> button on the inferior of the screen.

(2) Enter the contents and click <ok> to save.

Viewing notes:

On call history list, click and hold down your desired call history. Such  indicates that this history contains one note. Click [View Note] or [Start→Programs→Notes] to view.

Mute while on a call

You can turn off the microphone so that you can hear the caller but the caller cannot hear you. On the Phone Screen, click <Mute> to activate the function; click again to deactivate.

 Caution:

Call waiting, call holding, and conference call depend on the network supply. Contact your service provider for additional information.

4. Call History

● Call list

On the Today Screen, click <Phone> to enter the Phone Screen, and then tap <Call History> to view the call records.

Viewing detailed call history

On the call history screen, select [Menu→Filter]. Below are all types of the calls and their corresponding icons:

All Calls: Includes all outgoing calls and incoming calls.

Missed  : Displays missed calls.

Outgoing  : Displays all dialed calls.

Incoming  : Displays all answered calls.

Select the desired entry from call history, click it by your stylus, the phone will automatically

display all details, including time, date, etc.

Select one entry, click it by the stylus and hold down to choose the following options: [Delete], [Send Text Message], and [Call].

Save contacts from Call History

- (1) On the Call History Screen, click the entry and hold down to select [Save to Contacts].
- (2) Enter the details of the contact, and click <ok> to save it.

Call Timers


- (1) On the Call History Screen, select [Menu→Call Timers] to view.
- (2) Click <Reset>. Records here will be initialized.

5. Input Modes

You can enter letters and words by using the touch screen. N810 has four ways to input: Block Recognizer, Keyboard, Letter Recognizer, and Transcriber.

● Enter Screen

Below is the layout of the enter screen.

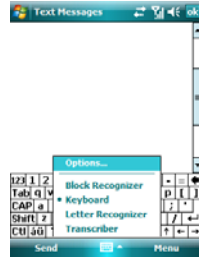

Switch the input modes

Click ▲ beside the input icon to choose your desired input mode.

● Block Recognizer

- (1) Click ▲ to choose [Block Recognizer].
- (2) Enter letters on the left letter frame; enter numbers on the right number frame.
- (3) Click ? to see how to input distinguishable letters and numbers.



● Keyboard

- (1) Click ▲ to choose [Keyboard].
- (2) Use the stylus to tap the letters and words.
- (3) Click  to hide the keyboard.



● Letter Recognizer

- (1) Click ▲ to choose [Letter Recognizer].
- (2) Write capital letters on the left frame; lowercase on the middle frame; and numbers on the right frame.
- (3) Click  to see how to input distinguishable letters and numbers.



● Transcriber

- (1) Click **▲** to choose [Transcriber]. There will be a transcriber intro box, click <ok>.
- (2) Use the stylus to write letters or words on any place of this screen. Please stop for a second when you finish one letter, as the below figure:




For more, please click  to see help information.

● Drawing on the screen

Select [**Start**→ **Programs**→ **Notes**] to open any note, and click [**Menu**→ **Draw**] to draw directly on the screen.

Once you draw one line cross three lines on the screen, there will appear one frame. Then any drawing within the frame will be defaulted as

one part of it. If the drawing hasn't crossed three lines, it will be defaulted as the contents of writing. Below is the figure of the frame:

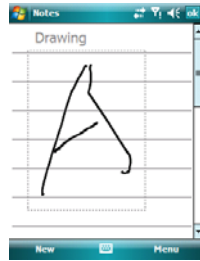

Editing the drawing

Before you edit the drawing, select it first.

- (1) Keep tapping on the drawing by the stylus till the selecting dots appear. Select several drawings, deactivate **[Draw]** and drag your desired drawings.
- (2) Click and hold down the selected drawings,

and then select to edit or click **<Menu>** to cut, copy and paste. To adjust the size of the drawing, deactivate **[Draw]** function, and then drag the selected dots toward the outside of the drawing.

To zoom the drawing, please select **[Menu→Zoom]**.

6. Settings

You can adjust the phone settings according to your own favour, please select **[Start→Settings]** to set.

● Personal Settings

Select **[Start→Settings→Personal]** to choose to adjust the following settings:

Owner Information

- (1) Select **[Start→Settings→Personal→Owner Information]**.
- (2) Enter your own information on **[Identification]** screen.
- (3) Enter other information needed to display while switching on the phone on **[Notes]** screen.

 **Notice:**

Only when you enter [Option] screen and tap [Notes] on it can your device display the information you input on [Notes].

- (4) On the **[Notes]** screen, click **[Identification information]** and **[Notes]**. Thus if you lose your phone, people who pick up it will have a clue to contact you.

Today

Select **[Start→Settings→Personal→Today]**.

Change the background

On the **[Appearance]** screen, you are able to set a theme for your device. Following are the setting methods:

- (1) Click **[Use this picture as the background]** if you want to customize the background.
- (2) Click **[Browse]** to select more files to be

the background.

- (3) Click **<ok>** to save the setting.

If you want to beam your favourite theme to your friends, please select the theme and click **[Beam]** on the **[Appearance]** screen.

Customize the displayed information

- (1) Select **[Start→Settings→Personal→Today]**.
- (2) On the **[Items]** screen, click the items you want to display on the Today Screen.

Sounds & Notifications

Enable to change the sounds types:

- (1) Select **[Start→Settings→Personal→Sounds & Notification]**.
- (2) On the **[Sounds]** screen, you can choose to activate the sounds for events and programs.
- (3) On the **[Notifications]** screen, select your

desired event and its corresponding notification way. There are several kinds of notifying methods available, for instance, play sound, display message on screen, flash light, and vibrate.

More sounds

You can download more sounds from your PC via USB cable, and set them as the ringtone or notification sounds.

- (1) Insert the USB cable to the USB port on your PC to connect your phone to your PC. Active Sync will be activated automatically.
- (2) Select **[My Computer→Mobile Device→My Windows Mobile-Based Device→Application Data→Sounds]**. You can copy your favourite ringtones to the file.

Buttons

You can customize the buttons functions to open the most frequently used programs.

Program Buttons

- (1) Select [**Start→Settings→Personal→Buttons→Program Buttons**].
- (2) Select one button, and choose a corresponding program on [**Assign a program**] box.
- (3) Click <ok> to save your settings.

Up/Down Control

You can customize the way your Up/Down control repeats.

Phone ring and Security

Select [**Start→Settings→Personal→Phone**] to open the setting screen.

You can choose the ring tone and ring type.

You can use PIN code to protect your phone preventing others to use it without your permission. The original PIN code is supplied by the GSM operator.

- (1) Select [**Require PIN when phone is used**], input the correct PIN code and click <Enter>.
- (2) If you need to change PIN code, please click [**Change PIN**].

Call Barring

- (1) Select [**Start→Settings→Personal→Phone**].
- (2) Select [**Services→Call Barring**], click [**Get Settings...**]. After the phone finish to read settings from the network, you can customize it. Click <ok> to save the settings.

Caller ID

- (1) Select [**Start→Settings→Personal→**

Phone].

- (2) Select [**Services**→**Caller ID**], click [**Get Settings...**]. After the phone finish to read settings from the network, you can customize it. Click <ok> to save the settings.

Call Forwarding

- (1) Select [**Start**→**Settings**→**Personal**→**Phone**].
- (2) Select [**Services**→**Call Forwarding**], click [**Get Settings...**]. After the phone finish to read settings from the network, you can customize it. Click <ok> to save the settings.

Call Waiting

- (1) Select [**Start**→**Settings**→**Personal**→**Phone**].
- (2) Select [**Services**→**Call waiting**], click [**Get Settings...**]. After the phone finish to

read settings from the network, you can customize it. Click <ok> to save the settings.

Voice Mail and Text Messages

- (1) Select [**Start**→**Settings**→**Personal**→**Phone**].
- (2) Select [**Services**→**Voice Mail and Text Messages**], click [**Get Settings...**]. After the phone finish to read settings from the network, you can customize it. Click <ok> to save the settings.

Fixed Dialing

If the network operator and your SIM card support this function, you can restrict the phone numbers you dial.

If activate the function, your phone can only call the numbers saved at fixed number list. Besides, the first time you switch the phone on if you activate the function, you need to enter

the PIN2 Code; and if you don't switch off the phone, you don't need to enter it the next time to set.

- (1) Select [**Start**→**Settings**→**Personal**→**Phone**].
- (2) Select [**Services**→**Fixed Dialing**], click [**Get Settings...**]. After the phone finish to read settings from the network, you can choose to activate it or not. Click <ok> to save the settings.

Network

- (1) Select [**Start**→**Settings**→**Personal**→**Phone**].
- (2) Select [**Network**] to do the corresponding settings.

Menus

The [**Start**] menu only allows 7 programs. To add programs you use most frequently to the [**Start**] menu, please follow the below steps:

- (1) Select [**Start**→**Setting**→**Personal**→**Menus**] to enter the menu screen.
- (2) Drag the scroll bar to choose different menus. The selected will appear on the [**Start**] menu, and the others will appear on [**Start**→**Program**].
- (3) Click <ok> to save the settings.

Input

Select [**Start**→**Setting**→**Personal**→**Input**]

- (1) On the [**Input Method**] screen: Click your desired input method and then to do the corresponding settings.
- (2) On the [**Option**] screen: Choices like voice recording format, Default zoom level for writing, are available here. The setting will be applied to any written or recorded programs of N800, but not to the contents you input on the Enter Screen.
- (3) You can also change the settings on the

Enter Screen. Click ▲ beside the input icon and select [Options] to set.

Lock

Select [Start→Setting→Personal→Lock].

On the [Password] screen:

- (1) Click [Prompt if device unused for], and set the time limit.
- (2) Select password types: [Simple PIN] or [Strong alphanumeric]. The strong one requires 7 characters, including capital letter, lowercase, number and punctuation.

On the [Hint] Screen:

- If you enter the password wrongly more than 5 times, the password hint will appear.



Caution:

Forgetting you password, you need to reset the phone to the original state. But all data and installed applications will lose.

● System Settings

About

Version: Displays relevant information of this device.

Device ID: If other devices have the same device name with your phone, and you cannot connect to the net, please change your device name.

Copyrights: Provides the declaration of the copyrights.

Backlight

Select [Start→Settings→System→Backlight] to adjust the backlight settings.

Certificates

Select [Start→Settings→System→Certificates].

Use [Personal] to positively identify yourself to others.

Use [Intermediate] to positively identify intermediate certification authorities.

Use [Root] to positively identify root certification authorities.


Clock & Alarms

Select [Start→Settings→System→Clock & Alarms].

Time: [Home] or [Visiting] is available for you to choose in order to give you a convenient way to check the accurate local date and

time while traveling.

Alarms: click the alarm icon to adjust the reminding mode of the alarm, including sound, flash light, and vibrate. Click time to adjust the alarm time. Click [Description] to enter the prompt information you want to display. Select the day you need the alarm and click <ok> to save, please see the following picture:

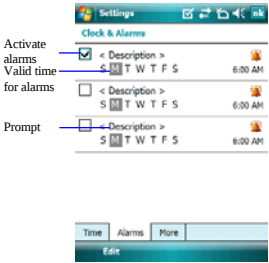

More: Select to decide whether to display the clock on the title bar in all programs.

To change the format of the displayed date and time, please select [**Start→Settings→System→Regional Settings**].

Customer Feedback

Select [**Start→Settings→System→Customer Feedback**]. You can choose to participate in the Customer Experience Improvement Program to better Windows Mobile software.

Encryption

Select [**Start→Settings→System→Encryption**]. Click<**Encrypt files placed on storage cards**> to encrypt files placed on a storage card. These files are readable only by this Windows Mobile-based device.

Error Reporting

Select [**Start→Settings→System→Error Reporting**] to activate it.

External GPS

With the support of GPS receiver, your device is able to reveal your location accurately on the map. The GPS receiver of your device has two types, the installed and the built-in.

Select [**Start→Settings→System→External GPS**] to set the GPS.

Select [**Start→Help→Contents→GPS**] to view the details.

Memory

Select [**Start**→**Settings**→**System**→**Memory**].

Main: Displays the memory information of the data storage and of the program storage.

Storage Card: Displays the memory state of the storage card or USB.

Running Programs: Displays a list of the running programs. Select a certain program from the list and click <**Activate**> to run, click <**Stop**> to stop the program.

If the running state of the program is unstable or the program memory is not enough, you may need to cease the program.

Power

(1) Select [**Start**→**Settings**→**System**→**Power**].

(2) **Battery:** Displays the remaining battery power.

(3) Advanced: [**Turn off device if not used for**] will let the phone turn to sleep mode after a corresponding period. [**On external power**] means the phone is being used while charging.

Regional Settings

Select [**Start**→**Settings**→**System**→**Regional Settings**] to adjust the settings of [**Regional**], [**Number**], [**Currency**], [**Time**] and [**Date**].

Remove Programs

Select [**Start**→**Settings**→**System**→**Remove Programs**] to remove your desired programs, and then click <**Remove**>.



Caution:

You are only allowed to remove programs installed by yourself. The original programs installed on the factory are irremovable.

Screen

Select [**Start**→**Settings**→**System**→**Screen**].

General: You can adjust the screen orientation and align the screen if it is not responding accurately to stylus taps.

Clear Type: Smoothes the edges of screen fonts for many programs.

Text Size: Adjusts the text size.

Windows Update

This function enables your phone to update its programs.

Select [**Start**→**Settings**→**System**→ **Windows Update**], and then follow the instruction to check and download the updated applications.

● Connections Setting

Beam

After choosing <**Receive all incoming beams**>, you are allowed to receive the incoming beam from other devices..

Connections

For the details, please see "Internet Explorer" on page 75.

Network Cards

You can choose different network adapters and adjust the settings.

USB to PC

Click <**Enable advanced network functionality**>, and then you can change the type of USB connection to help to solve the connecting ActiveSync problems.

7. Personal Manager

The N810 includes **[Contacts]**, **[Calendar]**, **[Tasks]** and **[Notes]**, etc. You are allowed to use these programs alone or together. For example, when you are editing a short message, you can add the e-mail address from Contacts.

You can click the program icons on the **[Start]** menu to switch between different programs.

● Contacts

The **[Contacts]** list will give you a convenient way to access to your desired information.


All the contacts' information is saved on SIM Card or on the phone.

❖ Contacts saved on SIM Card: Only includes the name and one number (its memory size depends on the type of the SIM card).

❖ Contacts saved on the phone: On the contact list of the phone, you can not only record information about the contact's name, different types of numbers, e-mail address, and home address, but also save the contact's personal information, like the birthday, anniversary, name of the spouse and children.

Creating new contact on the phone

- (1) On the Today screen, select **[Contacts→New→Outlook Contact]** to enter the **[details]** option shown as the below:

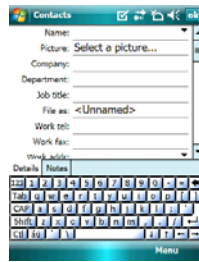

- (2) Input the name and other information of the contact. Click **<ok>** after you finish your editing to back to the contacts list.
- (3) You can also add notes to the contact by selecting [**Contacts**→**New**→**Outlook Contact** →**Notes**].

Creating new contact on SIM card

- (1) On Today screen, select [**Contacts**→**New**→**SIM Contact**].
- (2) Input the contact's name and one phone

number.

- (3) Click **<ok>** to back to the contacts list.


Viewing contacts

On the Today screen, select **<Contacts>** to enter the contacts list. It includes all contacts saved on SIM card and on the phone.

- ❖ On the contacts list, an icon will appear on the right side of the contact's name, indicating the type of the saved number. If it is a work number, "w" will appear; if it is a home number, "h" will appear after the name; if is a mobile phone number, "m" will appear. But SIM contacts only have an icon of the SIM card.
- ❖ Click your desired contact to view its detailed information.

Searching contacts

On the Today screen, select **<Contacts>** to enter the contact list as shown below:

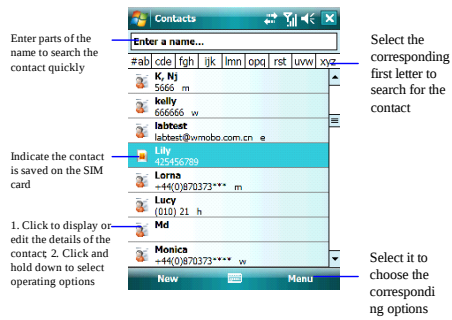

Speed Dial

The smart dial enables you to find your desired contact fast.

On the Today screen, click <Phone> to enter the Phone screen. Directly click the letter or the corresponding numeric key of the contact's name. After the phone lists the matched contact, click your desired one, and dial.



Changing list viewing mode

Changing the list viewing mode of Contacts, on the Contact screen, select [Menu→Option] to enter the List View Settings screen. Choose your desired mode by clicking the corresponding check box.


Changing display type of Contacts

On the Contacts screen, select [Menu→Filter] to choose the display type of contacts, including [All Contacts], [Recently Viewed], [No

Categories] and [More...].

Editing contacts' information

If you want to change contact's information, enter the detailed screen of the contact, and select [Menu→Edit] to start editing, as shown below:

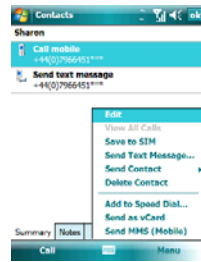

Deleting contacts

On the Today screen, click <Contacts> to enter the screen. Choose one contact, and select

[Menu→Delete Contact], click <Yes> to delete it.

Tasks

This function will keep a track to all your tasks which can be displayed on the Today screen.

Creating a new task

- (1) Select [Start→Programs→Tasks→Menu→New Task].
 - (2) Edit the subject and contents of the task; click <ok> to save it.
- ❖ Categories: Grouping the tasks. Click [Categories] and select one. To create a new category, select <New> and click <ok> to save it.
 - ❖ Notes: On the Notes screen, you can add other information of the task and click <ok> to save it.

- ❖ Speed create new task: On the Today screen, select the bar displaying tasks to enter the Tasks screen. Click **[Tap here to add a new task]**, and input the contents.
- ❖ To set reminders for new tasks: Select **[Menu→Options...]** and click **[Set reminders for new items]**.
- ❖ Editing the task: Select the task and click **<Edit>** to change the information.

● Notes

This function allows you to track your ideas, drawings and phone numbers on the written or recording form.

Creating notes

- (1) Select **[Start→Programs→Notes→New]**.
- (2) You are able to create a note by writing, drawing, typing or recording.

- (3) You can also insert date to the note. First, make sure you don't select any thing or any drawing; then, click and hold down on any places of the Note screen; finally, select **[Insert]**.

Methods for recording

- (1) Select **[Start→Programs→Notes]** to open a note.
- (2) Select **[Menu→View Recording Toolbar]**.
- (3) Keep the microphone close to your mouth or other sounds.
- (4) Click  to start recording and you will hear "Beep" once. Click  to stop and you will hear "Beep" twice. Such  represents a piece of recording.
- (5) Click  on the file explorer or notes with records to play the record. Click  to adjust the volume.

Adjusting the voice recording format

Select [**Menu**→**Options...**→**Global Input Options**→ **Options**] to adjust the voice recording format.

Rename or move notes

If you want to rename the note, select [**Menu**→**Tools**→ **Rename/Move...**] to operate.

Select note template

- (1) On the note list, select [**Menu**→**Options...**].
- (2) Select one from the check box of [**Default template**].

Send notes via e-mail

On the note list, click and hold down one note or one piece of record, select [**Send...**].

● Calendar

The function will arrange appointments for you, including meeting and others. You can select one of the following display modes: <**Day**>, <**Week**>, <**Month**>, <**Year**>, and <**Agenda**> to check your appointment. Besides, you can also set sounds or other methods to remind you. The Today screen will list appointments occurred today.

Select [**Start**→**Calendar**] to enter the calendar list as the below shown:



Creating a new appointment

- (1) Select [**Menu**→**New Appointment**] to create a new appointment.
 - (2) Input the details of the appointment.
 - (3) Click <ok> to save it.
- ❖ Click [**Starts**] and [**Ends**] to change the date and time.
 - ❖ To add note, please select [**Notes**] to input.
 - ❖ To set reminders, please select [**Remind me**]

on the check box of [**Reminder**].

Editing appointments

- (1) Select one appointment and enter its viewing screen, and then select [**Menu**→**Edit**] to start editing.
- (2) Click <ok> to save it.
- (3) To activate reminder function for new appointments, please select [**Menu**→**Tools**→**Options...**→**Appointments**→**Set reminder for new items**] from the Calendar screen.

Sending meeting notification

You can set meetings with Outlook E-mails users by using Calendar.

- (1) Create a new appointment and enter contents of the meeting.
- (2) Select [**Attendees**] to add attendees from the list of the contacts' e-mail address.

- (3) Click <ok> to save it.
- (4) The meeting notification will be created automatically and will be sent to the attendees at the time you synchronizing with your PC. The contents you input on [Notes] will be sent out together.

**Notes:**

The available contacts for attendees are contacts saved with e-mail address.

● Search

This function can help you to find the files you need quickly.

- (1) Select [**Start**→**Programs**→**Search**].
- (2) Enter key words on the check box of [**Search for**].
- (3) Select the data type on the check box of [**Type**] to improve the searching efficiency.

- (4) Click <**Search**> to find matched files or folders.
- (5) If you want to find out data which requires huge memory, please select [**Larger than 64 KB**] on the check box of [**Type**].

● Calculator

The calculator function can perform standard mathematical operations such as addition, subtraction, multiplication, and division.

Select [**Start**→**Programs**→**Calculator**].

● Help

Select [**Start**→**Help**] to view the information about the using method of the N810.

8. Messaging

With this function, you can create, edit, send and receive SMS, MMS and Outlook E-mails. E-mails are sent via the e-mail address which is supplied by ISP (Internet Service Provider) or E-mail service provider. SMS and MMS use the phone number as the information address which are sent and received by GSM network operator.



Notes:

When your phone is using ActiveSync to synchronize with your PC, you are not allowed to surf on the internet via GPRS, send or receive MMS and Internet e-mails.

Select [**Start**→**Messaging**] to enter the Messaging screen. Click ▼ on the Text Messages screen to switch between SMS, MMS and Outlook E-mail.

● Outlook E-mail

The mail system can receive e-mails from the Internet, and from Exchange or Outlook while synchronizing with your PC by ActiveSync. You are able to send and receive mails sent or received via POP3 and IMAP from the Internet.



Caution:


If you are using MMS and E-mail functions, please select [Start→Settings→Connections→Connections] to choose the corresponding connections.

New E-mail account

- (1) Select [**Start**→**Messaging**→**New E-mail Account**] and input the e-mail address.



- ❖ If you click **[Try to get e-mail settings automatically from the Internet]**, tap **<Next>**. The phone will automatically connect to the E-mail server and start to download necessary connection settings.
- ❖ When the phone cannot find the account you entered, click **<Next>** to start manual setup.

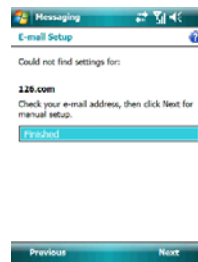

- ❖ When the account is found, click **<Next>** to continue.



- ❖ If you don't select **[Try to get e-mail settings automatically from the Internet]**, click **<Next>** to start manual setup.
- (2) Select the needed E-mail service provider and enter your name. Click **<Next>**.
- (3) Input the title of E-mail incoming server and select the account types your e-mail service provider supports. Click **<Next>**.

Messaging
E-mail Setup

Incoming mail server:
pop.153.com
If unsure, check with your provider to get POP/IMAP settings.

Account type:
POP3

Previous Next

- (4) Enter the account name and password, and then click **<Next>**. If you select **[Save Password]**, you won't be required to enter your password the next time you log in your e-mail account. But if you lose your phone, others who pick it up will have your account.

Messaging
E-mail Setup

User name:
lucy
Example1: kevin, domain@kevin, kevin@domain.com, etc.

Password:


☒ Save password

Previous Next

- (5) Input the title of the e-mail outgoing server, and click **<Next>**. Now most free e-mail requires SMTP authentication. If your outgoing server requires it too, you are suggested to click **[Outgoing server requires authentication]** to ensure the successful e-mail sending.



- (6) Select **[Automatic Send/Receive]**, and click **<Finish>** to complete the setup.

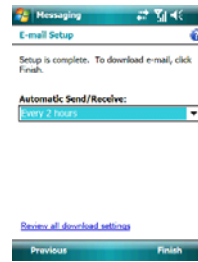

Finishing all these steps, select the account. Your new account will appear on the messaging menu. Then you are able to connect to your e-mail server.

Switching accounts

Select **[Menu→Go To]** to choose the account.

Deleting accounts

Select **[Start→Messaging]**, click **▲/▼** to choose the account you want to delete. Select

[Menu→Delete→Yes]. But you cannot delete accounts of SMS and MMS.

Editing e-mails

- (1) Select [Start→Messaging], and click to enter the account you want to send out the mail.
- (2) Select [Menu→New].
- (3) Enter the recipient's e-mail address on the check box of [To], or click it to choose the recipient from the contacts list.
- (4) Input the subject and contents.
- (5) To send out an annex, click [Menu→Insert] to choose picture, voice note or file to be the annex.
- (6) If you want to send out a voice file, you can record one by inserting [Voice Note] and manually add it as the annex.
- (7) When you finish editing the mail, click <Send> to send it out, or click <ok> to

save it on the draft.

Receiving e-mails

- (1) On any folder of the account, click [Menu→Send/Receive].
- (2) When connecting to the e-mail system, mails saved in Outbox will be sent out automatically; meanwhile, new incoming e-mails will be automatically downloaded to Inbox.
- (3) By the Default Settings, the inbox will download each e-mail without its annex. You can adjust the setting on the e-mail server attribute. If you want to read the whole mail, you have to mark the incoming e-mail and connect to the e-mail server or synchronize again.



Caution:

The moment you send out your e-mail the phone is connected with the e-mail server, the mail will be

sent out right away. If it is offline, the mail will be saved on the Outbox, and be sent out automatically at the next time the phone is connected to the e-mail server or synchronizing with your PC.

● MMS

Only when your SIM card supports this function can your phone receive and send MMS (Multimedia Messages). As for the price of the MMS service, please contact with your GSM network operator.

Configuring MMS settings

[**MMS Configuration**] will list the available MMS server for you. [**About**] will list all program information concerning with MMS.

To successfully send and receive MMS, please set accurately on [**MMS Configuration**].

- (1) Select [**Start→Messaging→MMS**]. Choose any account on the Messaging screen and select [**Menu→Tools→Options...→MMS**] to enter the MMS Configuration screen. There are four options: [**Preferences**], [**Blacklist**], [**Servers**], and [**About**]. Select [**Servers**] and click [**CmwapMMSC**] to set.

- (2) Select [**Preference**] option:

❖ **Retrieve messages immediately:** Usually you will receive a notification of an incoming MMS. If you click this option, the phone will automatically download new MMS.

❖ **Confirm to retrieve messages while roaming:** Selecting it, your phone will not have a corresponding prompt of downloading a new MMS while roaming.

❖ **Save sent messages:** Save sent MMS.


❖ **Allow read report:** You will receive a report that the recipient has received and read the MMS you sent.

❖ **Disconnect network connection after**

MMS: After sending or receiving a MMS, the phone will disconnect with GPRS.

❖ **Attempts before giving up:** The option allows you to set the times of attempts before giving up sending MMS.❖ **Phone resolution:** Select the phone resolution you want to send. To choose a resolution lower than the original resolution will shorten the sending or receiving time.**Editing a MMS**

MMS is formed by different kinds of slides. Each slide can be picture, video clip, audio clip, and text. Please select [Start→Messaging→MMS→Menu→New]. The screen will not be blank. Default template pictures will appear. If you want to start editing from a blank screen, please click [Always choose custom] and select [Options...] to enter the below screen:

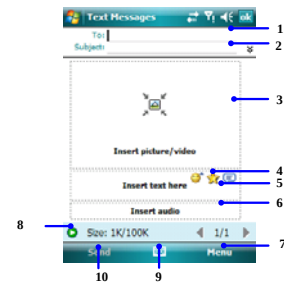

1. Enter the subject.

2. Click the icon beside the [Subject] check box to select [Cc] and [Bcc].

3. Click to choose the picture or video clip you want to insert.

4. Click to choose your favourites website, and then click <Select> to insert.

5. Click to enter text.

6. Click to choose the video clip you want to

insert.

7. Menu: Includes options like **[Add recipients]**, **[Insert Media]** etc.

❖ **Add Recipient...:** Enter the Contacts screen to choose the recipient. You can choose to send the MMS to several recipients, in other words, you can select several contacts.

❖ **Insert Media:** Select to insert **[Picture/Video]**, **[Audio]** or **[Text]**.

❖ **Remove Media:** Select to remove **[Picture/Video]**, **[Audio]** or **[Text]**.

❖ **Slides:** Provides **[Insert Slide]**, **[Delete Slide]**, and **[Organize Slides...]**.

❖ **Template:** Includes **[New From Template...]**, **[Save as Template]** options.

➤ **New From Template...:** Use the default template to edit a new MMS.

➤ **Save as Template:** Save the editing MMS as a template.

❖ **Capture:**

➤ **Picture...:** Capture new pictures.

➤ **Video...:** Capture new video.

❖ **Attachment...:** Insert vCard, vCalendar or other files to the editing MMS.

❖ **Send via SMS...:** Change the MMS as SMS and send it out. But this operation only reserves the recipient and the text.

❖ **Cancel Message:** Cancel the new MMS and back to the previous menu.

❖ **Options:**

➤ **Background:** Select the background colour of MMS.

➤ **Text Layout...:** Decides where the inserted text will be.

- **Text Size:** [Small], [Normal] and [Large] are available for you to choose.
- **Text Colour:** Choose the text colour according to your favour.
- **Text Background:** Choose the colour of the text background.
- **Send Options...:** You can adjust the settings of [Delivery], [Expiration], [Priority], etc.

8. Click to preview MMS.

9. Select the input mode.

10. Click <Send> to send the current MMS.

● SMS

Before you send a text message, your phone must store the accurate service center number supplied by GSM network operator.

(1) On the Today screen, click <Phone> to

enter the phone screen, and select [Menu→Options...→Services→Voice Mail and text Messages]. Click <Get Settings...>.

(2) Enter the service center supplied by GSM network operator and click <ok>.

Editing a Text Message

(1) Select [Start→Messaging→Text Messages→Menu→New] to open the text message editing screen.

(2) Insert one or several phone numbers on [To] check box, using semicolon to separate the numbers; or select [Menu→Add Recipients] to open the contacts list.

(3) On the text box to enter the contents, or select [Menu→My Text] to insert the default text.

(4) Click <Send>.

- (5) If you want to insert your signature after each SMS, click [**Menu→Tools→Options...→Accounts→Signatures...**] on the Inbox screen.
- (6) Choose [**Text Messages**] on [**Select an account**] box. Click [**Use signature with this account**] and enter the signature on the text box. If you want to use signature when replying and forwarding messages, click [**Use when replying and forwarding**].
- (7) If you want to delivery notification, please click [**Menu→Tools→Options...→Accounts→Text Messages**], and click [**Reuest delivery notifications**].

● **MSN Messenger**

MSN Messenger gives you convenience to chat with your friends at anytime or anywhere.

Select [**Start→Programs→Messenger**].

Functions of Messenger

- ❖ View the online list
- ❖ Send and receive MSN messengers
- ❖ Chat with groups of the contacts
- ❖ Inform friends your online state
- ❖ Make your state invisible to others or forbid them to send messages to you

You need a Microsoft Passport account to use MSN Messenger. If you already have an account, you still need:

- (1) Set an account on MSN Messenger.
- (2) Log in MSN Messenger.

Setting account

You have to set the account so as to use MSN Messenger. You need a Microsoft Passport or Hotmail account. Besides, before you use it, make sure that the phone is connected to the

Internet.

- (1) Select [**Start→Programs→Messenger**].
- (2) Select [**Menu→Options→Messenger**] on the MSN Messenger screen.
- (3) Enter your display name.
- (4) Click [**Update all contacts display name automatically**].

Log in and Log on

- (1) Click anywhere on the screen when you log in and follow the prompts to log in.
- (1) Select [**Menu→Log on**].

9. Office Mobile

● Word Mobile

Word Mobile will provide the users convenience to copy documents, cooperating with Microsoft Word on your PC. You can use it to create new documents or copy Word documents from PC to this device.

You can also use Word Mobile to create every kind of documents, like letter, meeting notes, memo, etc.

Creating documents

- (1) Select [**Start**→**Office Mobile**→**Word Mobile**→**New**].
- (2) There will appear a blank document. If you've selected the default mode, the document will be displayed in a given template format. You can only open one document once a time. If you open the

second document, the system will save the first one automatically. You are able to save or use documents of different formats, including <.txt>, <.doc>, <.dot>, and <.rtf>, etc.

- (3) On the editing screen, click <**View**> to choose [**Toolbar**], [**Wrap to Window**], and [**Zoom**] functions.
- (4) Word Mobile includes one corresponding document list saved on the phone. Click the list to open the document; click and hold down one document, you can enter to choose operations like [**Rename/Move...**], [**Delete**], [**Create Copy**], [**Select All**], [**Send...**], [**Beam File...**].
- (5) For more information about Word Mobile, please select [**Start**→**Help**] to view.

Transferring documents

When transferring data, Word documents (.doc) and templates (.dot) created by Word 6.0 or updated versions on your PC will be transferred

as Word Mobile documents (.psw) and templates (.psw). Times to transfer the data including:

❖ **Synchronizing data**

❖ **Copying Word documents from your PC to the phone**

❖ **Incoming an e-mail with Word documents as the attachment**

While synchronizing or copying the document to your PC, Word Mobile documents will be transferred as Word documents. Transferring Word to Word Mobile, most simple text and paragraph format will be saved and displayed, but most formats will be lost or changed.

● Excel Mobile

Excel Mobile will provide the users convenience to copy documents, cooperating with Microsoft Excel on your PC. You can use it to create new documents or copy Excel

documents from PC to this device.

To create a new document, click [**Start**→**Office Mobile**→**Excel Mobile**→**New**], and a blank e-table.

You can use different formats, including Excel template (.xlt) and Excel Sheet (.xls), etc. to save the e-tables.



- (1) Excel Mobile includes one corresponding document list saved on the phone. Click the list to open the document; click and hold down one document, you can enter to

choose operations like **[Rename/Move...]**, **[Delete]**, **[Create Copy]**, **[Select All]**, **[Send...]**, **[Beam File...]**.

- (2) Excel Mobile provides the basic e-table tools, for example, filter, formula, and function. To display the toolbar, click **[View→Toolbar]**.

Using skills of Excel Mobile

While using big Excel Sheet, please pay attention to the below items:

- ❖ On full screen view, you are able to view the sheet as much as possible. Click **[View→Full Screen]**. To deactivate full screen mode, click **[Full Screen]** again.
- ❖ Display or hide items from the window, click **[View→Show]** to select your desired items.
- ❖ Freezing panes on the sheet. Choose your desired pane to freeze. Click **[View→Freeze Panes]**. You are able to freeze the pane on the top of the left side so as to make the

targets visible while scrolling.

- ❖ Splitting panes to display different area of the big table. Click **[View→Split]**, and then drag the split bar to your desired place. To remove the split bar, click **[View→Remove Split]**.

Transferring sheets

When transferring data, Excel sheet (.xls) and templates (.xlt) created by Excel 5.0/9.5 or updated versions on your PC will be transferred as Excel Mobile sheet (.pxl) and templates (.pxt). Times to transfer the data including:

- ❖ **Synchronizing data**
- ❖ **Copying Excel sheets from your PC to the phone**
- ❖ **Incoming an e-mail with Excel sheets as the attachment**

While synchronizing or copying the sheets to your PC, Excel Mobile sheets will be transferred as Excel sheets. Transferring Excel

to Excel Mobile, most simple text and paragraph format will be saved and displayed, but most formats will be lost or changed.

● PowerPoint Mobile

You can use PowerPoint Mobile to open or view slides of ppt or pps created by PowerPoint 97 or updated versions.

The briefing elements used by many slides, such as switching slides or animation are able to be show on this phone. If slides are set to be time play, the phone will automatically switch to the next slide when comes to the due time. Connecting to the web is also available here.

Functions PowerPoint Mobile doesn't support:

- ❖ **Notes:** Notes will not be shown on the slide.
- ❖ **Rearrange/Editing slides:** PowerPoint Mobile only available for you to view.

❖ **Document Types:** PPT documents created by versions before PowerPoint 97, and documents have attachments which are HTML websites of htm and mht formats.

Showing slides

- (1) Select [**Start→Office Mobile→PowerPoint Mobile**].
- (2) Click your desired slide on the list.
- (3) Click on the showing slide screen to forward to the next slide.
- (4) If the slide contents are set to be time play, the phone will automatically switch to the next slide when comes to the due time.

Stopping slide show

Click [**▲|→Stop slide show**].

Viewing different slides

If the slides haven't been set to time play, you

can switch to the next or previous slide manually.

- (1) Select [**Start→Office Mobile→PowerPoint Mobile**].
- (2) Open the slides.
- (3) Select [**▲|→Next/Previous**], or click [**Switch to Slides**] to choose the slides you want to view.

 **Caution:**

If you want to zoom in the scaling, you are not allowed to view other slides before you set it to the normal scaling. Select [Next/Previous], the phone will play the animation but not back to the previous slide or forward to the next slide.

10. ActiveSync

Microsoft ActiveSync can synchronize information on the phone with information on the PC via USB cable.



Note:

Before using ActiveSync, you shall install the ActiveSync software attached with the phone to your PC by following the instructions shown on the screen.

● Setting up



Caution:

1. *When you need to synchronize information of Contacts, Calendar, E-mails, Tasks, and Notes on the phone with your PC, first you have to ensure that your PC has installed Microsoft Office Outlook.*
2. *ActiveSync cannot synchronize with*

Microsoft Office Express, but only with Microsoft Office Outlook.

3. *While synchronizing, make sure that the phone has disconnected [Internet Sharing], otherwise, ActiveSync cannot connect automatically.*

Synchronizing with PC

- (1) First connect the phone to your PC by USB cable.
- (2) The PC will automatically activate Microsoft ActiveSync, and then the  located down on the taskbar on your PC will turn green. The Pocket PC Sync Setup Wizard will appear on your PC screen.
- (3) As the below picture shown, follow the instructions to set up synchronization between your PC and the phone.




- ❖ On the setup wizard screen, click <Cancel>, then you can only copy or delete files between your PC and the phone, and add or move programs on the phone, but cannot synchronize corresponding data.
- ❖ If you click <Next>, then it is able to synchronize information (Contacts, Calendar, E-mails, etc.) between your phone and the PC and to adjust the settings.



Caution:


If choose “Document” information type to sync, ActiveSync will create a folder named “<Device Name> My Documents” on the folder of “My Documents”. ActiveSync will sync all information saved in this folder with information saved in “My Documents” folder on your phone.

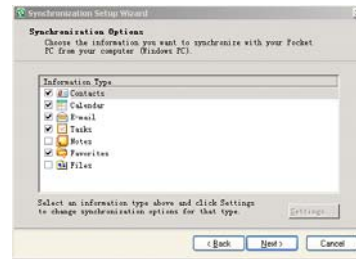

- (4) As the below figure shown, click <Finish> to complete the setup.



- (5) Save the settings and start selecting your desired items to sync.

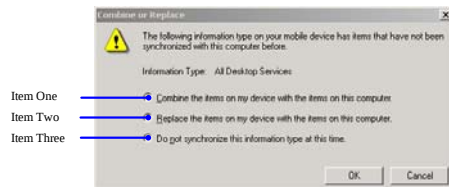

- ❖ **Item one:** Combine the items on your phone with the items on the PC.

❖ **Item two:** Replace the items on your phone with the items on the PC.

❖ **Item three:** Do not synchronize the information, and keep each device separately independent.

According to your selected item, click **<ok>** to complete the sync setup automatically. “Synchronizing” will appear on the main screen of Microsoft ActiveSync. And the information type you select will be synchronized automatically.

On the ActiveSync screen on your phone, select **<Sync>** to start; if you want to stop before completing the synchronization, click **<Stop>**.

Synchronizing with server

To set up your phone to synchronize directly with exchange server, you will need to get the server name and the server domain name form your service provider or system administrator;

you must also know your exchange user name and password.

- (1) Select [**Start**→**Programs**→ **ActiveSync** → **Menu** →**Configure Server**].
- (2) Enter the server address in the [**Server address**] box and click <**Next**> to continue.
- (3) Enter the needed server information in [User Name] box and [**Password**] box, and input the server's domain on [Domain] box. Click <**Next**>.
- (4) Select the information type you want to sync, and click <**Finish**> to end the setting. Click <**Sync**> to start synchronizing.




Note:

After setting up the connection between your phone and the PC, remote connection between server and the phone can be set up as well.

● Synchronization Information

You can adjust the information type and settings on ActiveSync on the PC. Click "Tools", and then select "Options..." to choose your desired information type. If the item you select is available, click "Settings" to choose the options you need. You can also click the right key of the mouse to adjust the settings directly.

While connecting, if the set information type is different between the phone and the PC, ActiveSync will automatically check the updated contents and start synchronizing. You can also click  **Sync** to sync and click  **Stop** to stop it.

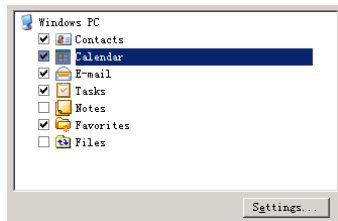

Synchronizing Outlook

Based on your selection, **Contacts**, **Calendar**, **E-mails**, **Tasks**, and **Notes** will be synchronized between your phone and the PC.

Synchronizing Favourites

Synchronize [**Favourites**] in Internet Explorer on your phone with [**Move Favoutites**] on the PC favorites.

Synchronizing Documents

Synchronize all documents in [**My Documents**]

folder on your phone with documents in [**<Device Name> My Documents**] folder on your PC.

Synchronizing Music, Video and Picture


You can combine ActiveSync and Windows Media Player on the PC to sync with music, video and picture files saved on the playing list of [**Windows Media**] on your phone. To do this, you have to set synchronization operation for these media files on Windows Media Player on your PC.

Only complete the below operations can your phone be able to start media synchronization:

- ❖ Install Windows Media Player10 or updated versions (requires Windows XP system or updated system).
- ❖ Use USB cable to connect the mobile device to the PC. Deactivate.

- ❖ Set up synchronization between the phone and Windows Media Player.

Select “**Media**” on ActiveSync screen after synchronizing, shown as the below figure, and click [**Setup must be completed**] to open Windows Media Player, and then choose “**Sync**” to start sync. You can click “**Set Sync**” to reset the media files you want to sync.

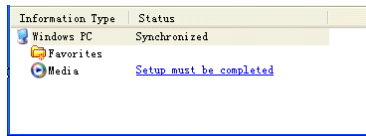

Caution:
ActiveSync cannot sync SMS and MMS.

● Installing software on the phone

You can install software on the phone from the PC through ActiveSync.

- (1) Set up connection between the PC and your phone through ActiveSync.
- (2) Run the installation driver on the PC.
- (3) Select the saved place for the installation on your phone, and install it. If there is a Micro SD card in the phone, you will be reminded to select the place to save.

ActiveSync will transfer files while synchronizing. For more details, please refer to ActiveSync Help on the PC.



Caution:
If you delete or change one item on the PC, the item on the phone will be deleted or changed the next time you synchronize, vice versa.

● Stopping Synchronization

Stopping synchronization will delete all synchronization and file transferring settings.

- (1) Disconnect your phone from the PC.
- (2) As the below figure shown, click "Mobile Device" on File menu, and choose your desired devices.



- (3) Click "Delete Mobile Device" on "File" menu.

- **ActiveSync Error Information**

If synchronization is unsuccessful through ActiveSync, error information will appear on the phone screen. When the error information appears, click the "Prompt" button on the PC and ActiveSync will display additional error information.

Some errors may influence ActiveSync operation. If you suspect there may be something wrong with ActiveSync you can select manual synchronization. After finishing manual synchronization, Auto Sync will reset. For more details, please refer to "**Synchronizing information**" in the ActiveSync introduction of PC.

11. Wireless Network



Caution:

1. Please make sure that your SIM card has relevant GPRS service before using the wireless network function. Contact with your GSM network operator for more details. If your SIM card has this function, and you're using it, the icon  will appear on the top of the screen.
2. You cannot log in webs, and send/receive MMS and Internet E-mails while synchronizing with your PC through ActiveSync.

● Creating Internet connection

- (1) Get the below information from your ISP:
 - ❖ Phone number of the ISP server
 - ❖ User name

❖ Password

- (2) Select [Start→Settings→Connections→Connections].
- (3) Create a new connection on [My ISP], and select [Add a new modem connect], and follow the instructions to operate.
- (4) [Cellular Line] and [Cellular Line (GPRS)] on the [Select a modem] box are available for you to choose.

For more, please click .


● Disconnect GPRS connection

Hold down  to disconnect GPRS. Or you can click its icon  to select [Wireless Manager] and click [Phone] to disconnect it.

● Creating WAP connection

- (1) Select **[Start→Settings→Connections→Connctions→Tasks→Edit my proxy server]**.
- (2) Click **[The network connects to the Internet]** and **[This network uses a proxy server to connect to the Internet]**. The Proxy server is 10.10.0.172.
- (3) Click **<Advanced...>** and select **[Wap]** to set its proxy server as 10.0.0.172, and its port as 9201. Let the user name, password, and domain blank.
- (4) Click **<New...>** on the My Work Network screen. Select **[Cellular Line (GPRS)]** on the **[Select a modem]** box. Click **<Next>** to enter the My Connection 1 screen. Enter "cmwap" on the **[Access point name]** box. Click **<Next>**, **<Finish>**, **<ok>** to complete the settings.
- (5) On the **[Connections]** screen, select

[Manage existing connections] from **[My Work Network]**. Hold down **[My Connection]** to select **[Connect]**.

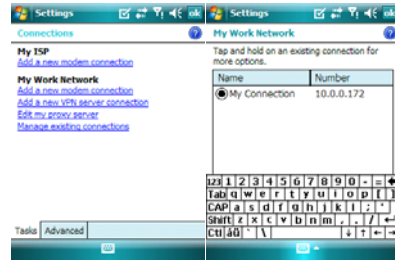


To switch to **[Internet Explorer Mobile]**, please enter "wsp: //" before the website, for example, `wsp://wap.montenrnet.com`.

To change the setting of the modem, please select **[Manage existing connections]** on the **[Tasks]** screen to choose your desired one, and select **[Edit]**. Follow the instructions to operate.

● Internet Explorer

- (1) On the Today screen, select **[Start→Internet Explorer]** to browse the webs.

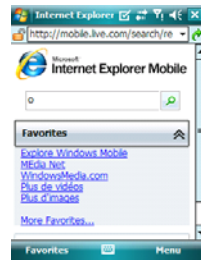

- (2) Enter the website on the address box.
- (3) Select  to connect.

The phone has several preset websites. You can select **[Favourites]** and click the website you need to connect.

● Internet Sharing

When the phone is connected with a PC, this function will make your phone as an external Modem to help the computer to browse the web wirelessly.



Note:

1. *To use your phone as an external modem requires the support of SIM card. For more, please contact with your network operator.*
2. *Please make sure that the installed ActiveSync is 4.5 version or updated versions.*

Creating Internet Sharing connection

- (1) Select [**Start**→**Programs**→**Internet Sharing**] to enter.
- (2) Select PC connection mode, [**USB**] .You can select your desired PC connection mode and network connection mode.
- (3) Connect your phone with the PC by USB cable. The PC will automatically find new device and install it.
- (4) After the installation, please check the network adapter has window mobile network card on the PC. If it has, the installation successes.
- (5) After selecting the network connection mode, select <**Connect**>. If "Connected" appears on the Internet Sharing screen, you are able to browse the webs wirelessly. If you want to disconnect it, select <**Disconnect**> on the Internet Sharing screen.
- (6) Then the phone is an external modem for the computer.

● Remote Desktop

With this function, you can log in the computers running terminal service ore remote desktop, and use all available programs on the PC via your own mobile device. For example, you can use your phone to access to all Word documents on your PC without activating Word Mobile. Select [**Start**→**Help**→**Contents**→**Connect**→**Use Remote Desktop Mobile to access a PC**] to view the operating details.

12. Entertainment

The N810 provides Windows Media Player, wonderful games and useful camera to rich your life.

● Windows Media

It is able to play audio files of Window Media or MP3 format (including asf, wma, wmv and mp3, etc.). To search the Windows Media formats your phone supports, please go to <http://www.windowmedia.com>.

To activate Windows Media Player on your phone, select [**Start**→**Programs**→**Windows Media**].

Add music files


- (1) Select [**My Computer**→**Mobile Device**→**My Windows Mobile-Based Device**→**My Documents**→**My Music**] on your PC, and copy your desired music files

to this folder.

- (2) On the Now Playing screen, select [**Menu**→**Library...**] to open it.
- (3) On the Library screen, you can click  to select the saved place.



- (4) Select [**Menu**→**Update Library...**], the phone will automatically update all saved music files to Library.

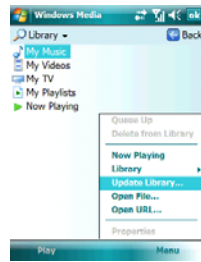

- (5) For more information about how to create and edit the playing list on your phone, please select **[Start→Help]**.

● Pictures and Videos

Pictures

You can use **[My Pictures]** to view the saved pictures of jpg format, send them to your friends, view picture slides, and set pictures as the **[Today]** background.

Searching and displaying pictures list

- (1) Select **[Start→Programs→Pictures & Videos]**.
- (2) Select **[My Pictures]**, and click ▼ to choose a folder.



Viewing pictures

- (1) On the Pictures screen, select **[Menu→Play Slide Show]** to view.
- (2) On the slide show mode, click anywhere

on the shown picture, the toolbar of slide show will appear. You can use it to suspend the slides show or change the show orientation.

- (3) Click  to forward or backward the showing slides.

Picture listing sequence

- (1) Select [**Start**→**Programs**→**Pictures & Videos**].
- (2) Select [**Date**] to choose the way picture sorted by Name, Date, or Size.

Deleting pictures

Hold down on the file name of the deleted pictures, and select [**Delete**] from the menu.

Editing pictures

You can cut, copy and paste jpg pictures.

- (1) Click the picture you want to edit, and

select [**Menu**→**Edit**] on the Pictures & Videos screen,

- (2) Click <**Rotate**> to rotate the picture on the editing screen.
- (3) To set the rotating orientation, click the picture on My Pictures screen, and select [**Menu**→**Options...**→**General**] to click [**Left**] or [**Right**] on [**When rotating a picture, rotate 90 degrees:**] box.
- (4) Select [**Menu**→**Crop**] to drag and choose the cropping area. Click anywhere on the picture to crop; click anywhere out side the picture to stop cutting.
- (5) Select [**Menu**→**Revert to Saved**] to cancel all the editing.

Setting pictures as Today Background

You can set any jpg pictures as Today background and set it on to display on anywhere of the Today screen, for example to adjust its transparency level.

- (1) Click your desired picture on **[My Pictures]**.
- (2) Select **[Menu→Set as Today Background...]**.
- (3) Select **[Transparency Level]** to set.

Setting slide show format

- (1) Select **[Start→Programs→Pictures & Videos]** to enter.
- (2) Select **[Menu→Options...→Slide Show]**.
- (3) Choose the slide show mode, portrait or landscape.

If you want to set the slides as the screensaver, please click **[Play screensaver when connected to my PC and idle for 2 minutes]**.

● Camera

The phone is equipped with a built-in 2 mega

pixel CMOS camera, supporting full screen shooting, bursting, and zooming, to help you to take splendid photos.

Capturing photos

- (1) To enter camera mode, select **[Start→Programs→Pictures & Videos→Camera]**, or on the Today screen, hold down  to enter the Capture Preview screen.
- (2) On the Capture Preview screen, press  to focus automatically. Color of the focusing frame turns from red to green, which means that the phone has finished focusing; then, you can hold down the button or press **[OK Key]** to take photos. All captured photos will be saved on the **[Start→Programs→Pictures & Videos]** list.
- (3) To view the captured photos, click **<Thumbnails>** to browse the photos. To enter Capture Preview screen during

browsing, click <Camera>.

Setting the capturing effect

On the Capture Preview screen, select <Menu> to do the following settings:

❖ **Video:** Switches the Capture Preview screen to the video Capture Preview screen.

❖ **Modes:** There are three modes available.

- **Normal:** Captures one image.
- **Burst:** Captures pictures in a sequence and the captured photos will be saved automatically.
- **Timer:** Starts to capture at the set time.

❖ **Brightness:** Several brightness levels are available for you to choose.

❖ **Resolution:** Several resolutions are available for you to choose.

❖ **Zoom:** Several zooming levels are available for you to choose.

❖ **White Balance:** The phone provides several options:

- **Automatic:** Select it in normal lighting condition.
- **Sunny:** Select it in strong lighting condition.
- **Cloudy:** Select it at cloudy days.
- **Fluorescent:** Select it in the state of fluorescent.
- **Incandescent:** Select it in the state of incandescent.

❖ **Flash:** You can choose to turn it on during capturing, or turn it off, or let the camera to adjust automatically.

❖ **Full Screen:** Switches to full screen to capture photos.

Saving settings

Select [Menu→Options...→Camera].

- ❖ **Type filename prefix:** Enter your desired filename prefix.
- ❖ **Save files to:** Saves files to main memory, or Storage card (appears only when the Micro SD card is inserted).
- ❖ **Still image compression level:** Three options available (High quality, Normal quality, and Low quality).

Capturing videos

Click <Menu> on the video Capture Preview screen to do the following settings:

- ❖ **Still:** Switches to the photo Capture Preview screen.
- ❖ **Brightness:** Several brightness levels are available for you to choose.
- ❖ **Quality:** The resolution for capturing video is

PC (240*320).

- ❖ **White Balance:** The phone provides several options:

- **Automatic:** Select it in normal lighting condition.
- **Sunny:** Select it in strong lighting condition.
- **Cloudy:** Select it at cloudy days.
- **Fluorescent:** Select it in the state of fluorescent.
- **Incandescent:** Select it in the state of incandescent.

- ❖ **Full Screen:** Switches to full screen to capture videos.

Video time settings

On the video Capture Preview screen, click [Menu→Options...→Video]. To add audio files to video clip, please click [Include audio

when recording video files]. To set the time for capturing video, please click **[Time limit for videos]** and select the time according to your necessity.

Browsing and deleting videos


- (1) Select **[Start→Programs→Pictures & Videos]**, and click the captured video file to view.
- (2) Click and hold down the video file you want to delete, and select **[Delete]**.
- (3) If **"Cannot delete 'XXX': There has been a sharing violation. The source or destination file may be in use"** appear on the screen, then you can delete the video file by the below methods:

❖ Select **[Start→Settings→System→Memory→Running Programs→Windows Media]**, and click **<Stop>**. Then back to the browsing videos screen to delete the file.


❖ Select **[Now Playing]** on the Playing screen of Windows Media. Click the video file you've browsed, and tap  to delete it. Then back to the Pictures & Videos screen, and select **[Delete]**.

● Games

Select **[Start→Programs→Games]**. You can see several kinds of exciting games which will make your life more interesting.

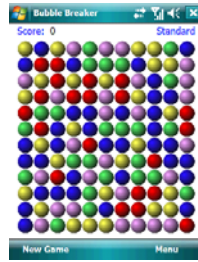Bubble Breaker

This is a game to clear bubbles of the same color. Click the connected bubbles of the same color twice to clear them. Keep clicking till no bubbles to be cleared.

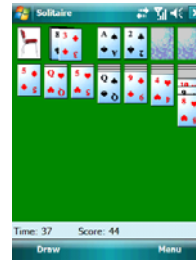Solitaire

Move the card from A to K to the blank places on the top right side by the rule of sort ascending and straight flush rules.

● Java

Select [Start→Programs→Java] to enter.

If your phone hasn't installed any Java applications, "No applications installed" will appear on the screen. Select <Download> to

download Java applications. Click <Menu> to do the below Java settings:

- ❖ **Java settings:** Set whether to activate the [Backlight Always on] function, or select the network type for the current Java program.
- ❖ **Java info:** You can view some relative information about the current Java program.
- ❖ **Exit:** Quit Java game screen.

13. File Explorer

Select [**Start** →**Programs**→**File Explorer**] to view, delete, and copy files from the phone or Micro SD card.

14. Micro SD Card

Micro SD card is the storage card inserted on the phone in order to enlarge the storage memory.

● Using Micro SD card

 **Note:**

Before using Micro SD card, you need to use the disc together with the phone and follow the instructions to install the ActiveSync software and USB driver.

Device→My Windows Mobile-Based Device→Storage Card] on your PC.

- (3) You can operate (create, copy, cut, paste, delete) files stored on [**Storage Card**].

 **Note:**

You'd better not delete the default system folders of your phone on the PC.

Installation steps

- (1) Insert the USB cable to the USB port on the PC, and connect with your phone.
ActiveSync will be activated automatically.
- (2) Select [**My Computer→Mobile**

15. GPS

● Introduction of GPS

This product is a set of self-navigation software installed in PDA (Personal Digital Assistant) or PC, with a city navigation map of large-scale as its display platform, which can provides several ideal routines and real time voice prompts to you based on your different necessities. You can easily locate your current position and the correct direction.

GPS

GPS (Global Positioning System) is a global wireless navigation system on the basis of satellites. GPS terminal can figure out its own position, and its precision can come to 25 meters. The positioning precision depends on the number of satellites and the GPS receiving signal. Under the best circumstances, the

system can position precisely within few meters.

For more details about it, please refer to the relevant instructions on the GPS suite attached with the phone.

16. Maintaining your Pocket PC

● Creating or deleting programs

You cannot and will not delete these original programs stored on your phone. As long as there are free memories on your phone, you can install any other applications designed for your phone.

Installing new programs by ActiveSync

Before installing the new program, you need to download the software to your PC hard disk.

- (1) Download the application to your PC (or insert the disk which contains the application to your PC). Please use applications or soft wares specially designed for your phone.
- (2) Read all relevant installation instructions

or files attached with the application. Most applications contain such instructions.

- (3) Connect your phone with your PC.
- (4) Run the installed application.



Note:

Some CAB applications need to be installed directly on the phone.

- ❖ If it is not an application, the installation wizard will be activated automatically. Please follow the instructions to operate. When completing the installation of the software, the application will be sent to your phone automatically.
- ❖ If it is not an application, an error prompt will appear to remind you that it is workable but just suits for other types of PC. You shall move it to your phone. If you cannot find any installation instructions while reading the information or files, please use ActiveSync

browser to copy the application data directly to the Program File folder on your phone.

Completing the installation, please click **[Start→Programs]** to select the icon of the installed application.

Installing new programs directly from the Internet

- (1) Make sure of the type of your phone and the processor so as to choose software of the correct version to install.
- (2) Directly download the application from the Internet to your phone through Internet Explorer. You may find a document of xip, exe, or zip format, or a setup.exe document, or documents with several versions which are suitable for different types of phones and processors. Please select a suitable one for the application your phone processor uses.
- (3) Read all relevant installation instructions

or files attached with the application. Most applications contain such instructions.

- (4) Click the document, for example, xip or exe document. Then the phone will begin to install the application. Please follow the instructions to operate.

Removing programs

Select **[Start→Settings→System→Remove Programs]**.

You can only remove programs installed on the storage. Programs installed on the phone cannot be removed.

● Managing the storage

The storage of your phone is composed by storage card and program storage. The former is used to save the information you created and the programs you installed; while the later is used to run the programs installed on your

phone. The phone will manage the distributions between them automatically.

Checking the assignment and usability of the storage

Select **[Start→Settings→System→Memory]**.

Checking the free memory

Your phone may not adjust the distribution automatically under some circumstances like the memory isn't enough. If you see the prompt reminding you that no available memory to save programs, please try to solve it by the below methods:

Moving documents to Micro SD card

- (1) Select **[Start→Programs→File Explorer]**.
- (2) Hold down the document you want to move, and select **[Cut]**. Open **[My Documents]** in the storage card folder, and select **[Menu→Edit→Paste]**.

Documents saved on **[My Documents]** or its sub-folders may not appear on the list of some programs. When you are using Notes, Word Mobile or Excel Mobile, you are able to open one item and select **[Menu→File→Rename/Move...]** to move the document.

Moving the attached documents of E-mails

If you insert Micro SD card to your phone:

- (1) Select **[Start→Messaging→Menu→Options]**.
- (2) On **[Storage]** option, click **[When available, use this storage card to store attachments]**, and click **<ok>**. All attachments will be moved to Micro SD card, and newly-created attachment will be automatically saved on Micro SD card.

Saving new documents on Micro SD card

To save notes, Word Mobile or Excel Mobile, etc. automatically to Micro SD card when it is available, follow the below steps:

- (1) Select [**Menu→Options...**] on the Notes, Word Mobile or Excel Mobile screen.
- (2) Click [**Storage Card**] on the [**Save to**] box.

● Deleting unnecessary documents

- (1) Select [**Start→Programs→File Explorer**].
- (2) Hold down the document you want to remove, and select [**Delete**].

To search document of huge memory, select [**Start→Programs→Search**]. Click [**Larger than 64 KB**] on the [**Type**] box.

Deleting all documents and clearing the

browsing records of Internet Explorer:

Select [**Menu→Tools→Options...→Memory**] from Internet Explorer screen, and click [**Clear History**].

● Backup

Since all documents and programs are stored on the phone, if your phone is power off, all of them will disappear. So please backup them to your PC or Micro SD card to prevent losing your materials. You can backup them to your PC through ActiveSync. If the PC isn't available, you can backup the documents and programs to Micro SD card.

17. Phone Maintenance

Mobile phones are very exact electronic devices and must be looked after carefully. The following advice can help you to look after your phone and prolong its life.

- ❖ The phone and its spare parts should be put out of the reach of children.
- ❖ Keep the phone dry. Rain, moisture or water will corrupt its electronic circuitry. If your phone does get wet, remove the battery immediately and take the phone to the nearest Amoi authorized service center.
- ❖ Don't put the phone in dusty places or this will affect the everyday use of the phone.
- ❖ LCD is a part of the phone which could be easily damaged, so try to avoid dropping the phone on the ground or any other form of shock. Do not touch the screen with a sharp object.
- ❖ Don't put the phone in a high temperature environment. High temperatures will shorten the life of electronic devices, destroy the battery and destroy or melt a phone's plastic shell.
- ❖ Don't put the phone in a low temperature environment. Otherwise, when the temperature rises to normal temperature, there will be moisture in the phone and this will destroy the phone's electronic circuitry.
- ❖ Don't throw, knock or shake the phone intensely as this could damage the electronic circuitry and structure of the phone.
- ❖ Use soft cloth with soap water to clean the phone. Do not use rough chemical or abrasive cleaners to clean the phone as these could damage the phone.
- ❖ Don't paint your phone, for fear the parts which can be taken down will be pasted and affect its normal use.
- ❖ Please use a clean, soft cloth to clean the

camera lens etc.

- ❖ If you have to replace the phone's antenna, please only do so with a suitable replacement. Using an unsuitable antenna or spare parts will damage the phone and radio system.

18. Troubleshooting

Please check to see if any problems you have encountered while using your phone are described below. If you were unable to find the solution to a particular problem, please contact one of our maintenance centres.

● The phone can't be switched on

Possible reason	Solution
The battery power is used up	Charge the battery
Incorrect battery installation	Install battery correctly

● The phone is switched off automatically

Possible reason	Solution
Low battery power	Charge the battery

● PIN/ PUK code lock

Possible reason	Solution
Enter wrong PIN Code(Personal Identification Code) or PUK Code (Personal Unlocking Key)	Enter correct password

 Caution

1. If you enter an incorrect PIN code three times in succession, many SIM and phone functions will be locked. For more details, please refer to “Safety Precautions”.

2. If you do not know the correct PIN code and PUK code, please contact your operator or network service provider.

● Bad call quality

Possible reason	Solution
The signal changes suddenly	Maybe you are moving at high-speed (e.g. on a train or bus). Observe the signal strength and select the place with the strongest signal to make a call and ensure better call quality.
The area does not have a good signal	Move to a more open area.

● Can't answer a call

Possible reason	Solution
The call forwarding option has been set	Cancel call forwarding according to requirements.

● Can't make a call

Possible reason	Solution
The phone is switched off	Turn on the phone.
You are outside the network service area	Check the network area.

The SIM card has been incorrectly inserted	Check whether your SIM card can be used normally.
The keypad locks automatically	Click <Unlock> on the Today screen, and tap the [Unlock] button.
Use the phone during call rush hours and cause line jam	Try to avoid using the phone during call rush hours
Call barring has been set	Cancel the call barring option according to your requirements. For more, please see "Call Forwarding" on page 32

● The call volume is too low

Possible reason	Solution
The call volume has been set too low	Increase the call volume.

● The person you are calling cannot hear your voice

Possible reason	Solution
Call status is set to mute	Turn off the mute function on the call menu.
The microphone is too far from the	Put the phone's microphone closer to

sound source	your mouth.
--------------	-------------

● The incoming call doesn't ring

Possible reason	Solution
The phone selects silent mode	Check the settings by selecting [Start→Settings→Personal→Sounds & Notifications].
The ring volume is set too low	Click  to increase the volume
The call forwarding option has been set	Cancel call forwarding according to requirements. For more, please see "" on page.

● The battery can't be charged

Possible reason	Solution
The battery is worn out and the charging time takes too long	Charge when the phone prompts low battery.
The battery doesn't connect well to the phone	Ensure the battery has been inserted correctly.
The charger doesn't connect to the phone	Ensure that the interface between the charger and the phone is correctly connected, and the charger icon should appear on the screen.
Battery or charger has	Contact one of our maintenance centers.

been damaged	maintenance centers.
The surrounding temperature is too low or too high	Make sure the phone is charged in a normal temperature.

● Can't display network

Possible reason	Solution
The SIM card has been incorrectly installed	Refer to the SIM card installation method.
The contact between the SIM card and phone is dirty	Ensure the contact between the SIM card and phone remains clean.
The SIM card does not work	Check whether the SIM card is out of date.
The network is very weak	Move to a place with a strong signal to use the phone

● The stylus can't tap accurately

Possible reason	Solution
The phone hasn't yet aligned the screen	Select [Start→Settings→System→Screen] to align the screen.

● The phone does not recognize the storage card

Possible reason	Solution
The storage card has been incorrectly inserted	Insert the storage card correctly according to instructions in the user manual.

The storage card has been damaged	Replace the storage card
-----------------------------------	--------------------------

- **ActiveSync can't connect with the PC**

Possible reason	Solution
The PC has installed the firewall	Check whether the firewall is installed on the PC. If it is installed, turn it off and restart the computer to connect with your phone.

- **ActiveSync has connected with the PC, but cannot sync files**

Possible	Solution
----------	----------

reason	
The synchronization option hasn't been chosen	Select [Tools→Options...→Options] on the ActiveSync screen on your PC. Make sure that the files you want to sync are chosen.

● **Browser can't connect to Internet normally**

Possible reason	Solution
The network service provider don't provide the service or you haven't apply for this service	Contact with your network service provider and consult information about how to apply for and use these services
Haven't set correctly	Please set correctly by selecting [Start→Settings→Connections→Connections].

● **Lack of space**

Possible reason	Solution
The resource manager file is taking up too much space	Delete unnecessary files.
The browser's history records are taking up too much space	Delete unwanted history records.
Multi-message, e-mail etc. are taking up too much space	Delete unwanted messages and e-mails.

19. Safety Precaution

● Usage environment

- ❖ Please remember to obey the necessary rules and regulations whenever use your phone. This will help keep you safe and respect your environment.
- ❖ Switch off your phone when close to petrol stations, bunkers, chemical factories or explosive areas and adhere to any safety signs and instructions there. Breaking any rules may cause explosion or injury.
- ❖ Using the phone in plane can cause interference and danger to an aircraft navigation system and network. You must switch off your phone before boarding and make sure your phone is switched off during the whole flight.
- ❖ Please place the phone somewhere safe and don't put it on a seat or in places where it

could fall and break. In order to ensure safe driving and avoid road accidents, please don't use the phone when driving. If you must use it, please use the phone's hands-free or park at roadside before making or answering a call.

● Medical devices

Please switch off your phone in areas near the electronic medical equipments that obviously desire to switch your phone off (.such as heart pacemakers, hearing aids etc). Most medical devices can shield the phone's RF signal, but some can't. If you have any questions or need to find out more, please consult your doctor or medical device manufacturer.

Pacemaker

Pacemaker manufacturers advise the distance between your phone and heart pacemaker to be at least 6 inches (15.3 cm), or the phone could interfere with the pacemaker.

The personnel who wears pacemaker should do the followings:

- ❖ ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- ❖ Do not carry the phone in a breast pocket.
- ❖ Use the ear opposite the pacemaker to minimize the potential for interference.
- ❖ If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

**Caution:**

If you are unsure as to the level of interference, please switch off the phone at once and consult a doctor immediately.

Hearing aids

Some digital wireless phones may interfere with

some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

● Emergency calls

As the phone uses a radio signal, wireless and ground communication network and personal settings functions like other phones, it is impossible to ensure your phone can be connected successfully in any situation, so please don't rely purely on your phone as the only means of notification in cases of emergency (such as medical first aid)

Making an emergency call

If your phone is switched off, please turn on your phone and check whether the network signal is strong enough.

- (1) Input the local first aid number correctly (such as 120), different areas have

different first aid numbers.

- (2) Please press  to call.



Caution:

While making an emergency call, you should try to provide all important information correctly. At this time, the phone may be the only communication tool, so don't end the call without permission.

● Password access

Your phone and SIM card can be protected by a password, to prevent others using it illegally.

PIN code

This is personal identification code which is used to protect the SIM card from unauthorised use by other people. Generally, the PIN code and SIM card are provided together. After

activating the PIN code, you can use the phone normally by correctly inputting your password each time.



Caution:

If you input your PIN code incorrectly three times in succession, the SIM card will be locked. You will need to input the PUK code to unlock it. (If you don't have a PUK code, please contact your operator and SIM card provider for this information. Please input all characters).

PIN2 code

This is the password which activates the special SIM card functions. Usually, the PIN2 code and the SIM card will be provided together. If you incorrectly input the PIN2 code three times in succession, it will be locked and you will need to input PUK2 to unlock it again.

PUK code

This is used to unlock the PIN code. If you incorrectly input the PUK code ten times in succession, then the SIM card cannot be used again. Usually the PUK code and SIM card are provided together. If you lose PUK code or it isn't supplied with SIM card, please contact with your network operator or SIM card provider.

PUK2 code

This is used to unlock the PIN2 code. Usually the PUK2 code and the SIM card are provided together. PUK2 can modify the locked PIN2 code. If you incorrectly input the PUK2 code ten times in succession, you will not be able to access some of the functions. Please apply to your operator for a new card. The PUK2 code cannot be changed. If you lose it, please contact your service provider.

● Notes about charging the**battery**

The phone provides power by using a lithium battery. The standby time and call time will be influenced by the system's environment and phone settings.

- ❖ Please use the battery and charger provided by the Amoi. Amoi will take no responsibility for damage caused by using the wrong battery or charger.

**Caution:**

Generally, the charging time is 2-5 hours according to the current status of the phone (whether switch on the phone, make a call, etc.)

- ❖ Don't use wet hands to touch the phone battery or charger while charging.
- ❖ Try not use the phone as much as possible while charging.
- ❖ When the battery power is full, the battery

icon will turn as .



Caution:

To make the new battery achieve the best capacity, please charge and discharge the phone for twice or three times. As for the first several times, you should charge the battery for at least 10 hours in succession. Please charge the phone due to no power and switch off the phone automatically.

● Battery information and care

- ❖ Never use any battery that has been damaged.
- ❖ While using the phone near network station, the power consumption is very little. Therefore, the call and standby time depends on greatly by the signal strength of honeycomb network and the parameters set by network operator.
- ❖ The battery charging time will depend on the amount of electricity remaining and the type of battery and charger used. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- ❖ Only use batteries that are compatible with your phone and only recharge your battery with a compatible charger. If a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, as overcharging may shorten its life.
- ❖ Improper battery use may result in a fire, explosion or other hazard. Do not disassemble or open, crush, bend or deform, puncture or shred the battery.
- ❖ Do not connect the anode and cathode of a battery the wrong way round.
- ❖ Do not leave the battery in places with too high or too low temperature or the battery

capacity will be reduced and battery life will be shortened. Always try to keep the battery at room temperature.

- ❖ Do not short-circuit the battery. This may damage the electronic core or the protected circuit inside the battery. Accidental short-circuiting may occur when a metal object (coin, clip or pen) causes a direct connection between the anode and cathode of the battery, for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting. Therefore, please store the battery carefully and on its own.
- ❖ Don't burn your phone battery or treat it as common rubbish. Please adhere to the local environmental policy in order to avoid endangering life and causing environmental damage, and recycle your batteries in time.
- ❖ If your phone, battery or other charging device leaks due to carelessness, you must

not put it inside any piece of equipment that heats up (such as drier, microwave etc.). The phone or other products may go wrong, or this could even cause the phone, battery or other charging device to burn, expand and explode.

- ❖ Please deal with the useless old battery according to the relative introduction.

Amoi will take no responsibility for any direct or indirect damage caused by user error.

● Note about using spare parts

- ❖ Please put all spare parts (such as SIM card, storage card, battery etc) out of reach of children, in case danger occurs.
- ❖ Please do switch off the phone and disconnect the phone and charger before you removing the battery from the phone.
- ❖ As the phone's spare parts are not waterproof, please keep all spare parts dry.

- ❖ You should pull out the plug of any spare part correctly when you switch off the power, don't drag the power line forcibly.

If the phone, battery, and charger don't operate normally, ally, please contact one of our maintenance centres with a qualified repair service as soon as possible.

● **Other safety information**

- ❖ When you are not using your phone, it is advisable to switch it off, remove the battery to save energy and avoid radicalising the phone.
- ❖ If you use earphones to listen to music or watch a film, please don't turn the volume up too high as this could damage your hearing.
- ❖ You can't disassemble the terminal and battery of the phone unless the technical personnel.

Index

—A—

About, 34

ActiveSync

Installing software on
the phone, 70

ActiveSync

Error information, 71
Setting up, 65
Stopping, 71
Synchronization
information, 68

Align screen, 14

—B—

Backlight, 35

Battery

Charging, 9
Power display, 10

Buttons, 31

—C—

Calculator, 47

Calendar, 45

Call

Answering or
rejecting a call, 21
Caller ID, 20
Emergency call, 20
History, 24
In-call, 22
International call, 20
List, 24
Making a call, 18
Timer, 24
Voice mail, 20
Volume, 21

Call barring, 31

Call forwarding, 32

Call waiting, 32

Caller ID, 32

Camera, 83

Certificates, 35

Clock & Alarm, 35

Connections

Settings, 38

Contacts, 40

**Customer feedback,
36**

—D—

Drawing, 27

—E—

Elevation of phone

Front view, 1
Rear view, 2
Side view, 2

Encryption, 36

Error reporting, 36

—F—

File explorer, 89
fixed dialing, 33

—G—

Games, 86

GPS

External GPS, 36
Introduction, 91

—H—

Help, 47

—I—

Input modes

Block recognizer, 25
Keyboard, 26
Letter recognizer, 26
Transcriber, 27

**Installing Micro SD
card, 8**

**Installing SIM card
and battery, 6**

—J—

Java, 87

—L—

Lock, 15, 34

Phone, 16
SIM card, 16

—M—

Maintenance, 96

Memory, 37

Menus, 33

Messaging

Outlook e-mail, 48

Messaging

MMS, 54

MSN Messenger, 58

SMS, 57

Micro SD card, 90

—N—

Notes, 44

—O—

Office mobile

Excel, 61

PowerPoint, 63

Office mobile

Word, 60

**Owner information,
29**

—P—

Phone function, 11

Phone ring and

security, 31

Pictures and videos,

-
-
- 81**
 - Pocket PC, 92**
 - Power, 37**
 - Power on/off, 10**
 -
 - R—**
 - Regional settings, 37**
 - Reminder, 14**
 -
 - S—**
 - Safety notice, VII**
 - Safety precaution, 106**
 - Search, 47**
 - Shortcut keys, 12**
 - Sounds &**
 -
 - Notifications, 30**
 - Speed dial, 42**
 - Start, 15**
 - Status icon, 4**
 - Stylus, 13**
 -
 - T—**
 - Tasks, 43**
 - Text size, 14**
 - Today, 29**
 - Today screen, 2**
 - Touch screen and calibration, 14**
 - Troubleshooting, 98**
 -
 - V—**
 -
 - Voice mail and text messages, 32**
 -
 - W—**
 - Windows media, 80**
 - Windows update, 38**
 - wireless network**
 - Internet connection, 73
 - Internet explorer, 75
 - Wireless network**
 - Internet sharing, 75
 - Remote desktop, 79
 - WAP connection, 73