 


CHORO MODE

Cellular-phone radio control

 
Instruction

1. Set mobile phone Earphone volume output to maximum.
2. Set mobile phone Key Tone output to DTMF mode.
3. Insert battery (AAA size x 3) into Car Charger's battery compartment.
4. Mount Choro Car on Charger in correct position.
 - The charging LED will light up in red color when it is in charging mode. It will take around 1 minute for power charging.
 - The charging LED will change to green color when it is finish charging

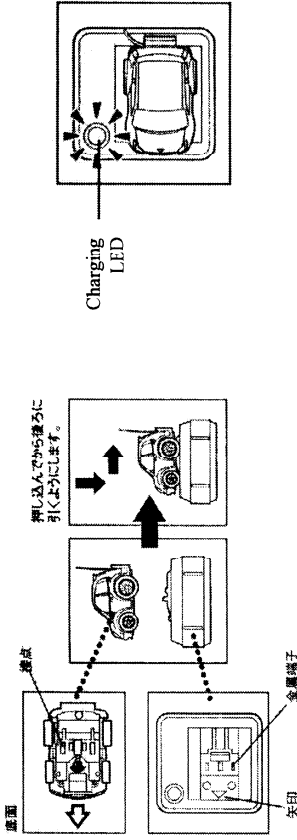

Charging LED


5. Plug Transmitter cord to your mobile phone earphone output.
 - If your mobile phone earphone system is different from Japan phone system.
 - Plug Transmitter to MIC adaptor.
 - Set MIC clip to your mobile phone speaker position.
 - Tight fitting your MIC adaptor by adjusts screw clip.

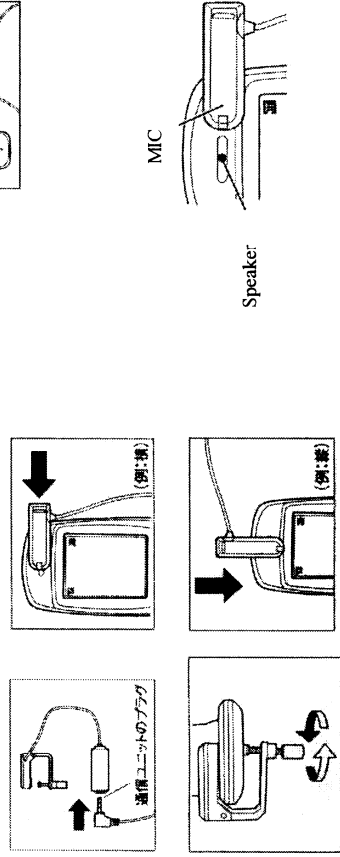

6. Slide Transmitter power switch to ON position.

7. Press mobile phone Key button to control your Choro Car.

 - Key 1 – Turn left running 3 seconds.
- Key 2 – Forward running.
- Key 3 – Turn right running 3 seconds.
- Key 4 – Turn left 0.5 seconds.
- Key 5 – Stop.
- Key 6 – Turn right 0.5 seconds.
- Key 7 – Turn left backward 3 seconds.
- Key 8 – Backward running 3 seconds.
- Key 9 – Turn right backward 3 seconds.
- Key 0 – Dash forward running 2 seconds.

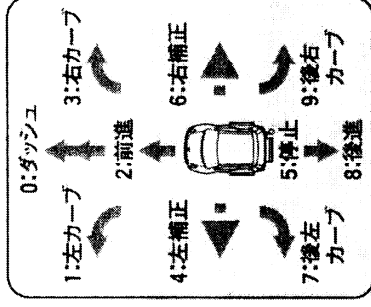

8. Mail Mode

- Key in the correct magic word, Choro Car will follow your input to running.

 
9. Mail Mode magic word List

- まる (**7999#) Circle running
- にち (**644#) Running like number "eight"
- なみ (**577#) Running like Wave
- りたあん (**9941000#) Running forward and backward
- ちよろ (**448899999#) Running like ChoroQ

There are 5 more Mail Mode magic word, it can be find in Takara web site <http://www.takaratoys.co.jp>

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

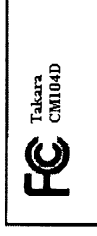

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

“Modifications not authorized by the manufacturer may void users authority to operate this device”