

AT&T Acadia

User Guide

DOC20210405

Your Phone

The topics in this section will introduce you to your phone, help you get set up with service, provide an overview of the phone screen, and get you started with basic phone operations.

Keys and connectors

These topics illustrate your phone's primary parts and key functions.

Note: Your phone's screens and app layouts are subject to change. This user guide uses sample images only.

Key	Description
	OK/App Menu Press to confirm an option. Press to access the Apps Menu from the Home screen.
	Navigation ring Press up to access Quick Settings, such as Wi-Fi, Bluetooth, and more. Press down to access E-Mail. Press left to access the apps on the Home screen (Store, Maps, and YouTube). Press right to access the Browser.
	Messages Press to access the Messages app.
	Back/Clear Press to return to the previous screen, close a dialog box, or exit a menu. Press to delete characters when in Edit mode.
	Call/Answer Press to dial or answer an incoming call. Press to enter the Call Log from the Home screen.

Key	Description
	Call/Answer Press to end a call or return to the Home screen. Press and hold to power on/off.
	Right Menu Press from the Home screen to access the Contacts app. Press from within an app to access various functions and options.
	Left Menu Press from the Home screen to access the Notices app. Press from within an app to access various functions and options.
	Voicemail Press and hold from the Home screen to access Voicemail.
	Ringtones/Alerts Press and hold from the Home screen to access Ringtones and Alerts.
	Camera Button Press to access the Camera app. Press to capture a photo or shoot video in the Camera app. Press and hold along with the Volume Down key to capture a screenshot.
	Volume Button Press to adjust the earpiece or headset volume during a call. Press to adjust the media volume while listening to music or watching/streaming a video. Press to adjust the ringtone volume from the Home screen. Press to mute the ringtone of an incoming call.

CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

Getting started

Setup

Removing or attaching the back cover

Removing or installing the battery

Inserting or removing the Nano SIM card and microSD™ card

To insert a Nano SIM or microSD card, push the Nano SIM or microSD card into the corresponding card slot with the gold-connectors facing down. To remove the Nano SIM, follow the instructions provided on the device label.

Note: Your phone only supports Nano SIM cards. Attempting to insert a Mini or Micro SIM card may damage the phone.

Charging the battery

Insert the micro-USB cable into the phone's charging port and plug the charger into an electrical outlet.

Note: To reduce power consumption and energy waste, disconnect your charger when the battery is fully charged and switch off Wi-Fi, Bluetooth, and other wireless connections when they are not in use.

Powering your phone on

Press and hold the End/Power key until the phone powers on. If a SIM card is not installed, you will still be able to power your phone on, connect to a Wi-Fi network, and use some device features. You will not be able to make calls using your network without a SIM card. If Screen Lock is set up, enter your passcode to access your phone.

Note: Store your passcode in a safe place that you can access without your phone. If you do not know your passcode or have forgotten it, contact your service provider. Do not store your passcode on your phone.

Setting up your phone for the first time

1. View the important notifications on network data usage. Press the Left Menu key to have them read out. You can press the Right Menu key to continue to the next screen after 3 seconds.
2. Use the Navigation ring to select a language and press OK. Press the Right Menu key to continue.
3. Use the Navigation ring to select a Wi-Fi network, if applicable. Press OK to select a network and enter the password (if needed), then press the Right Menu key to continue. If you do not want to connect to a network, press the Right Menu key to skip.
4. Press the Right Menu key to accept the date and time and continue, or press OK to disable Auto Sync and manually set the date, time, time zone, clock format, and Home screen clock visibility. Press the Right Menu key to continue.

Note: Auto Sync is not available without a Wi-Fi connection. This phone uses cellular data for certain services, applications, and functions. If not connected to Wi-Fi, standard data charges will apply. Please connect to a Wi-Fi network to limit data charges.

5. Press OK once you have read the KaiOS Anti-Theft Notice.
6. Read the KaiOS License Terms and Privacy Policy and check the boxes to allow KaiOS to access and send performance data. Press the Right Menu key to Accept and continue.
7. Create a KaiOS Account to lock the device remotely or wipe all personal information in the event of loss or theft. Press OK to create an account. Press the Right Menu key to accept the KaiOS Terms and Privacy Notice, then follow the prompts to complete setup. If you do not want to create a KaiOS Account, press the Right Menu key to skip.

Note: If you choose to skip, you can create a KaiOS Account at any time, Go to Settings > Account > KaiOS account > Create Account.

Powering your phone on

Press and hold the End/Power key, then select Power Off.

Home screen

Status & notification bar

View phone status and notifications in the Status & notification bar at the top of the screen. Your notifications appear at the left side of the status bar, and phone status icons appear at the right side.

Phone status icons

Icon	Status
	Bluetooth® active
	Wi-Fi® active
	Vibration mode on
	Silent mode on
	Network signal strength (full)
	Network signal roaming
	No network signal
	4G LTE service
	3G data service
	Airplane mode on
	Battery charging
	Battery status (full charge)
	No SIM card
	Headphones connected

Notification icons

Icon	Status
	Alarm set
	New e-mail
	New notice

Icon	Status
	New voicemail
	Missed call

Changing Home screen wallpaper

1. From the Home screen, press the OK key to access the Apps Menu. Use the Navigation ring to select Settings. Press the Navigation ring to the right to select Personalization.
2. Use the Navigation ring to select Display, then press OK. Press OK again to select Wallpaper. Choose from Gallery, Camera, or Wallpaper.
 Gallery: Choose a photo from the Camera Gallery.
 Camera: Take a new photo to use as wallpaper.
 Wallpaper: Choose from a variety of high-quality wallpapers.
3. When choosing a photo from the Gallery, use the Navigation ring to select the photo you would like to use. Press OK to view the photo, then press the Right Menu key to set the device wallpaper.
4. When taking a new photo with the Camera, aim your camera and press OK to take a photo. Press the Right Menu key to use the photo or press the Left Menu key to retake the photo.
5. When browsing the Wallpaper gallery, use the Navigation ring to select the wallpaper image you want to use. Press the Right Menu key to use the image.
6. Press the Back/Clear key to exit. Your new wallpaper will be displayed on the Home screen.

Call Log

Making a call

Dial a number using the keypad. Press the Back/Clear key to delete incorrect digits. Press the Call/Answer key to place the call. To hang up the call, press the End/Power key, or close the phone.

Calling a contact

To make a call from the Contacts app, select the contact you would like to call and press the Call/Answer key. Choose from a voice call or a Real-Time Text (RTT) call and press OK to place the call.

Making international calls

To dial an international call, press the key twice to enter “+” in the dial screen, then enter the international country prefix followed by the phone number. Press the Call/Answer key to place the call.

Making emergency calls

To make an emergency call, dial the emergency number and press the Call/Answer key. This works even without a SIM card but requires network coverage.

Answering or declining a call

Press Ok to the Call/Answer key to answer. If the phone is closed, opening it will automatically answer the call. Press the Right Menu key or the End/Power key to decline. To mute the ringtone volume of an incoming call, press up or down on the Volume key.

Call options

During a call, the following options are available:

Press the Left Menu key to mute the microphone.

Press OK to use the external speakers during the call. Press OK again to turn the speaker off.

Press the Right Menu key to access the following options:

Add call: Dial another number and make another call. The current call will be placed on hold.

Hold call: Place the current call on hold. To resume the call, press the Right Menu key again and select Unhold call.

Switch to RTT: Switch the call to a Real-Time Text call.

Volume: Adjust the earpiece volume.

Call waiting

If you receive a call during another call, press the Call/Answer key to answer or the End/Power key to decline. You can also press the Right Menu key to access Options and select to Answer, Decline, or adjust the call Volume. Answering the incoming call will put the current call on hold.

Calling your voicemail

Press and hold the key to set up voicemail or listen to your voicemail.

[Note: Contact your network operator to check service availability.](#)

Using the Call Log

To access the Call Log, press the Call/Answer key from the Home screen View all calls, or use the Navigation ring to sort by Missed, Dialed, and Received calls.

Press OK to call a selected number.

From the Call Log screen, press the Right Menu key to access the following options:

Call Information: View more information about the call(s) from the selected number. Press the Right Menu key to block the number.

Send Message: Send an SMS or MMS message to the selected number.

Create new contact: Create a new contact with the selected number.

Add to existing contact: Add the selected number to an existing contact.

Edit Call log: Delete selected calls from your Call Log or clear your phone call history.

Contacts

The Contacts app provides quick and easy access to your contacts. To access Contacts, press the Right Menu key from the Home screen, or press OK from the Home screen and select Contacts from the Apps Menu.

Adding a contact

From the Contacts screen, press the Left Menu key to add a new contact. You can choose to save your new contact to the Phone memory or SIM card memory.

Use the Navigation ring to select information fields and enter the contact information. Press the Right Menu key to access more options, such as adding a contact photo, adding additional phone numbers or e-mail addresses, and more.

Note: Editing options will vary depending on the information field selected.

Press OK to save your contact.

Editing a contact

From the Contacts screen, select the contact you would like to edit and press the Right Menu key to access Options.

Select Edit contact and make the desired changes.

Press OK when finished to save your edits or press the Left Menu key to cancel and exit the Edit Contact screen.

Deleting a contact

From the Contacts screen, press the Right Menu key to access Options, then select Delete contacts.

Press OK to select the contact(s) you wish to delete or press the cc key to select all contacts.

Press the Right Menu key to delete the selected contacts.

Sharing a contact

From the Contacts screen, select a contact you want to share.

Press the Right Menu key to access Options, then select Share. You can share the contact's vCard via E-Mail, Messages, or Bluetooth.

Additional options

From the Contacts screen, press the Right Menu key to access the following options:

Add as Favorite: Add to favorites list

Edit contact: Edit contact information.

Call: Make a call to the selected contact.

RTT Call: Make a RTT (Real-Time Text) call to the selected contact.

Send message: Send an SMS or MMS to the selected contact.

Share: Send a single contact's vCard via E-mail, Messages, or Bluetooth.

Delete contacts: Select contacts to delete.

Move contacts: Move contacts from the Phone memory to the SIM memory and vice versa.

Copy contacts: Copy contacts from the Phone memory to the SIM memory and vice versa.

Settings: Manage your contact settings.

Memory: Save the contacts to both the Phone and SIM memory, just the Phone memory, or just the SIM memory.

Sort contacts: Sort contacts by first name or last name.

Set speed dial contacts: Set speed dial numbers for contacts. You can set the Speed Dial to make voice calls or RTT calls.

Set ICE Contacts: Add up to five contacts for In Case of Emergency calls.

Create group: Create a group of contacts.

Block contacts: Numbers blocked from Contacts, Messages, and the Call Log app will be listed here. Press the Left Menu key to add a number to the Block Contacts list.

Import contacts: Import contacts from the Memory card, Gmail, or Outlook.

Export contacts: Export contacts to the Memory card or via Bluetooth.

Add Account: Sync contacts with a Google or Activesync account.

Messages

Use the Messages app to send and receive text (SMS) and multimedia (MMS) messages.

To access Messages, press the Messages key on the keypad or press OK from the Home screen and select Messages from the Apps Menu.

Sending a text (SMS) message

From the Messages app, press the Left Menu key to write a new message.

Enter the phone number of the recipient in the To field at the top of the screen or press the Right Menu key to add a contact.

Press down on the Navigation ring to access the Message field and type your message.

Press the Left Menu key to send the message.

Note: An SMS message of more than 145 characters will be sent as multiple messages. Certain characters may count as 2 characters.

Sending a multimedia (MMS) message

MMS enables you to send video clips, images, photos, contacts, and sounds.

1. When writing a message, press the Right Menu key to access Options and select Add attachment.
2. Select to add an attachment from Gallery, Video, Camera, Music, Contacts, or Recorder.
3. Select a file and follow the prompts to attach the file to the message.
4. Press the Left Menu key to send the message.

Note: An SMS message will be converted to MMS automatically when media files are attached, or e-mail addresses are added in the To field.

Writing a message

- When entering text, press the key to switch between Abc (Sentence case), abc (Lower case), ABC (Caps lock), 123 (Numbers), or Predictive (Predictive text mode).
- For normal text input, press a number key (2-9) repeatedly until the desired character is displayed. If the next letter is located on the same key as the present one, wait until the cursor is displayed to input.
- To insert a punctuation mark or special character, press the key, then select a character and press OK key.

- To use Predictive text mode, press the key and enter the characters.

Press left or right on the Navigation key to select the correct word. Press the OK key to confirm.

- To delete characters, press the Back/Clear key once to delete one character at a time or press and hold to delete the entire message.

Settings

From the Messages screen, press the Right Menu key to access

Options. Select Settings to view the following options:

- Auto retrieve messages: Automatically download multimedia messages when you receive them. This option is on by default. Select Off to disable automatic multimedia message downloading.
- Wap push: Turn WAP Push Messages On/Off.
- Group Messages: Turn Group Messages On/Off.
- My phone number: View the phone number on the SIM card. If the number cannot be retrieved from the SIM card, it will need to be added manually.
- Wireless emergency alerts: View the Alert Inbox or access Emergency Alert Notification settings.

E-Mail

Compose, send, and receive e-mails with the E-Mail app.

Setting up an E-Mail account

1. To access E-Mail, press the OK key from the Home screen and select E-Mail from the Apps Menu.
2. The e-mail wizard will guide you through the steps to set up an e-mail account. Press the Right Menu key to begin setup. Enter the name, e-mail address, and password of the account you would like to set up. Press the Right Menu key to continue.
3. If your e-mail service provider does not allow your phone to have quick e-mail setup, you will be prompted to enter settings manually. Press the Left Menu key to access Advanced setup and input the required information for e-mail account setup.
4. To add another e-mail account, press the Right Menu key to access Options. Select Settings, then select Add.

Writing and sending e-mails

1. From the E-Mail inbox, press the Left Menu key to compose a new e-mail.
2. Enter the recipient(s) e-mail address(es) in the To field, or press the Right

Menu key to add a contact.

3. When in the Subject or Message field, press the Right Menu key to add CC/BCC or add an attachment to the message.
4. Enter the subject and the content of the message.
5. Press the Left Menu key to send the message immediately. To send the e-mail at another time, press the Right Menu key and select Save as draft or Cancel.

Camera

Take photos and record videos with the Camera app.

App Permission

Upon first use of the Camera, you will be asked for permission to know your location. Press the Right Menu key for Allow or the Left Menu key for Deny.

[Note: Location permission can be changed at any time. Go to Settings > Privacy & Security > App permissions > Camera > Geolocation.](#)

Taking a photo

1. To access the Camera, press the OK key from the Home screen and select the Camera app.
2. Position the camera so that the subject of the photo is in view. Press up or down on the Navigation key to zoom in or out.
3. Press the OK key or the Camera button to take the photo. Photos are automatically saved to the Gallery app.
4. Press the Left Menu key to view your photo.

Camera options

From the Camera screen, press the Right Menu key to access Options.

Use the Navigation key to switch between the following:

- Self Timer: Select a 3, 5, or 10 second delay after pressing the OK key or the Camera button.
- Grid: Add grid lines to the camera screen.
- Go to Gallery: View photos you have taken.
- Modes: Switch between Photo mode and Video mode.

Shooting a video

1. From the Camera screen, press the Navigation key to the right to switch to Video mode.
2. Press up or down on the Navigation key to zoom in or out.
3. Press the OK key or the Camera button to record a video. Press either key again to stop recording. Videos will be automatically saved to the Video app.

Gallery

View and organize your photos in one location with the Gallery app.

To access the Gallery, press the OK key from the Home screen and select Gallery from the Apps Menu.

Gallery options

From the Gallery screen, press the Right Menu key to access the following options:

- Delete: Delete the selected photo.
- Edit: Adjust the exposure, rotate, crop, add filters, and auto-correct the selected photo.
- Add to favorites: Add the selected photo to favorites.
- Share: Share the selected photo via E-Mail, Messages, or Bluetooth.
- Select Multiple: Select multiple photos in the Gallery to delete or share.
- File Info: View the file name, size, image type, date taken, and resolution.
- Sort and Group: Sort the photos in the Gallery by Date and Time, Name, Size, or Image Type, or group photos by the date they were taken.

Individual photo options

When viewing an individual photo in the Gallery, press the Right Menu key to access the following options:

- Delete: Delete the selected photo.
- Edit: Adjust the exposure, rotate, crop, add filters, and auto-correct the selected photo.
- Add to favorites: Add the selected photo to favorites.
- Share: Share the selected photo via E-Mail, Messages, or Bluetooth.
- File Info: View the file name, size, image type, date taken, and resolution.
- Set as: Set the selected photo as your phone wallpaper or as an existing contact's image.
- Sort and Group: Sort photos in the Gallery by Date and Time, Name, Size, or Image Type, or group photos by the date they were taken.

Video

View your recorded videos with the Video app.

To access your videos, press the OK key from the Home screen and select Video from the Apps Menu. Press the Left Menu key to open the camera and record a video.

Video options

From the Video screen, select a video and press the Right Menu key to access the following options:

- Share: Share the selected video via E-Mail, Messages, or Bluetooth.
- File Info: View the file name, size, image type, date taken, and resolution.
- Delete: Delete the selected video.
- Select Multiple: Select multiple videos to delete or share.

Music

Use the Music app to play music files stored on your phone. Music files can be downloaded from your computer to your phone using a USB cable.

To access your music, press the OK key from the Home screen and select Music from the Apps Menu.

Listening to a song

1. From the Music screen, press the Navigation key to the right to select the Artists, Albums, or Songs tab.
2. Select the artist, album, or song you wish to hear.
3. Press the OK key to play the selected song.

Player options

When listening to a song, press the Right Menu key to access the following options:

- Volume: Adjust the volume of the song.
- Shuffle on: Shuffle your songs.
- Repeat all: Repeat your songs after all of them have played once.
- Add to playlist: Add the current song to an existing playlist.
- Share: Share the selected song via E-Mail, Messages, or Bluetooth.
- Save as ringtone: Save the selected song as your ringtone.

Browser

Use the Browser app to navigate the web.

To access the Browser, press the OK key from the Home screen and select Browser from the Apps Menu.

Browsing the web

1. From the Browser screen, press the Left Menu key to search.
2. Enter the web address and press the OK key.
3. Use the Navigation key to move the cursor on the screen and press the OK key to click.
4. Press the Right Menu key to access the following options:
 - Volume: Adjust the volume of the website.
 - Refresh: Reload the website.
 - Go to Top Sites: View your pinned sites.
 - Pin to Top Sites: Add the current web page to your Top Sites list. This provides a shortcut to easily access your favorite sites.
 - Pin to Apps Menu: Add the current website to your Apps Menu.
 - Share: Share the current website address via E-Mail or Messages.
 - Quit Browser: Close the Browser app while remaining on the current website. Any information entered into the website will not be lost.

Calendar

Use the Calendar app to keep track of important meetings, events, appointments, and more.

To access the Calendar, press the OK key from the Home screen and select Calendar from the Apps Menu.

Using multimode view

You can display the Calendar in Day, Week, or Month View. Press the Right Menu key to change your Calendar view.

Creating a new event

1. From any Calendar view, press the Left Menu key to add new events.
2. Fill in the event information, such as event name, location, start and end dates, and more.
3. When finished, press the Right Menu key to save.

Calendar options

From any Calendar view, press the Right Menu key to view the following options:

- Go to Date: Select a date to go to in the Calendar.
- Search: Search your scheduled events.
- Calendar to Display: Select the account calendar you wish to view.
- Sync calendar: Sync the phone calendar with another account calendar on the cloud. If no account is connected, this option is not available.
- Settings: View Calendar settings.

Clock

The Clock app features an Alarm, Timer, and Stopwatch function.

To access the Clock, press the OK key from the Home screen and select Clock from the Apps Menu.

Alarm

Setting an alarm

1. From the Alarm screen, press the Left Menu key to add a new alarm and access the following options:
 - Time: Set the alarm time.
 - Repeat: Set what days you want the alarm to repeat, if desired.
 - Sound: Select a ringtone for the alarm.
 - Vibrate: Press to activate alarm vibration.
 - Alarm name: Name the alarm.
2. Select an alarm and press the OK key to turn the alarm on or off.

Alarm settings

From the Alarm screen, select an alarm and press the Right Menu key to access the following options:

- Edit: Edit the selected alarm.
- Delete: Delete the selected alarm.
- Delete all: Delete all alarms on the Alarm screen.
- Settings: Set snooze time, alarm volume, vibration, and sound.

Timer

From the Alarm screen, press the Navigation key to the right to enter the Timer screen.

- Press the OK key to edit the hour, minute, and second. When finished,

press the OK key to start the Timer.

- Press the OK key to pause the Timer. Press the OK key again to resume the Timer.
 - When the Timer is active, press the Right Menu key to add 1 minute.
 - When the Timer is paused, press the Left Menu key to reset and clear the Timer.
 - When the Timer is reset, press the Right Menu key to access Settings.
- From here, you can set snooze time, alarm volume, vibration, and sound.

Stopwatch

From the Timer screen, press the Navigation key to the right to enter the Stopwatch screen.

- Press the OK key to start the stopwatch.
- When the Stopwatch is active, press the Right Menu key to record the lap.
- When the Stopwatch is active, press the OK key to pause the time.
- When the Stopwatch is paused, press OK key to continue the total time.
- When the Stopwatch is paused, press the Left Menu key to reset the stopwatch and clear lap times.

File Manager

Manage your files with the File Manager app. You can manage your files from the Internal memory or the SD Card.

To access the File Manager, press the OK key from the Home screen and select File Manager from the Apps Menu.

Google

Browse the web using Google's search engine.

To access Google, press the OK key from the Home screen and select Google from the Apps Menu.

Store

Download apps, games, and more with the KaiStore app.

To access the KaiStore, press the OK key from the Home screen and select Store from the Apps Menu.

News

Browse local news articles with the News app. Choose news topics to fit your interests, such as politics, sports, entertainment, and more.

To access News, press the OK key from the Home screen and select News from the Apps Menu.

KaiWeather

View your local weather forecast for the next 10 days with the KaiWeather app. You can also view the humidity, wind speeds, and more, as well as view weather in other cities.

To access KaiWeather, press the OK key from the Home screen and select Kaiweather from the Apps Menu.

myAT&T

Manage your account, pay your bill online, and more with the myAT&T app.

To access myAT&T, press the OK key from the Home screen and select myAT&T from the Apps Menu.

Note

Save quick text notes with the Note app.

To access your notes, press the OK key from the Home screen and select Note from the Apps Menu.

Utilities

Access the Calculator, To-do, Recorder, and Unit Converter from the Utilities folder. To access the Utilities folder, press the OK key from the Home screen and select Utilities from the Apps Menu.

Calculator

Solve many mathematical problems with the Calculator app.

- Enter numbers using the keypad.
- Use the Navigation key to choose the mathematical operation to be performed (add, subtract, multiply, or divide).
- Press the key to add a decimal.
- Press the to add or remove negative values.

- Press the Left Menu key to clear the current entry, or press the Right Menu key to clear all.
- Press the OK key to solve the equation.

Recorder

Use the Recorder app to record audio.

Recording audio

1. From the Recorder screen, press the Left Menu key to begin a new audio recording.
2. Press the OK key to begin recording. Press the OK key again to pause the recording.
3. Press the Right Menu key when finished. Name your recording, then press the OK key to save.

Unit Converter

Use the Unit Converter to convert unit measurements quickly and easily.

Convert between measurements for area, length, speed, and more.

QR Reader

Use the QR Reader to scan QR codes on restaurant menus, calendar events, Wi-Fi networks, etc. Open the app and point your phone's camera at the QR code you want to scan, hit the OK key to SCAN

Home screen apps

To access your Home screen apps, press the Navigation key to the left from the Home screen and select the app you want to use.

Store

Download apps, games, and more with the KaiStore .

Maps

Use Google Maps to find locations on a map, search for businesses nearby, and get directions.

YouTube

Enjoy movies, TV shows, and videos with YouTube .

Settings

Adjust phone configurations and learn more about your device with the Settings app.

To access Settings, press the OK key from the Home screen and select Settings from the Apps Menu.

Network & Connectivity

Airplane mode

Turn Airplane mode on to disable all connectivity such as phone calls, Wi-Fi, Bluetooth, and more.

Mobile data

- **Mobile data:** Allow apps to use the mobile network when needed. Turn off to avoid incurring charges for data use on local operator mobile networks, particularly if you do not have a mobile data agreement.
- **Carrier:** Carrier displays the network operator of the SIM card, if inserted.
- **International Data Roaming:** Enable network coverage in other countries. Turn off to avoid incurring roaming charges.
- **APN settings:** Adjust various APN settings.

Note: This phone uses cellular data for certain services, applications and functions. If not connected to Wi-Fi, standard data charges will apply. Please connect to a Wi-Fi network to limit data charges.

Wi-Fi

Turn Wi-Fi on whenever you are in range of a wireless network to connect to the internet without using a SIM card.

Bluetooth

Bluetooth allows your phone to exchange data (videos, images, music, etc.) with another Bluetooth-supported device (phone, computer, printer, headset, car kit, etc.) within a small range.

Geolocation

KaiOS uses GPS, and additional supplemental information such as Wi-Fi and mobile networks to approximate your location.

Location data may be used by KaiOS and service providers to improve accuracy and coverage of the location databases.

Calling

- **Call waiting:** Enable/disable call waiting.
- **Caller ID:** Set how your phone number is displayed when making a call.
- **Call forwarding:** Set how your calls are forwarded when you are busy, a call is unanswered, or you are unreachable.
- **Call barring:** Set call barring on incoming and outgoing calls.
- **Fixed dialing numbers:** Restrict numbers from being dialed on this phone.
- **DTMF tones:** Set Dual Tone Multi-Frequency tones to normal or long.

Wireless emergency alerts

- Alert Inbox: View messages in the Alert Inbox.
- Emergency Alert Sound: Enable/disable the Emergency Alert Sound.
- Emergency Alert Vibrate: Enable/disable the Emergency Alert Vibration.
- Multi Language Support: Enable/disable the Multi Language Support.
- Presidential alert: Your phone can receive emergency alerts from the White House. This alert cannot be disabled.
- Extreme alert: Enable/disable Extreme alerts.
- Severe alert: Enable/disable Severe alerts.
- AMBER alert: Enable/disable AMBER alerts.
- Public Safety alert: Enable/disable Public Safety alerts.
- State/Local Test alert: Enable/disable State/Local Test alerts.
- WEA ringtone: Play alert tone.

Personalization

Sound

- Volume: Adjust the volume for Media, Ringtones & alerts, and Alarm.
- Tones: Set Vibration, Ringtones, Notice Alerts, or Manage Tones.
- Other Sounds: Enable/disable sounds for the dial pad or camera.

Display

- Wallpaper: Select device wallpaper from the camera gallery, use the camera to take a photo or browse the wallpaper gallery.
- Brightness: Adjust brightness level.
- Screen Timeout: Set the amount of time before the screen goes to sleep.
- Auto Keypad Lock: Enable/disable Auto Keypad Lock.

Search

- Search Engine: Select the default search engine.
- Search Suggestions: Enable/disable search suggestions.

Notices

- Show on Lock Screen: Enable/disable showing notices on the lock screen.
- Show content on lock screen: Enable/disable content being shown on the lock screen.
- App Notices: Enable/disable notices for each app.

Date & time

- Auto Sync: Enable/disable time and date Auto Sync.
- Date: Manually set the phone's date.
- Time: Manually set the phone's time.

- Time Zone: Manually set the phone's time zone.
- Time Format: Select 12-hour or 24-hour clock format.
- Home Screen Clock: Show/hide the clock on Home screen.

Language

Select the preferred language. Choose from English, Spanish, French, Portuguese, Vietnamese, or Chinese.

Input methods

- Use Predictive: Enable/disable Predictive text.
- Next Word Suggestion: Enable/disable Next Word Suggestion.
- Input Languages: Select input languages.

Privacy & Security

Screen lock

Set a 4-digit passcode to protect your information if your phone is lost or stolen. You will need to input your passcode to access the device.

App permissions

Configure app permissions or uninstall apps. Select if you want an app to Ask, Deny, or Grant permission to use your location or microphone. You cannot uninstall certain apps.

Do not track

Select whether you want your behavior to be tracked by websites and apps.

Browsing privacy

Clear the browsing history or cookies and stored data.

About KaiOS

View information about KaiOS.

Storage

Enable or disable the ability to transfer and access files from a connected computer via USB.

Default media location

Choose whether to automatically save your media files to the Internal memory or SD Card.

Media

View the amount of media file storage on your phone.

Application data

View the amount of application data in use on your phone.

System

View system storage space.

Device

Device information

- Phone number: View your phone number. If no SIM card is inserted, this is not visible.
- Model: View the phone model.
- Software: View the phone OS software version.
- More information: View more information about the device such as Hardware version, MAC address, IMEI, Software Build number, ICCID, etc.
- Legal information: View legal information about KaiOS license terms and Open source licenses.
- AT&T Software Update: Check for new updates or continue current updates.
- Reset Phone: Erase all data and restore the device to its factory settings.

Downloads

View your downloads.

Battery

- Current level: View the current battery level percentage.
- Power saving mode: Enabling Power Saving Mode will turn off the phone's data, Bluetooth, and Geolocation services to extend battery life. You can select to turn Power Saving Mode on automatically when there is 15% battery left.

Accessibility

- Invert Colors: Turn color inversion On/Off.
- Backlight: Turn the Backlight On/Off.
- Large Text: Turn Large Text On/Off.
- Captions: Turn Captions On/Off.
- Readout: The Readout function reads the labels of interface elements and provides a sound response.
- Mono Audio: Turn Mono Audio On/Off.
- Volume Balance: Adjust the Volume Balance.
- Keypad Vibration: Turn Keypad Vibration On/Off.
- TTY: teletypewriter
- Hearing Aid Compatibility (HAC): Hearing Aid Compatibility (HAC) can be used by people with hearing or speech impairments. After connecting the phone and hearing aid device, calls are linked to a relay service which converts incoming speech to text for the person using the hearing aid and converts outgoing text to a spoken voice for the person on the other end of the conversation.
- RTT: Real-Time Text can be used by people with hearing or speech impairments to communicate via text while on a voice call. You can set RTT visibility to be Visible during calls or Always visible.

Account

KaiOS account

Set up, sign into, and manage your KaiOS account.

Anti-theft

Enable/disable Anti-theft.

Other Accounts

See other accounts connected to your device or add a new account.

Anti-theft

Use the KaiOS account Anti-theft capabilities to help locate your device or prevent others from access it if lost or stolen.

Visit <https://services.kaiostech.com/antitheft> from a computer to log into your KaiOS account and access Anti-theft capabilities. Once logged in, you will be able to access the following options:

- MAKE RING: Make the device ring to help locate it.
- REMOTE LOCK: Lock the device to prevent access without a passcode.
- REMOTE WIPE: Clear all personal data from the device.

Note: Anti-theft will be automatically activated when you log in to your KaiOS account on your phone.

Making the most out of your phone

Software updates

Install the latest software updates on your phone to keep it running smoothly.

To check for software updates, open the Settings app and go to

Device > Device information > AT&T Software Update > Check for Update. If an update is available, press the OK key to begin downloading. When the download is finished, press the OK key to install the software update.

Note: Connect to a secure Wi-Fi access point before searching for updates.

Specifications

The following list your phones and battery's specifications.

Phone specification:

Weight Approx. 123.1g (4.3oz)

Continuous talk time Approx. 5.33 hours

Continuous standby time Approx. 456 hours

Charging time Approx. 3 hours

Dimensions (W x H x D) Approx. 4.125 x 2.201 x 0.751 (Closed), 7.644 x 2.201 x 2.125 (Open)

Display 2.8", QVGA/1.77" QQVGA

Processor MSM8908, 1.2GHz

Rear Facing Camera 2MP

Memory 4GB ROM, 512MB RAM

Software version KaiOS 2.5.4

Battery specs:

Voltage 3.85 V

Type Lithium-ion

Capacity 1,500 mAh

Licenses

microSD Logo is a trademark of SD-3C LLC.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by its affiliates is under license. Other trademarks and trade names are those of their respective owners

AT&T Bluetooth Declaration ID D047693

The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

Copyright information

Google, Android, Google Play, and other marks are trademarks of Google LLC.

All other trademarks are the property of their respective companies.

Safety information

FCC Regulations

This mobile phone complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation equipment between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/ TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves. This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for usage against the head is 1.16 W/kg. For usage near the body, the highest reported SAR value is 1.58 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the FCC requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: RYQEA211101.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

Hearing Aid Compatibility (HAC) for Wireless Telecommunication

Devices

This phone has a HAC rating of **M4/T4**.

What is hearing aid compatibility?

The Federal Communications Commission has implemented rules and a rating system designed to enable people who wear hearing aids to more effectively use these wireless telecommunications devices. The standard for compatibility of digital wireless phones with hearing aids is set forth in American National Standard Institute (ANSI) standard C63.19.

There are two sets of ANSI standards with ratings from one to four (four being the best rating): an “M” rating for reduced interference making it easier to hear conversations on the phone when using the hearing aid microphone, and a “T” rating that enables the phone to be used with hearing aids operating in the tele-coil mode, thus reducing unwanted background noise.

How will I know which wireless phones are hearing aid compatible?

The Hearing Aid Compatibility rating is displayed on the wireless phone box. A phone is considered Hearing Aid Compatible for acoustic coupling (microphone mode) if it has an “M3” or “M4” rating. A digital wireless phone is considered Hearing Aid Compatible for inductive coupling (tele-coil mode) if it has a “T3” or “T4” rating.

Warranty

With this manufacturer’s warranty (hereinafter: the “Warranty”), Emblem Solutions (hereinafter: the “Manufacturer”) guarantees this product against any material, design, and manufacturing defects. The duration of this Warranty is specified in article 1 below.

This Warranty does not affect your statutory rights, which cannot be excluded or limited, in particular in relation to the applicable legislation on defective products.

Warranty duration:

The product may consist of several parts, which may have separate warranty periods, to the extent permitted by local laws. The “Warranty Period” (as defined in the table below) takes effect on the date of purchase of the product (as indicated on the proof of purchase).

1. Warranty period:

Phone 12 Months

Charger 12 Months

Other Accessories (if included in the box) 12 Months

2. Warranty period for repaired or replaced parts:

Subject to special provisions of local laws in force, the repair or replacement of a product does not, under any circumstances whatsoever, extend the original warranty period of the product concerned. However, the repaired or replaced parts are guaranteed in the same manner and for the same defect for a period of ninety days after delivery of the repaired product, even if their initial warranty period has expired. Proof of purchase required.

Implementation of the Warranty

If your product is faulty under normal conditions of use and maintenance, in order to benefit from the present warranty, please contact after-sales service at 1-800-801-1101 for assistance. The customer support center will then provide you with instructions on how to return the product for support under warranty.

For more information, please visit att.com/warranty.

Warranty exclusions

Manufacturer guarantees its products against material, design, and manufacturing defects.

The Warranty does not apply in the following cases:

1. Normal wear and tear of the product (including on camera lenses, batteries and screens) requiring periodic repair and replacement.
2. Defects and damages due to negligence, to the product being used other than in a normal and customary manner, to the non-compliance with the

recommendations of this User Manual, to an accident, regardless of the cause. Instructions for use and maintenance of the product can be found in your product's User Manual.

3. The opening, unauthorized disassembly, modification being carried out or repair of the product by the end user or by persons or by service providers not approved by Manufacturer and/or with spare parts not approved by Manufacturer.
4. Use of the product with accessories, peripherals, and other products whose type, condition and/or standards do not meet Manufacturer's standards.
5. Defects associated with the use or connection of the product to equipment or software not approved by Manufacturer. Some defects may be caused by viruses due to unauthorized access by yourself or by a third party service, computer systems, other accounts, or networks. This unauthorized access may take place through hacking, misappropriation of passwords or various other means.
6. Defects and damage due to the exposure of the product to humidity, extreme temperatures, corrosion, oxidation, or to any spillage of food or liquids, chemicals and generally any substance likely to alter the product.
7. Any failure of embedded services and applications that have not been developed by Manufacturer and whose functioning is the exclusive responsibility of their designers.
8. Installation and use of the product in a manner that does not comply with the technical or security standards of regulations in force in the country where it's installed or used.
9. Modification, alteration, degradation, or illegibility of the IMEI number, serial number or EAN of the product.
10. Absence of proof of purchase.

Upon expiration of the warranty period or upon an exclusion of warranty, Manufacturer may, at its discretion, provide a quote for the repair and offer to provide support for the product, at your cost.

The Manufacturer contact and after-sales service details are subject to change. These Warranty terms may vary substantially according to your country of residence.