 
 
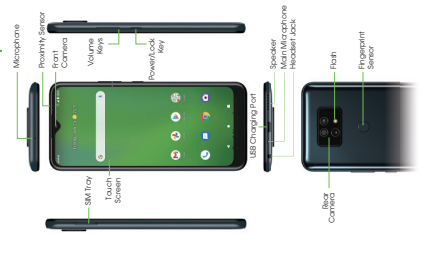 


Getting to Know Your Cricket® Ovation 2 Smartphone

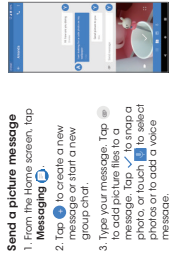

Text and Picture Messaging

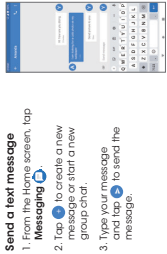

 
Send a text message
1. From the Home screen, tap **Messaging**.
2. Tap **+** to create a new message or start a new group chat.
3. Type your message and tap **➤** to send the message.

Send a picture message
1. From the Home screen, tap **Messaging**.
2. Tap **+** to create a new message or start a new group chat.
3. Tap **+** to add a picture, photo, or video to a message.
4. Tap **➤** to send the message.

Note: Please don't text and drive.

Setting Up Your Phone

1. Insert the SIM Card Tray Pin into the card tray slot and remove the SIM card tray.
2. Place the Nano SIM card and microSD card (Not included) into the tray.
3. Gently slide the card tray back into the slot.

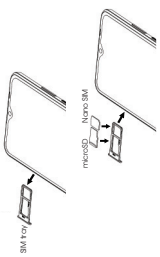




Charge using the AC Adaptor

1. Connect one end of the data cable to the USB port located on the bottom of your phone.
2. Connect the other end to the power adaptor.
3. Connect the power adaptor to an electrical outlet to fully charge your phone.

WARNING!

To avoid damage to the phone, do not use any other (not Cricket) chargers. You can get a standard Nano SIM card from your service provider.

   Email

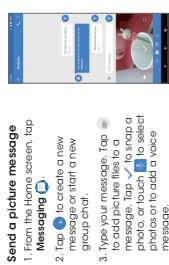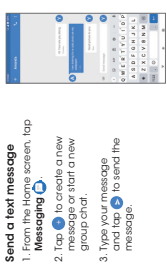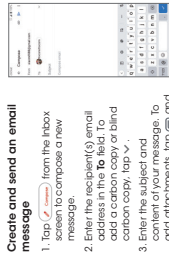

Create and send an email message
1. Tap **+** from the inbox screen to compose a new message.
2. Enter the recipient(s) email address in the To field. To add picture files to a message, tap **+** to select a photo, or touch **+** to select photos or to add a voice message.
3. Enter the subject and content of your message. To add attachments, tap **+** to select **Attach file**.
4. Tap **➤** to send.

Note: To set up a corporate email account, contact your IT administrator.

 
Personalizing Your Screen



- **Set your wallpaper:** Press and hold an empty space on the Home screen and tap **Wallpapers**.
- **Set wallpaper:** Choose to set a wallpaper from the Home screen, Lock screen, or both.
- **Add apps and widgets:** 1. To add an app to the Home screen, swipe up from the bottom of the Home screen to access the Apps Home screen and add an app. 2. To add a widget, press and hold on an empty space on the Home screen and tap **Widgets**.
- **Use call waiting:** 1. While on a call, you will hear a tone if another call comes in. Swipe up to accept and place the current call on hold. 2. The caller will be sent to voicemail.
- **Check voicemail:** 1. From the Home screen, tap **Phone** > **Dialer**. 2. Press and hold the **1** key, then follow the prompts to set up your voicemail.
- **Use call waiting:** 1. While on a call, you will hear a tone if another call comes in. Swipe up to accept and place the current call on hold. 2. The caller will be sent to voicemail.
- **System navigation:** Switch between 3-button navigation (standard) or Gesture navigation.
- **Prevent ringing:** The ability to activate vibrate or mute when your phone rings. To prevent ringing, press the Volume Up key.

1. Press and hold the app, widget, or folder, then drag it over to the desired position and then release.
1. From the Home screen, press and hold an app, then drag it over to another app to create a folder.
2. Drag more apps to the folder to add them.
3. To rename or rename the folder, open the folder, tap the title bar, and enter the desired name.

Apps on Google Play™

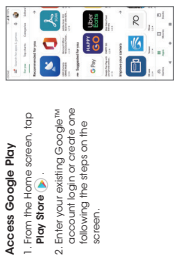

1. From the Home screen, tap **App Store**.
2. Enter your Google™ account login or create one following the steps on the screen.
3. To install, tap the app and follow the instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by looking it in the apps drawer.

Useful Features

- **Flashlight:** Swipe down from the Status bar to open the Quick Settings panel. Tap **Flashlight** to turn it on or off.
- **Battery Saver Mode:** Swipe down on the Status bar to open the Quick Settings panel. Tap **Battery Saver** to turn it on or off.
- **Data Saver:** Data Saver helps to reduce data usage by preventing apps from sending and receiving data in the background. To use Data Saver, go to **Settings** > **Network & Internet** > **Data Saver** to turn it on or off.

Note: A payment method such as Google Wallet is required to purchase apps.

 
Calls and Voicemail



- **HD Voice capable*:** Enjoy crystal-clear conversations.
- **Make a call:** 1. Make a call: Tap **Phone** from the Home screen and tap **Call**. 2. Enter the number using the dial pad, or choose a contact from the **Contacts**, **Recent**, or **Favorites** tab and tap the number to place the call.
- **Check voicemail:** 1. From the Home screen, tap **Phone** > **Dialer**. 2. Press and hold the **1** key, then follow the prompts to set up your voicemail.
- **Use call waiting:** 1. While on a call, you will hear a tone if another call comes in. Swipe up to accept and place the current call on hold. 2. The caller will be sent to voicemail.
- **System navigation:** Switch between 3-button navigation (standard) or Gesture navigation.
- **Prevent ringing:** The ability to activate vibrate or mute when your phone rings. To prevent ringing, press the Volume Up key.

1. Press and hold the app, widget, or folder, then drag it over to the desired position and then release.
1. From the Home screen, press and hold an app, then drag it over to another app to create a folder.
2. Drag more apps to the folder to add them.
3. To rename or rename the folder, open the folder, tap the title bar, and enter the desired name.

Camera and Video

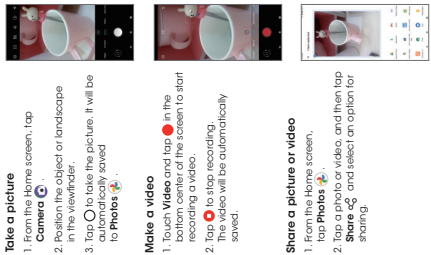

1. From the Home screen, tap **Camera**.
2. Position the subject or landscape in the viewfinder.
3. Tap **○** to take the picture. It will be automatically saved to **Photos**.
1. From the Home screen, tap **Video** and tap **+** in the bottom center of the screen to start recording a video.
2. Tap **○** to stop recording. The video will be automatically saved.
1. From the Home screen, tap **Photos**.
2. Tap a photo or video, and then tap **Share** and select an option for sharing.

 
Easily Adjust Settings

1. Swipe up from the Home screen and tap **Settings**.
1. From the Home screen, tap **Settings**.
2. Swipe down on the screen to see the Quick Settings menu.
3. Tap a setting to turn it on or off.

System Controls

1. From the Home screen, tap **Settings**.
2. Choose from the following options:
 - **Quick open camera:** The ability to quickly open the camera after pressing the Power key twice.
 - **System navigation:** Switch between 3-button navigation (standard) or Gesture navigation.
 - **Prevent ringing:** The ability to activate vibrate or mute when your phone rings. To prevent ringing, press the Volume Up key.

Connect Wi-Fi & Bluetooth

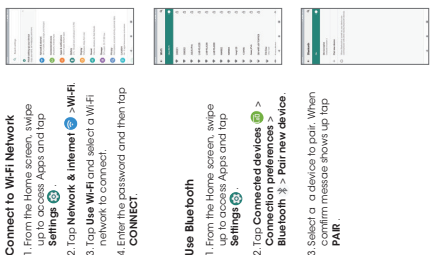

1. From the Home screen, tap **Settings**.
2. Tap **Network & Internet** > **Wi-Fi**.
3. Tap **+** to select a Wi-Fi network to connect.
4. Enter the password and then tap **CONNECT**.
1. From the Home screen, tap **Settings**.
2. Tap **Connected devices** > **Bluetooth** > **Pair new device**.
3. Select a device to pair. When confirm message shows up tap **PAIR**.

More Information

On the web
Detailed product information, including device specifications and troubleshooting, is available at www.cricketwireless.com/support/devices.

On the phone
• Call Cricket Customer Care at 1-855-246-2461 or • Dial 611 from your cell phone.

Accessories
For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines - FCC ID: R15C002. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) The device must not cause harmful interference, and (2) The device must accept any interference received, including interference that may cause undesired operation. Cricket and the Cricket logo are registered trademarks under Cricket Wireless LLC. © 2019 Cricket Wireless LLC. mcrs36™ logo is a trademark of SB3C, LLC.



AT&T



Let's get started



AT&T Eco Rating 2.0 only applies to <Device Name>. For limited factors evaluated visit att.com/ecospace. Wireless Emergency Alerts is a registered Trademark and Service Mark of CTIA.

<Insert third party and Manufacturer trademark statements here> LTE is a trademark of ETSI. 4G LTE not avail. everywhere. Contains <battery type> battery - recycle or dispose of properly. 2019 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property. All other marks are the property of their respective owners.

Printed in USA

<OBM Part #>

What elias is in the box?

- AT&T Maestros® Max Smartphone
- Terms of service
- Charger
- USB Type-C cable
- SIM card
- SIM card tray pin
- Quick start guide
- Safety information guide

Connect Wi-Fi & Bluetooth

Connect to Wi-Fi Network

1. From the Home screen, swipe up to access Apps and tap **Settings**.
2. Tap **Network & Internet** > **Wi-Fi**.
3. Tap **Use Wi-Fi** and select a Wi-Fi network to connect.
4. Enter the password and then tap **CONNECT**.

Use Bluetooth

1. From the Home screen, swipe up to access Apps and tap **Settings**.
2. Tap **Connected devices** > **Connection preferences** > **Bluetooth** > **Pair new device**.
3. Select a device to pair. When confirm message shows up tap **PAIR**.

Easily Adjust Settings

Swipe up from the Home Screen and tap **Settings**.

Quick Settings

1. Swipe down from the Home screen to view the Notification panel.
2. Swipe down again to see the Quick Settings menu.
3. Tap a setting to turn it on or off.

Notification panel

1. Swipe down on the Status bar to open the Notification panel.
2. Swipe left or right on a notification to delete it, or tap **CLEAR ALL** to clear all event-based notifications (other ongoing notifications will remain).
3. From the Notification panel, swipe down again to access the Quick Settings panel. Tap a setting to turn it on/off, or tap **Settings** to access full Settings.

Gesture Controls

Enable Gesture Controls

1. Swipe up on the Home screen and tap **Settings** > **System** > **Gesture**.
2. Choose from the following options:
 - **Quick open camera**: The ability to automatically open the camera after pressing the Power key twice.
 - **System navigation**: Switch between 3 button navigation (standard) or Gesture navigation.
 - **Prevent ringing**: The ability to activate vibrate or mute when your phone rings by pressing the Power key and Volume Up key.

Useful Apps*

myAT&T
Keep track of your wireless and Internet data usage, upgrade your phone or plan, and view/pay your bill in the app.

AT&T Smart Wi-Fi
Helps you make your data plan last longer. Remembers and connects to your favorite hotspots and finds more Wi-Fi options when you're on the go.

Visual Voicemail
Receive voicemail messages in an email-like inbox. You can easily play and delete messages, return calls, and manage voicemail features.

HBO Max
Stream the HBO you love, with even more great TV and movies, plus new Max Originals you can't wait to see.

*Compatible device and subscription may be required. Data and messaging rates may apply. Restrictions and limitations may apply. For more app information, go to <https://att.com/shop/apps>.

Find More Information

Manage Your Account with myAT&T

- On your phone: **Apps** > **myAT&T**
- On the web: att.com/myATT

Compatible device and online account required. Data and messaging rates may apply for download and app usage.

Need More Help?

- On your phone: **Apps** > **AT&T** > **Device Help**
- On the web: att.com/DeviceHowTo

Give us a Call

- 611 from any AT&T wireless phone
- 800.331.0500 or prepaid 800.901.9878

Fingerprint Sensor

Setting Fingerprint After Setup

1. Swipe up on the Home Screen and tap **Settings** > **Security** > **Fingerprint**.
2. Choose your backup screen lock method: PIN, password, or pattern.
3. Follow prompts to set up fingerprint unlock.



Useful Features

 
Quick Settings

- **Flashlight**:
 - Swipe down from the Status bar to open the Quick Settings panel.
 - Tap **Flashlight** to turn it on or off.
- **Battery Saving Mode**:
 - Swipe down on the Status bar to open the Quick Settings panel.
 - Tap **Battery Saver** to turn it on or off.
- **Data Saver**:
 - Data Saver helps to reduce data usage by preventing some apps from sending or receiving data in the background.
 - To use Data Saver, go to **Settings** > **Network & Internet**.
 - Tap **Data Saver** to turn it on or off.

Create app folders

1. From the Home screen, press and hold an app, then drag it over to another app to create a folder.
2. Drag more apps to the folder to add them.
3. To name or rename the folder, open the folder, tap the title bar, and enter the desired name.


Your New Phone

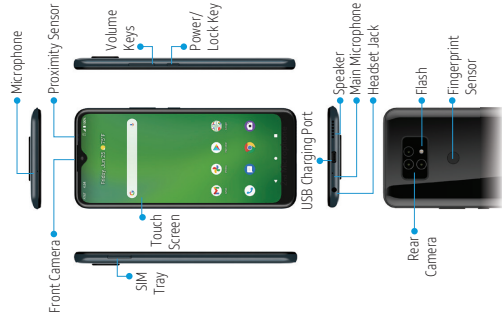

Setting Up Your Phone

Install a SIM/microSD card*

 1. Insert the SIM Card Tray Pin into the card tray slot and remove the SIM card tray.
2. Place the Nano SIM card and microSD card (Not included) into the tray.
3. Gently slide the card tray back into the slot.

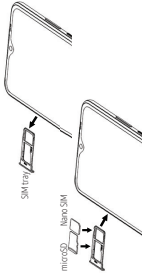

Charge using the AC Adaptor

1. Connect one end of the data cable to the USB port located on the bottom of your phone.
2. Connect the other end to the power adaptor
3. Connect the power adaptor to an electrical outlet to fully charge your phone.

*WARNING!

To avoid damage to the phone, do not use any other kind of SIM card or any non-standard Nano SIM card cut from a SIM card. You can get a standard Nano SIM card from your service provider.

Connect Wi-Fi & Bluetooth

Connect to Wi-Fi Network

- Swipe up on the screen to unlock the screen.
- Use your fingertip to lightly tap the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left and right.
- Spread two fingers apart or pinch them together on the screen to zoom in or out on a web page or Gallery image.
- To return to the previous screen, tap the Back key ◀.
- Tap the Home key ○ at any time to return to the main Home screen. Press and hold the Home key ○ to access Google Assistant.
- Tap the Recent apps key □ to access recently viewed apps.
- Swipe up from the bottom of the Home screen to access applications on your phone.

Personalizing Your Screen

Set your wallpaper

1. Press and hold an empty space on the Home screen and tap Wallpapers.
2. Select a wallpaper and tap Set wallpaper. Choose to set the wallpaper for the Home screen, Lock screen, or both.

Add apps and widgets

1. To add an app to the Home screen, swipe up from the bottom of the Home screen to access the Apps drawer. Press and hold an app, then drag it to any Home screen.
2. To add a widget, press and hold an empty space on the Home screen and tap Widgets.
3. Press and hold a widget, then drag it to the Home screen.

Organize your Home screens

1. To add an app to the Home screen, swipe up from the bottom of the Home screen to access the Apps drawer. Press and hold an app, then drag it to any Home screen.
2. Press and hold a widget, then drag it to the Home screen.

Calls and Voicemail

HD Voice capable*

Enjoy crystal-clear conversations.

Make a call

1. To make a call, tap Phone from the Home screen.
2. Enter the number using the dial pad, or choose a contact from the Contacts ★ tab and tap the Favorites ★ tab and tap the number to place the call.

Check voicemail

1. From the Home screen, tap Phone > Dialer.
2. Press and hold the 1 key, then follow the prompts to set up your voicemail.

Use call waiting

1. While on a call, you will hear a tone if another call comes in. Swipe up to accept and place the current call on hold, or swipe down to reject the call. The caller will be sent to voicemail.
2. Tap to merge calls or tap the other call to switch between active calls.

- To experience HD Voice, both callers must have a compatible HD Voice-capable smartphone and make the call over a compatible LTE network or a compatible network.

Text and Picture Messaging

Send a text message

1. From the Home screen, tap Messaging.
2. Tap to create a new message or start a new group chat.
3. Type your message and tap to send the message.

Send a picture message

1. From the Home screen, tap Messaging.
2. Tap to create a new message or start a new group chat.
3. Type your message. Tap to add picture files to a message. Tap to snap a photo, or touch to select photos or to add a voice message.
4. Type your message and tap to send the message.

Note: Please don't text and drive.

Camera and Video

Take a picture

1. From the Home screen, tap Camera.
2. Position the object or landscape in the viewfinder.
3. Tap to take the picture. It will be automatically saved to Photos.

Make a video

1. Touch Video and tap in the bottom center of the screen to start recording a video.
2. Tap to stop recording. The video will be automatically saved.

Share a picture or video

1. From the Home screen, tap Photos.
2. Tap a photo or video, and then tap Share and select an option for sharing.

Fun Camera Modes

Portrait

Artistically blur the background of your photo.

Beauty

Smooth imperfections for better selfies.