
# Instructions For Use

V1.0 14<sup>+</sup>

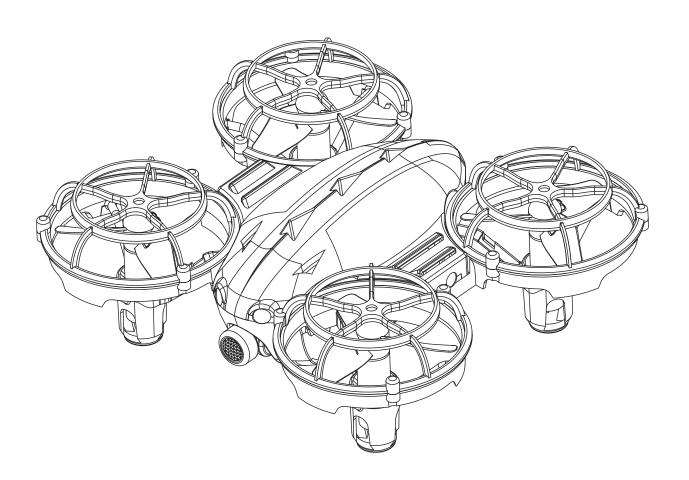

F08



# **Contents**

1.0 Disclaimer&Warning	01
2.0 Safety Guidelines	01
3.0 Maintenance	05
4.0 Package Contents	06
5.0 Drone's Details	07
6.0 Transmitter Details	80
7.0 Joystick Mode	09
8.0 Installation	
Drone's Battery	10
9.0 Charging	11
10.0 Remote Control Operation Guide	
Pairing	12
Calibrating the Gyro	13
One Key Takeoff / Landing	13
11.0 Functions Details	
Speed Switch	14
Emergency Stop	14
Trimmer	15
Obstacle Avoidance Mode	16
360° Flip	17
Altitude-hold Function	18
Circle Fly	18
Headless Mode	19
12.0 Specifications	20
13.0 Contact Us	21
14.0 General Information	22

#### 1.0 DISCLAIMER & WARNING

- 1. Please read this Disclaimer & Warning and Safety Guidelines carefully before using our product. This product is not recommended for people under the age of 14. By using this product, you hereby agree to this disclaimer and signify that you have read it fully. You agree that you are responsible for your own conduct and any damaged caused while using this product, and its consequences . You agree to use this product only for purposes that are proper and in accordance with local regulations, terms and all applicable polices and guidelines manufacturer and distributor may make available.
- 2. When using this product, please be sure to strictly abide by the specification requirements and safety guidelines stated in this document. Any personal injury property damage, legal disputes and all other adverse events caused by the violation of the safety instructions or due to any other factor, WILL NOT be manufacturer and distributor responsibility.


#### 2.0 SAFETY GUIDELINES

#### 2.1 Check Before Use:

- ① This product is a high precision drone that integrates various electronic stability and control mechanisms. Please be sure to setup this drone carefully and correctly to ensure safe, accident-free operation.
- (2) Please be sure that the batteries of the drone and transmitter are clean, undamaged and, fully charged.
- (3) Please be sure that all the propellers are undamaged and are installed in the correct orientation.

④ Please do a thorough check of the product before each use. Inspect the integrity of the parts, any signs of cracks and wear of the propeller, battery power and effectiveness of the indicator, etc. If after doing a complete check any issues are found, please refrain from using the product until the issue has been resolved.

# 2.2 Flight Environment:

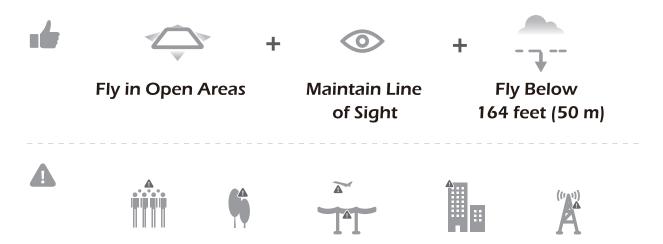

Avoid flying over or near obstacles, crowds, high voltage power lines, trees, airport or bodies of water.

DO NOT fly near strong electromagnetic sources such as power lines and base stations as it may affect the onboard compass.

\_\_\_\_\_



Don't use this drone in adverse weather conditions such as rain, snow, fog, and wind.

## 2.3 Operation Requirements:

- ① Please don't use this product to follow any moving vehicles.
- 2 During the flight, only turn off the motor in case of an emergency.
- (3) As battery becomes low return the drone back to your starting point.
- **4** This product should not be used while drinking alcohol, if you are feeling fatigued, taking medicine, or feeling any physical discomfort.
- ⑤ Beware of the noise volume the drone produces. Keep your distance to avoid ear damage.







**6** Stay away from the rotating propellers and motors.

**7** Don't fly in the No-Fly Zone.

### 2.4 Use of Battery:

- ① Please ensure batteries are fitted in the correct orientation as shown in the instruction manual.
- 2) Avoid short circuits by fitting the batteries correctly, and do not crush or squeeze the batteries as this could carry the risk of an explosion.
- ③ Do not mix new and old batteries as this can lead to a poor performance of the product.
- 4 Dispose used batteries carefully, do not litter.
- ⑤ Please keep dead batteries away from heat and fire.
- ⑥ If the device is not going to be used for an extended period of time, remove batteries to prevent potential damage from battery leakage.

- (7) It is recommended to only use the USB charging cable that comes with the drone to charge the battery.
- ® Don't connect the battery directly to wall outlets or car cigarette -lighter sockets.
- 9 Don't attempt to disassemble or modify the battery in any way.
- ① Don't use the battery if it gives off an odor, generates heat, becomes discolored or deformed, or appears abnormal in any way. If the battery is in use or being charged, remove it from the device or charger immediately and discontinue use.
- ① Don't pierce the battery casing with a nail or other sharp object, break it open with a hammer, or step on it!
- ② Always charge the batteries in a fireproof container and away from combustible materials. Don't charge on surfaces that can catch fire. This includes: wood, cloth, carpet, or in the application's device.
- (13) Don't immerse the battery in water or allow it to get wet.
- ① Don't solder battery terminal directly.
- (15) Keep battery out of reach of children or pets.
- (16) Don't short-circuit the battery by connecting wires or other metal object to the positive(+) and negative(-) terminals.




#### Li-Po Battery Disposal & Recycling

Waste Lithium-polymer batteries must not be placed with household trash. Please contact local environmental or waste agency or the waste agency or the supplier of your model or your nearest Li-Po battery recycling center.


#### 3.0 MAINTENANCE


- ① Clean the product after each use with a clean, soft cloth.
- ② Avoid prolonged exposure to direct sunlight and avoid buildup of heat on the drone.
- ③ This device is not waterproof and must not be submerged in water under any circumstance. Failure to maintain the device completely dry will result in the failure of the unit.
- ① Check the charging plug and other accessories for signs of damage frequently. If any part of the device is damaged, refrain from flying until maintenance can be carried out.

# **4.0 PACKAGE CONTENTS**

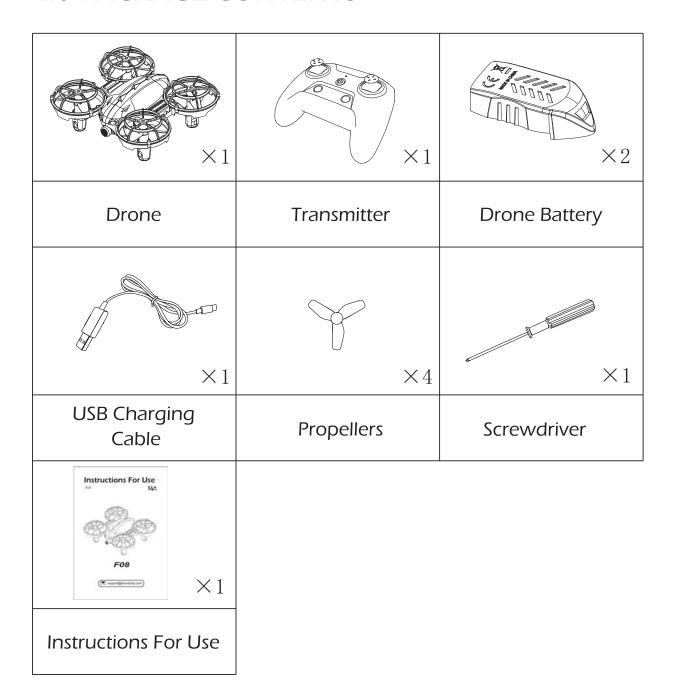


# **5.0 DRONE'S DETAILS**

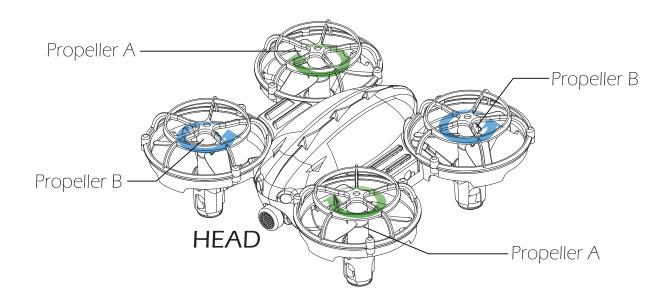


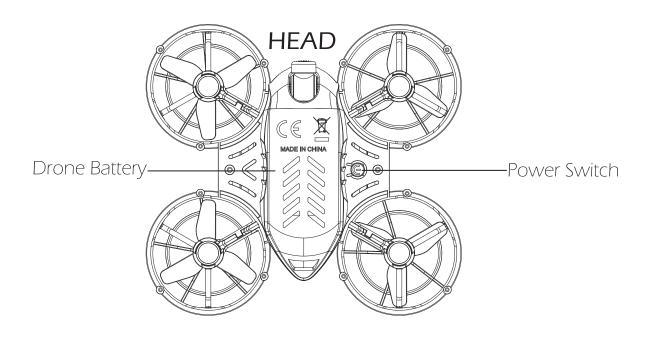



#### **6.0 TRANSMITTER DETAILS**

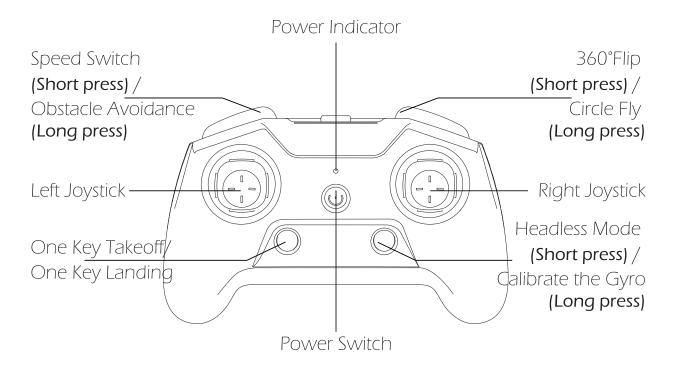

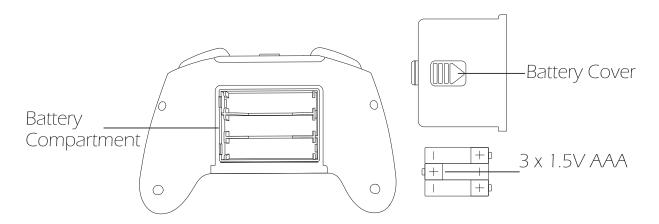


Open the battery cover on the back of the transmitter, insert the three AAA batteries into the battery compartment, and close the battery cover to complete the installation.

When installing the battery, please pay attention to the positive and negative polarity of the battery to ensure the correct installation of the battery.


## 7.0 JOYSTICK MODE

## 7.1 MODE 2 (Default Setting)

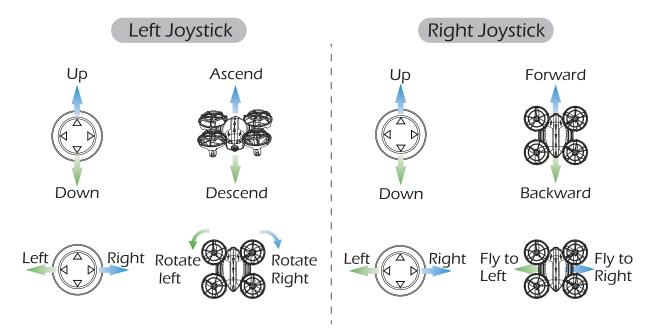


#### **7.2 MODE 1**


To enter MODE 1, turn on the transmitter while holding the "Speed Switch" button. (Please do not release the "Speed Switch" button until the transmitter is powered on.)

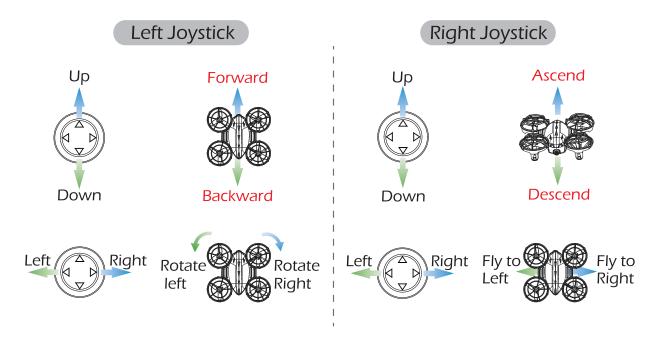

# 8.0 INSTALLATION

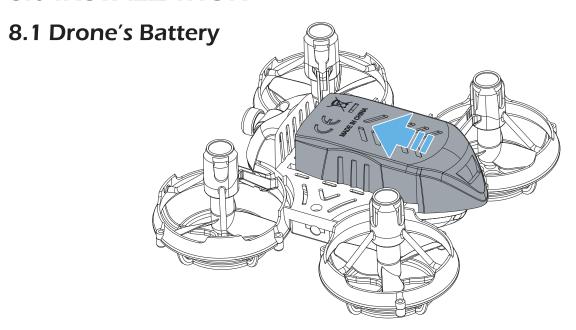


**Installation:** As shown above, install the battery into the battery compartment. When you hear a click, the battery is installed. Please make sure the battery is securely installed.

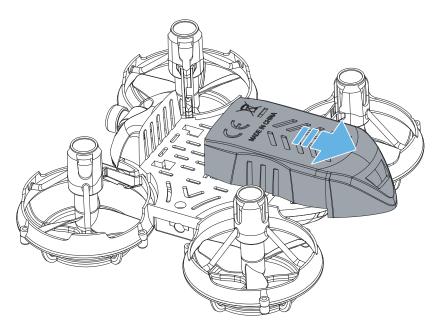

**Removal:** As shown in the figure above, hold down the two sides of the battery and remove it upwards.

#### 9.0 CHARGING

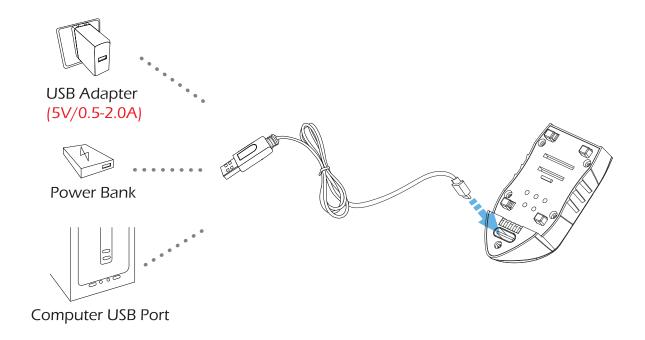

- 1) When the drone battery runs low, the indicator lights on the drone will blink continuously. The drone will land automatically after about 30 seconds.
- 2) Remove the battery and connect the USB charging cable to the battery charging interface.
- 3) Plug the USB charging cable into a USB charging port on the computer, power bank or USB adapter (5V / 0.5 to 2.0A).
- 4) The red indicator light on the battery will turn on when the battery is charging, and will turn of f when the battery is fully charged.
- 5) Charging time: about 40 minutes.

Before charging, please check the contents of the "Use of Battery" section of the "Safety Guidelines" carefully!