

# PLEASE READ BEFORE PROCEEDING

Read this manual carefully before getting started on you Remote Control Spooky Sounds. Ask someone to help you read the instruction. Keep this manual for further reference.

- Turn on and hide Spooky Sounds device.
- Press remote control button to activate sounds.
- To mount the Spooky Sounds device under a chair or table, etc. Apply double faced tape to back.
- Do not apply tape to finished surfaces that may be damaged by the adhesive.
- Take care when using sharp tools such as screwdrivers.
- Keep the Spooky Sounds parts away from small children. Don't assemble the Spooky Sounds where small children can reach it. Adult supervision required for 14 years and younger.
- The Specification and anything contained within this manual is subject to change without notice.
- When using batteries :  
Use the batteries in correct polarity (+-).  
Never short circuit, disassemble, heat, or dispose of batteries in a fire.  
When the Spooky Sounds is not in use the batteries should be removed.  
If the batteries or Spooky Sounds become wet, remove the batteries from the hold and dry the Spooky Sounds.  
Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. We recommend the use of alkaline batteries for extended life.  
Non rechargeable batteries must not be re-charged.  
Only batteries of the same equivalent type to be used.  
Remove exhausted batteries as soon as possible.  
To preserve battery life, turn unit off when not in use.

**NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT, SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.**