



www.tpro.com

WIRELESS MICROPHONE



1. Before powering on the wireless microphone, be sure to set the Wireless Microphone Volume Knob to zero. Once the wireless microphone is powered on, slowly turn up the wireless microphone volume knob.
2. If you notice static or distortion in the wireless microphone replace the battery with a new battery.
3. When not in use, turn off the power of the wireless microphone.
4. If the power indicator does not illuminate properly, check the batteries power and make sure it is installed correctly.

IMPORTANT REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that is received, including any interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
